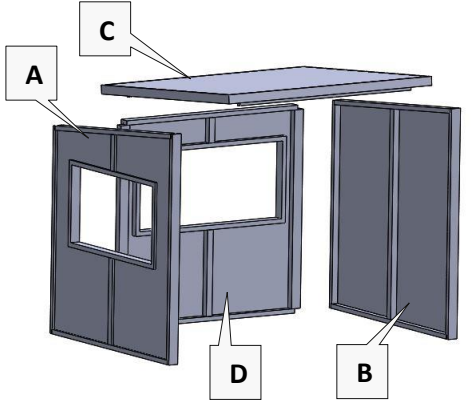
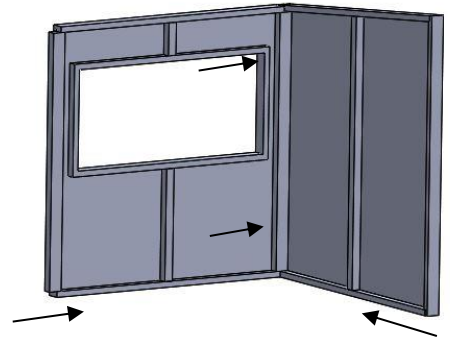
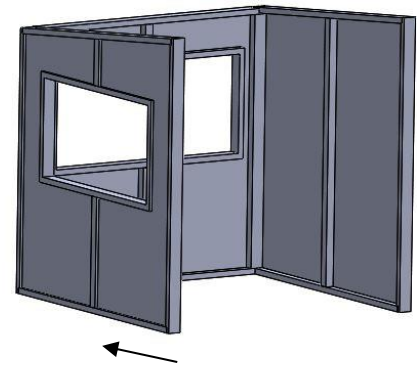
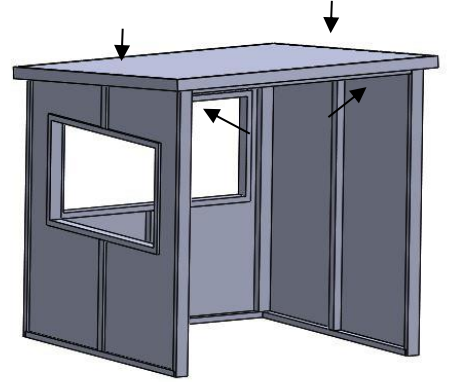


25327 – Takoma Open Shed/Cafe

Assembly Instructions

Components:	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty
	A.	Side Wall (window)	1	B.	Side Wall (no window)	1	C.	Roof	1	D.	Rear Wall	1
	E.	Bag of Screws	1									

			
1. Check that you have all of your components and grab a screwdriver.	2. Begin by sighting one side wall and the rear wall as shown on the floor. 3. Screw in place through the holes in the rail and sides of each wall.	4. Attach the next side wall using the same technique as steps 2 and 3.	5. Sight the roof onto the three walls and screw in place outwards, through the inside rails of the roof. 6. Enjoy.

Email us your  Ideas
ideas@cosydirect.com

We would love to hear your feedback on our assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com