

 


Changing & Storage Unit

with Ladder /

Pusle & Opbevaringsbord med stige

Article /Artikel no.: 1508

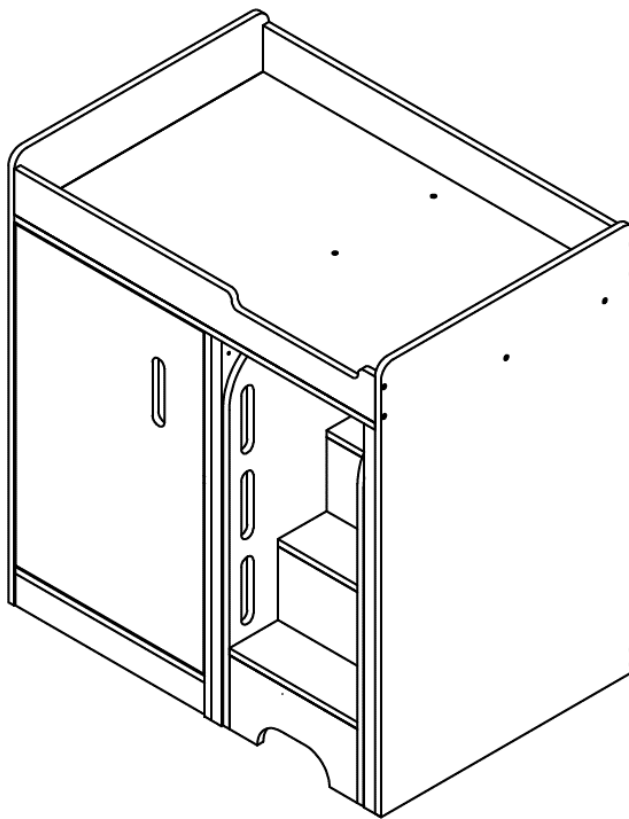

IMPORTANT :

KEEP FOR FUTURE REFERENCE & READ CAREFULLY

VIGTIGT :

GEM TIL FREMTIDIGT BRUG & LÆS GRUNDIGT

We strongly suggest you spent a short time reading through this leaflet and then follow the simple step by step guide to assembly.

WARNING : Do not leave your child unattended.

The correct use and maintenance of your changer will ensure it gives long and trouble free use. Remember the safety of the child is your responsibility.

MATERIAL

Your changer is made of birch veneer. Birch is a natural material therefore no two pieces are ever identical in pattern or colour. As birch furniture gets older its colour may change due to being exposed to light and air, so any new pieces may look a shade different to those you already have. Don't be concerned about this, as the colour difference will diminish over a small period of time.

Every piece has its unique appearance.

To keep the natural aspect, the surfaces were coated with a protective lacquer. The beauty of your furniture can be maintained, cleaning it with a soft cloth. Occasionally a damp cloth, followed by a soft dry one, may be used.

All furniture can be damaged by knocks and scrapes – if you dent the surface or break the seal of the lacquer, apply some solid wax to exclude the atmospheric moisture.

ASSEMBLY

Before starting the assembly, please read through these instructions. Then carefully unpack your changer and check that you have a complete set of parts against the list.

We recommend that you assemble your changer on a clean, flat surface, making sure there are no sharp objects present that may mark or damage the panels.

The door can be adjusted both forward and backwards, side to side and up and down by using the mounting screw, the adjusting screw or by moving the hinge plate. Re-tighten when the door is in the right position

CAUTION

There are many small components used in the construction of this changer. These items should be kept out of reach of young children whilst assembling the unit.

INSTRUCTIONS FOR SAFE USE

- The changing surface is suitable for children up to 15kg in weight.
- A changing pad must be used with this changer. Available separately, of up to 30mm thickness
- To ensure safe, trouble free use, please take a little time to read the important safety notes below and following instructions.

SAFETY NOTES:

WARNING: DO NOT leave the child unattended.



- Keep children clear during assembly as pack contains small parts, which may present a choking hazard.
 - All assembly fixings should always be correctly tightened and checked regularly.
- Be aware of the risk of open fires and other such sources of strong heat, such as electric bar fires, gas fires, etc in the vicinity of the changer
 - Do not use the changer if any part is broken, torn or missing.
- Replacement parts should only be obtained from **Bino A/S**. Others may render the changer unsafe.
 - Once assembled, it is inadvisable to take the changer apart.
- Make sure the ladder is locked when pulled out for use. This will ensure it stays in positions when the child goes up and down.

Designed and manufactured to EN 12221: 2008

Always keep medication, strings, elastic, small toys or other small items such as money, out of reach of small children

This unit is imported by :

BINO A/S. Mosedraget 11, 8920 Randers NV, Denmark

Vi anbefaler at du har brug for en kort tid på at gennemlæse denne vejledning og derefter følger trin for trin guiden under samlingen.

ADVARSEL: Efterlad ikke dit barn uden opsyn.

Den korrekte brug og vedligeholdelse af dit puslebord vil sikre et langt og problemfrit brug.

Husk sikkerheden for barnet er dit ansvar.

MATERIALE

Dit puslebord er lavet af birkefiner. Birk er et naturmateriale og derfor er to stykker aldrig helt ens i mønster eller farve.

Når birk møbler bliver ældre kan farven ændre sig på grund af lys og luft. Eventuelle nye dele kan se en smule anderledes ud end dem du allerede har. Denne farveforskel vil aftage over tid.

For at holde den naturlige farve er overfladerne dækket med en beskyttende lak. Udseendet af jeres møbel kan opretholdes ved rengøring med en blød klud. Lejlighedsvis en fugtig klud efterfulgt af en blød og tør klud.

Alle møbler kan blive beskadiget af slag og skrammer - Hvis du laver mærker i overfladen, eller bryder forseglingen af lak, kan du anvende noget voks til igen at forsegle overfladen.

SAMLING

Før du starter er det vigtigt at du læser disse anvisninger. Derefter omhyggeligt pakker dit puslebord ud og kontrollerer, at du har et komplet sæt af beslag og dele i forhold til listen.

Vi anbefaler at du samler puslebordet på en ren og flad overflade, og sørger for der ikke er skarpe genstande som kan mærke eller beskadige delene.

Døren kan justeres både fremad og bagud, til side til side og op og ned ved hjælp af monteringsskruen, justerskruen eller ved at flytte hængslets plade. Spænd, når døren er i den rigtige position

FORSIGTIG

Der er mange små komponenter, der anvendes i samling af dette puslebord. Disse elementer bør holdes utilgængeligt for små børn, mens puslebordet samles.

INSTRUKTIONER FOR SIKKER BRUG

- Puslebordet er velegnet til børn op til 15 kg.
- Der skal anvendes en puslemadrass til dette puslebord. Købes separat, på op til 30mm i tykkelse
- For at sikre et sikkert og problemfrit brug, skal du tage lidt tid til at læse de vigtige sikkerhedsanvisninger nedenfor og følge instruktionerne.

SIKKERHED :

ADVARSEL: Lad IKKE barnet uden opsyn.



- Hold børn væk under samlingen da pakken indeholder små dele, som kan udgøre en kvælningsfare.
- Alle beslag skal altid strammes og kontrolleres regelmæssigt.
- Vær opmærksom på risikoen for åben ild og andre kilder til stærk varme, såsom elektrisk radiator, gasvarmer, etc., i nærheden af puslebordet
- Brug ikke puslebordet hvis en del er brækket, flækket eller mangler.
- Reservedele bør kun rekvireres fra BINO A/S - Andre kan gøre puslebordet usikkert.
- Når puslebordet er samlet frarådes det at skille det ad igen.
 - Sørg for at stigen er låst når den er trækket ud til brug. Dette vil sikre at stigen bliver i den korrekte position når barnets går op og ned.


Designet og fremstillet iht EN 12221: 2008

Hold altid medicin, snore, elastiker, småt legetøj eller andre småting, såsom penge, utilgængeligt for små børn


Denne enhed er importeret af:

BINO A / S. Mosedraget 11, 8920 Randers NV, Danmark



PARTS LIST:

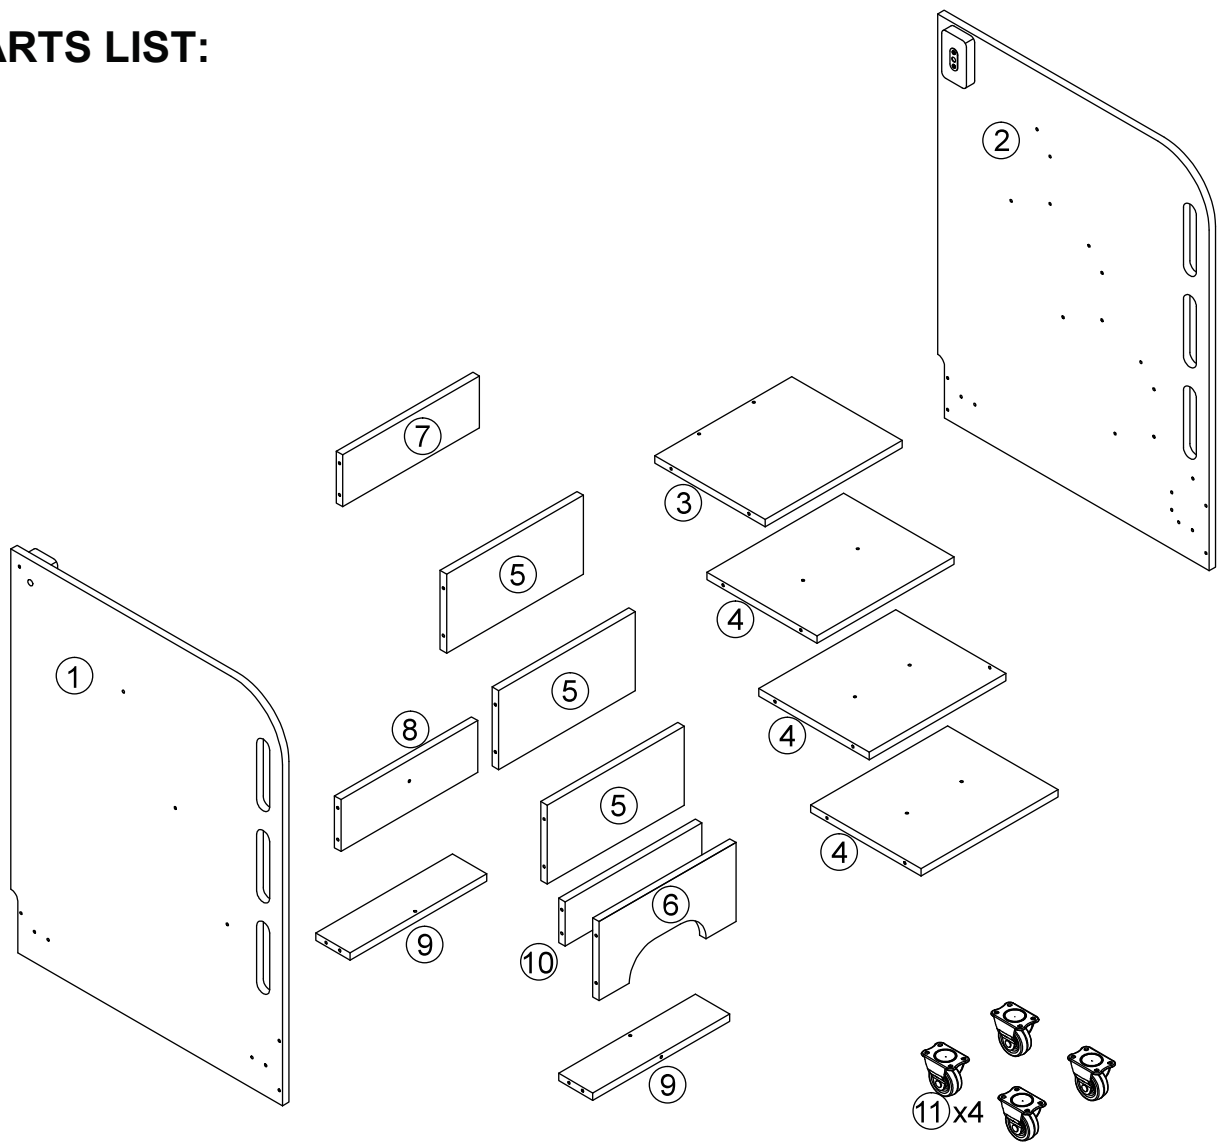




HARDWARE LIST:

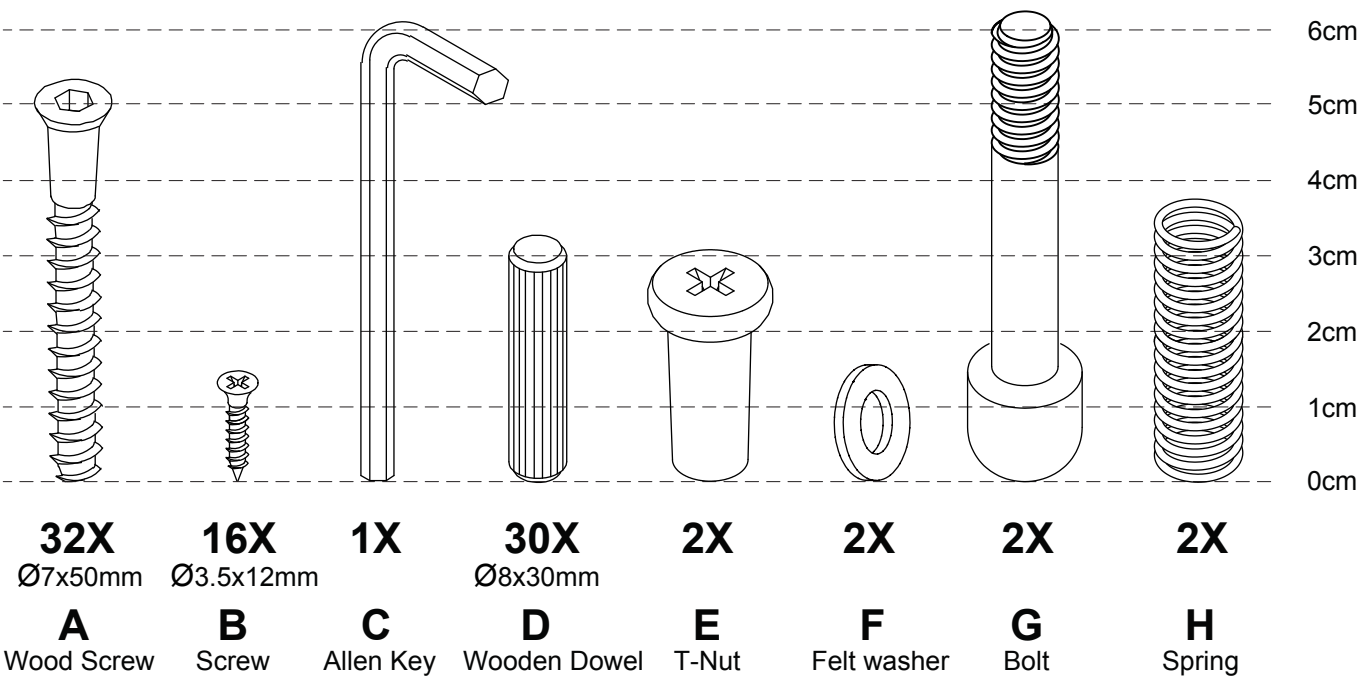 

 
 
1.

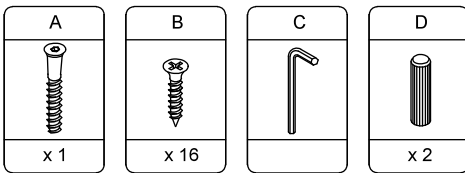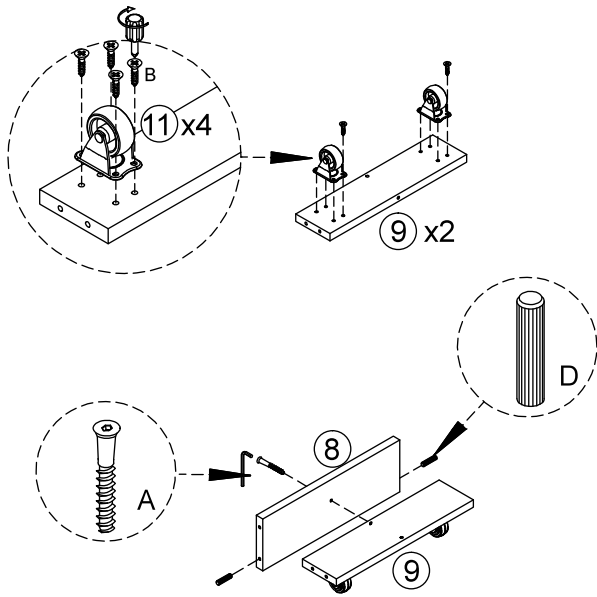

  
 
2.

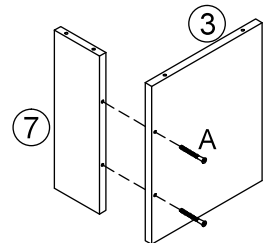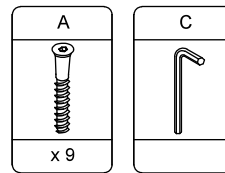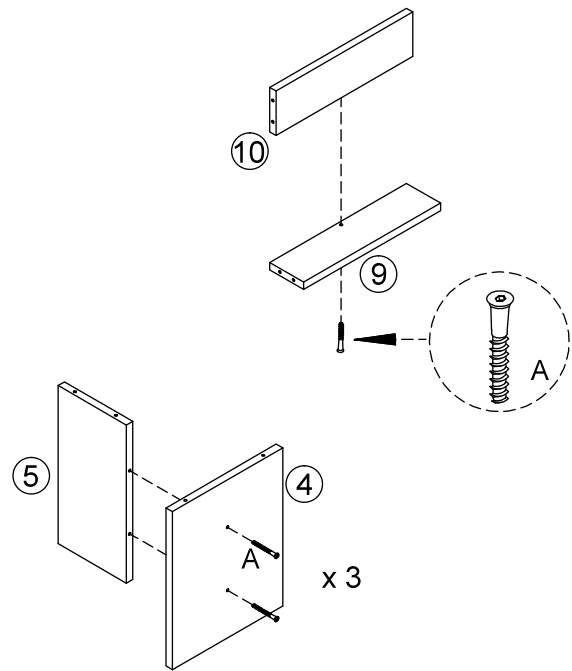

 
 
3.

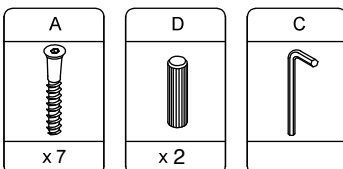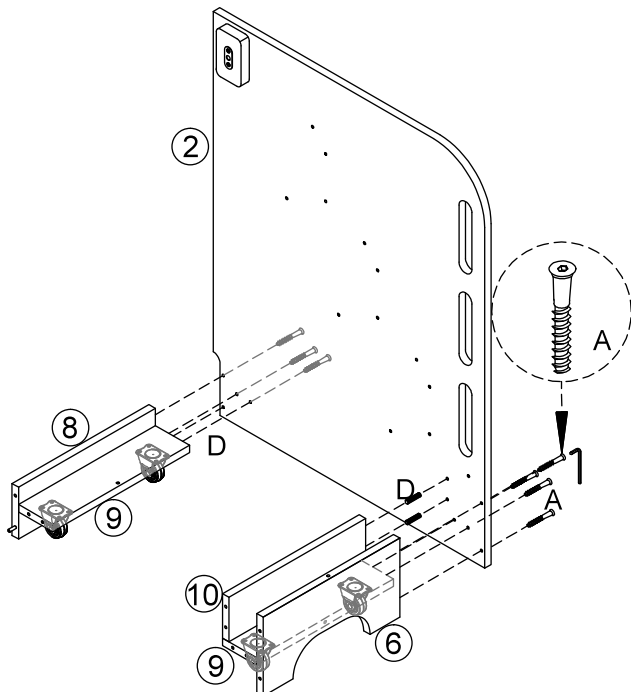

 
 
4.

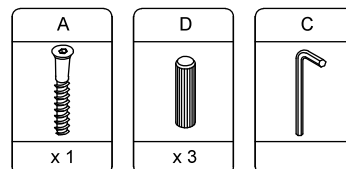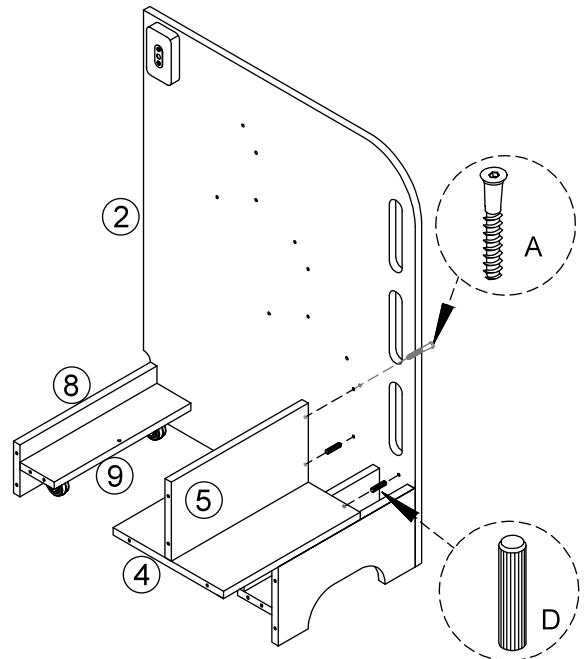

 
 
5.

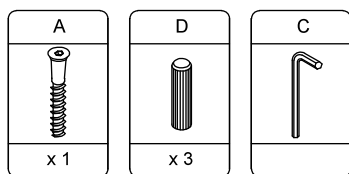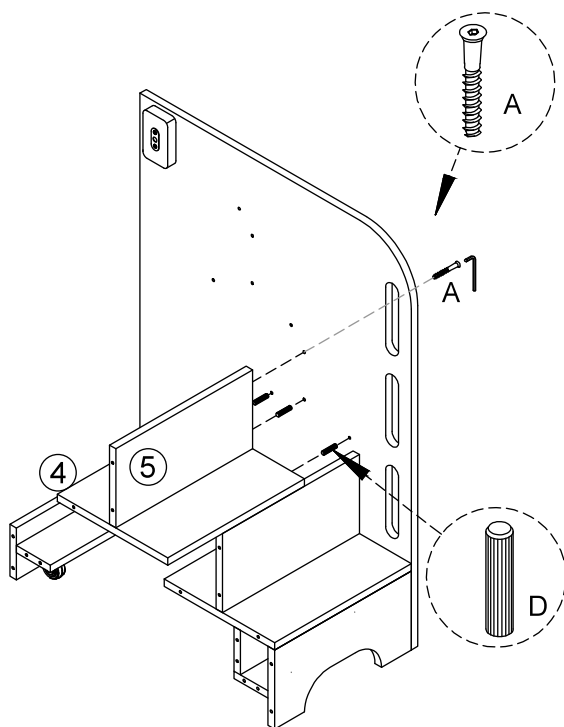

 
 
6.

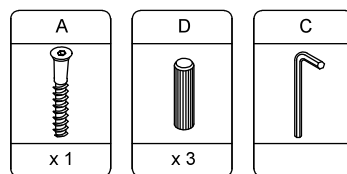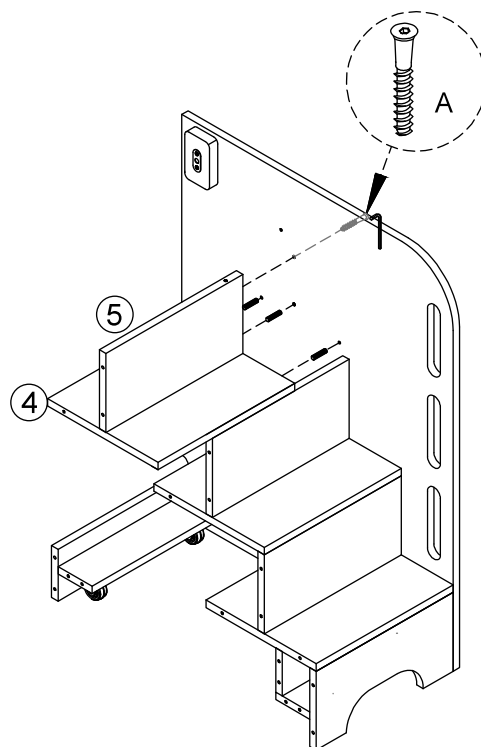

 
 
7.

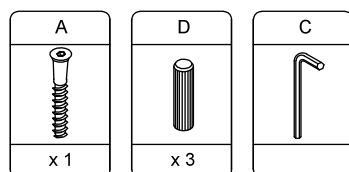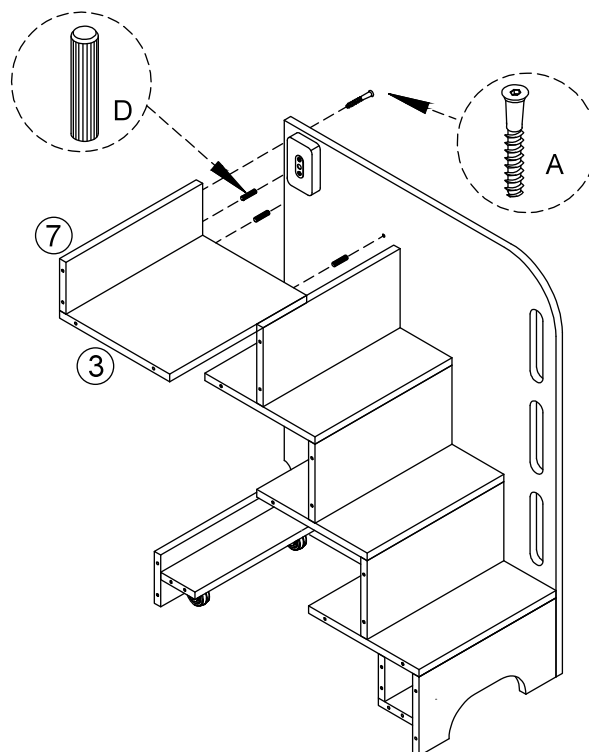

  
8.

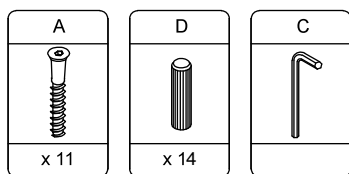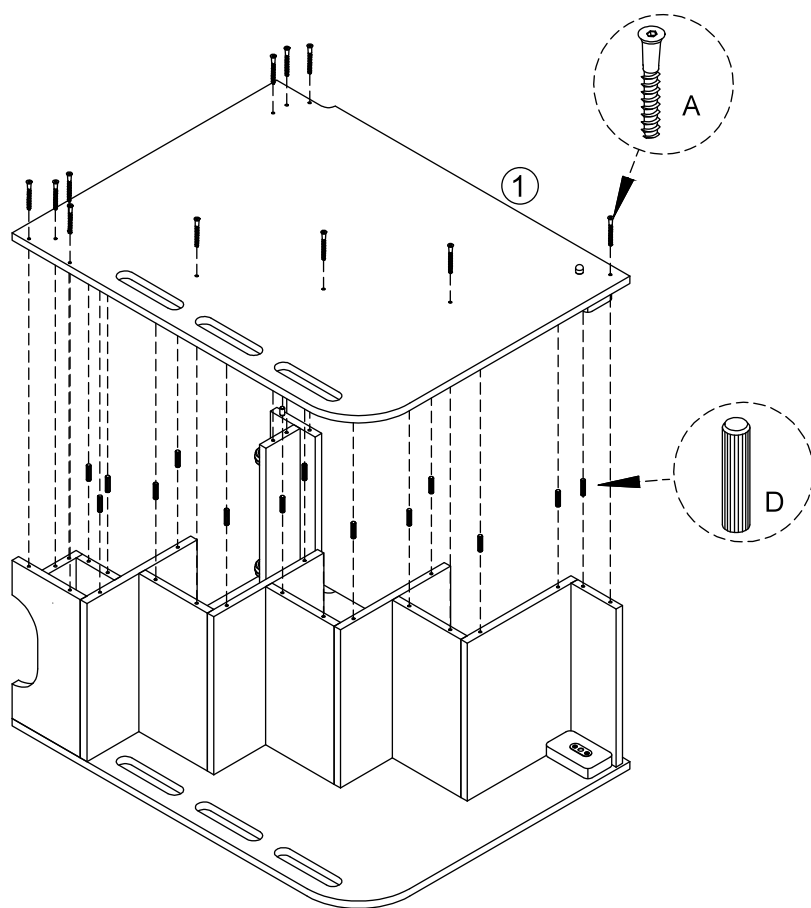

  
9.

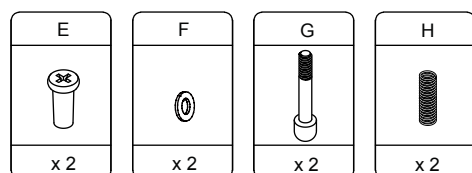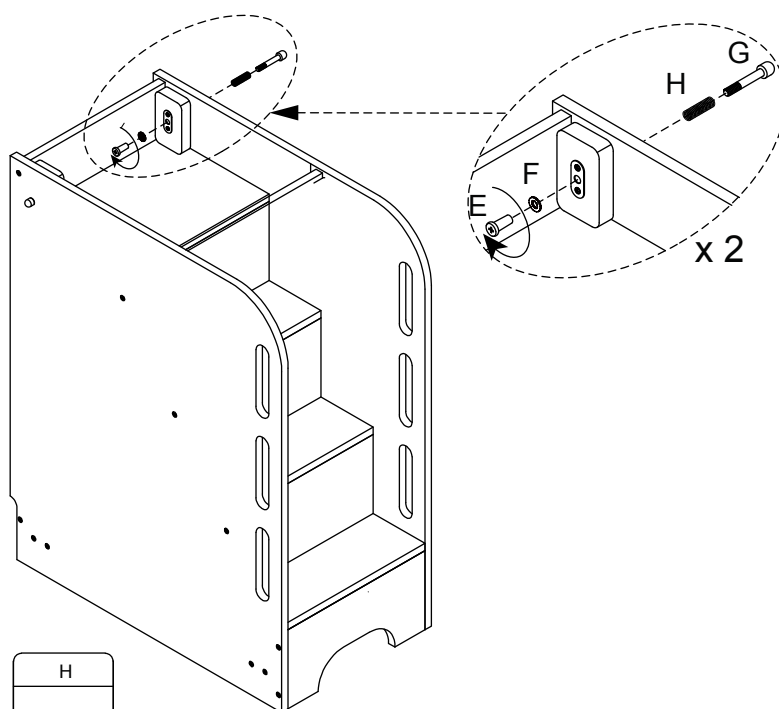

PARTS LIST:

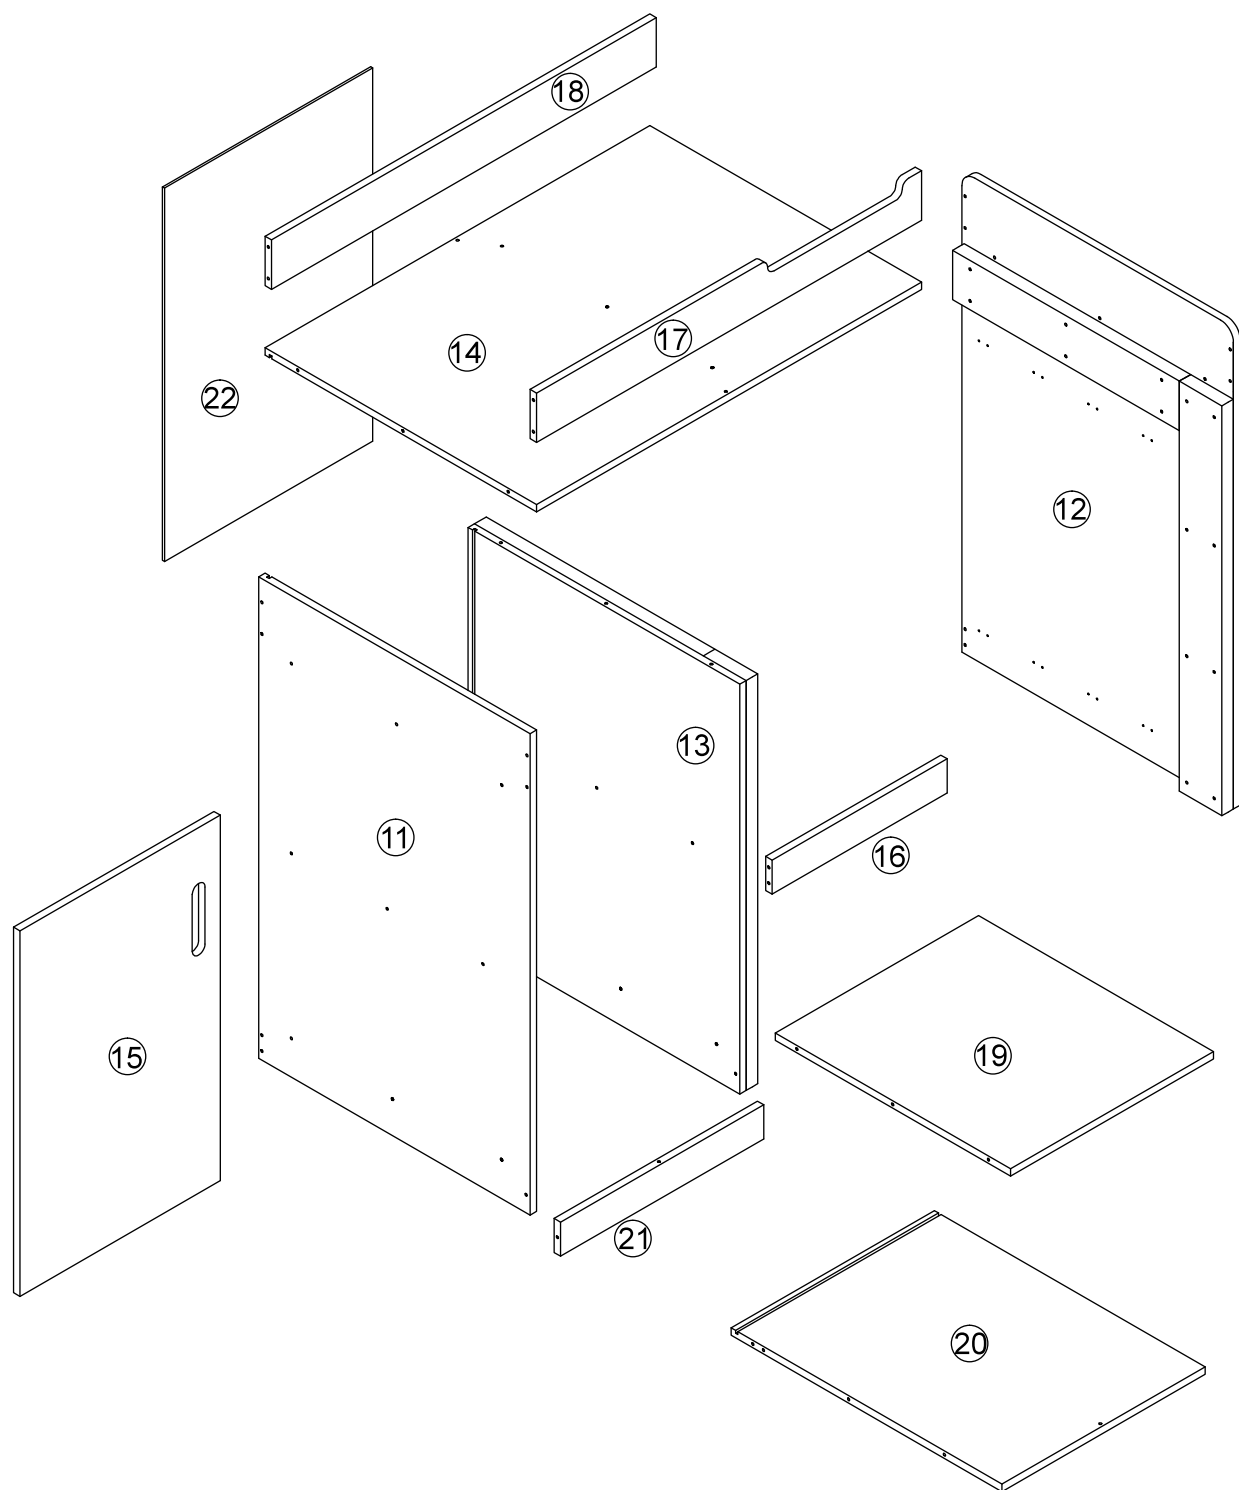 

HARDWARE LIST:

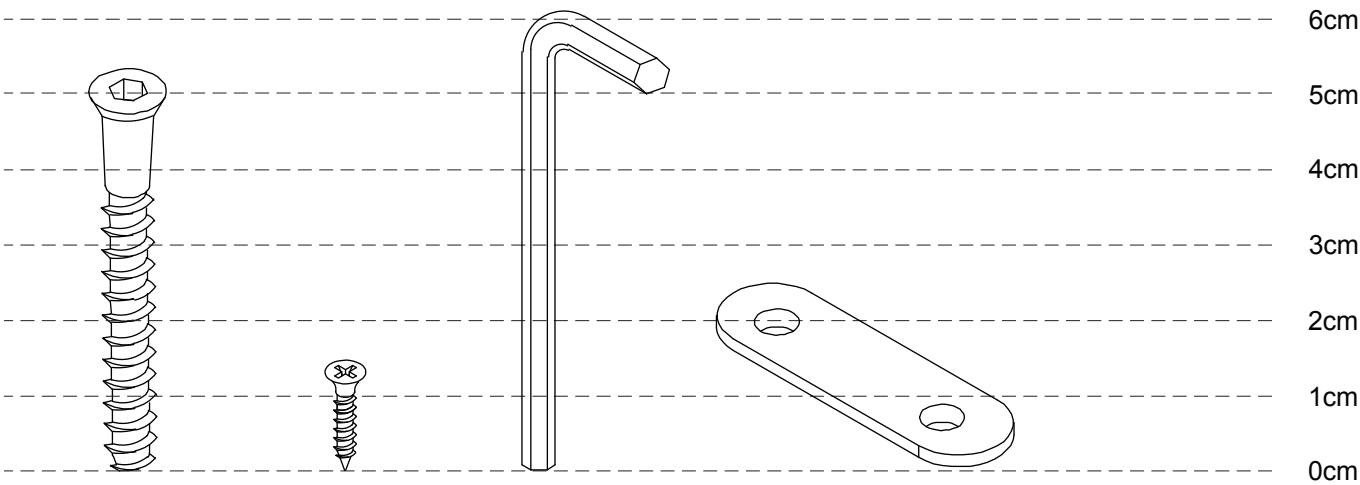 


38X
Ø7x50mm
A
Wood Screw


48X
Ø3.5x12mm
B
Screw

1X
C
Allen Key

 
1X
H
Metal Plate

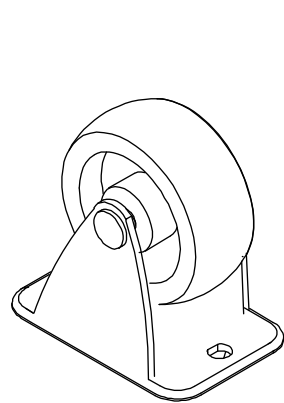

16X
F
Wheel



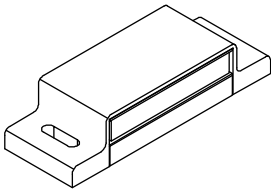 


1X
G
Magnet Stopper



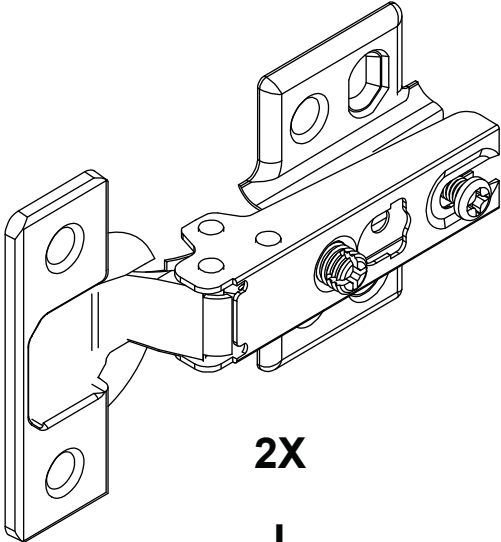 


2X
I
Hinge

 
 
 
1.

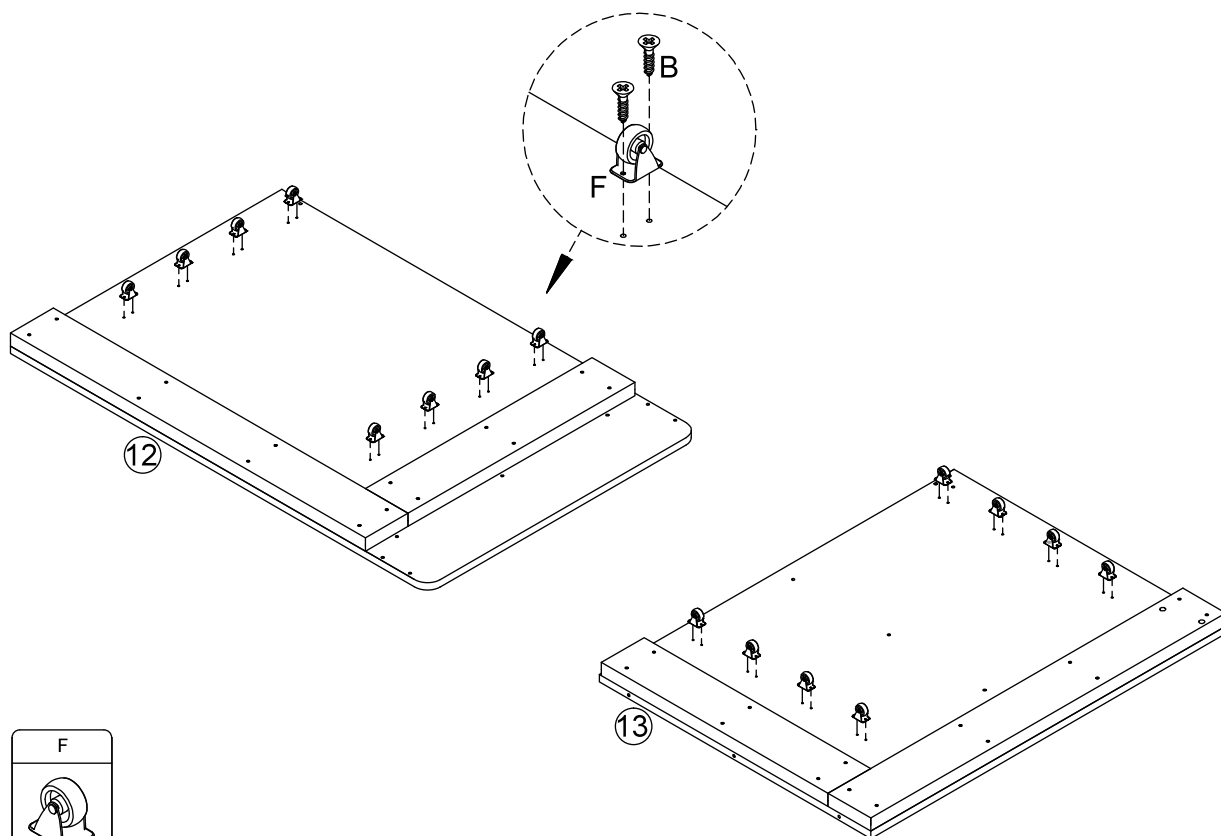

  
 
2.

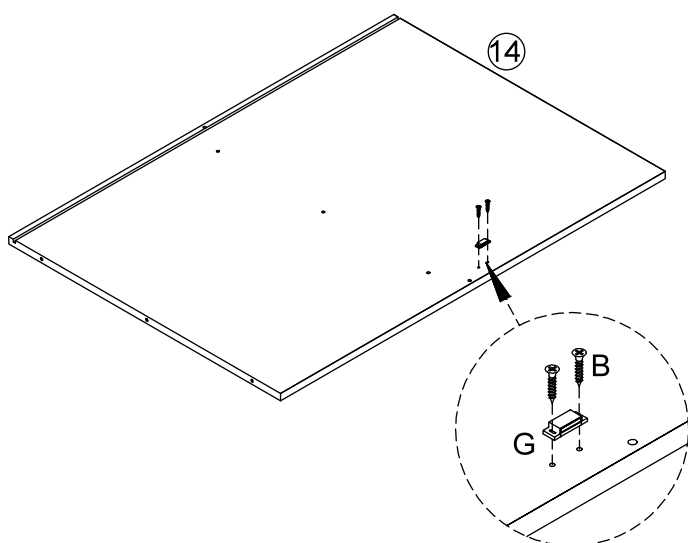

  
 
3.

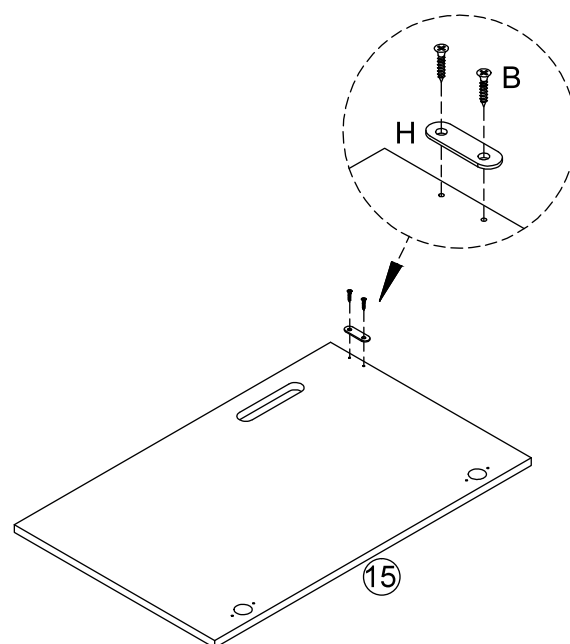

 
 
4.

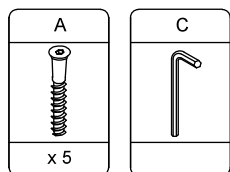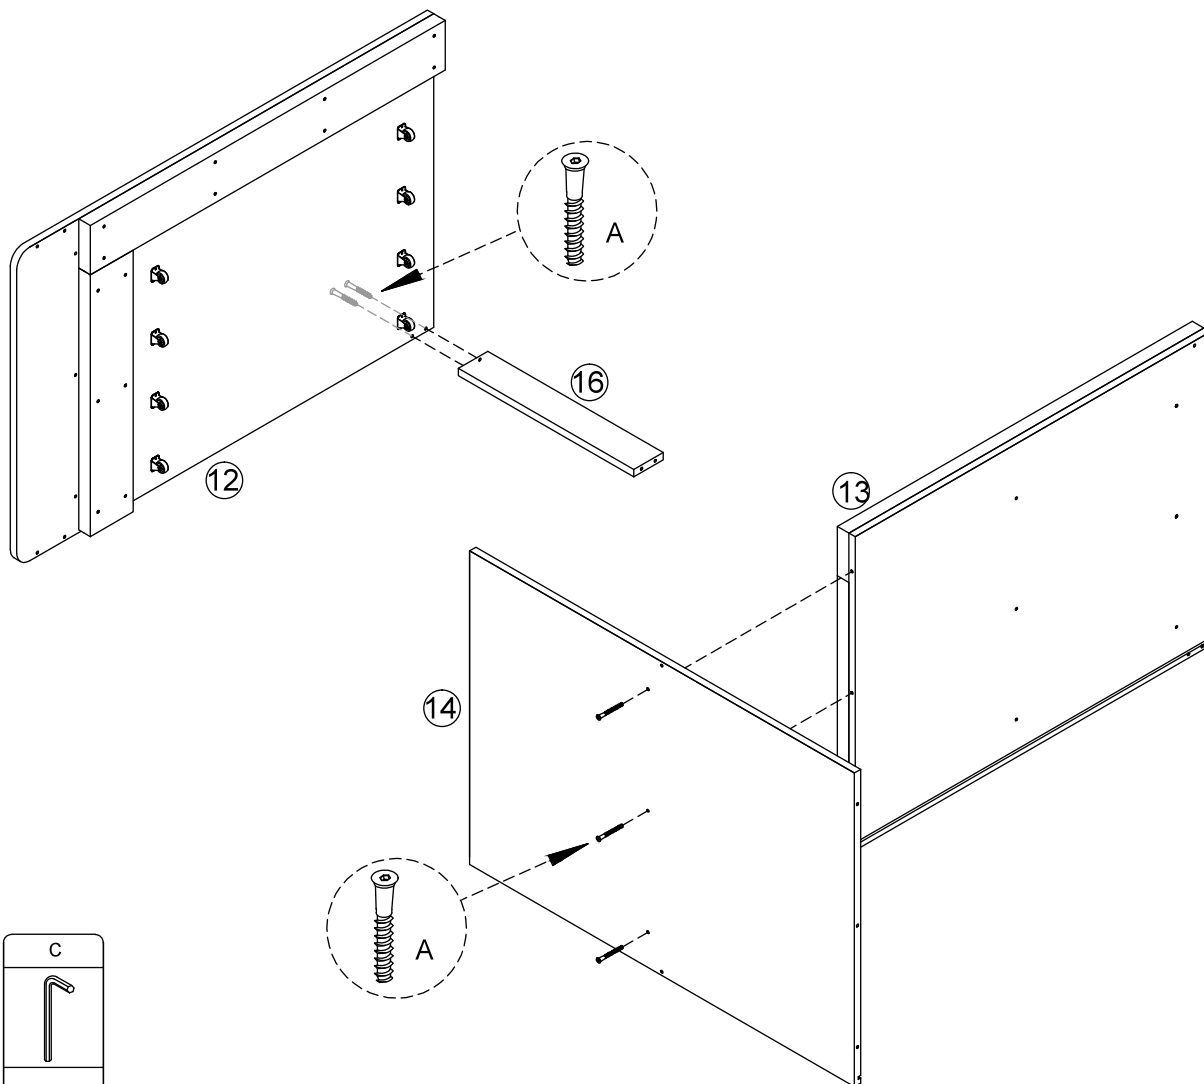

 
 
5.

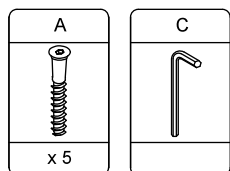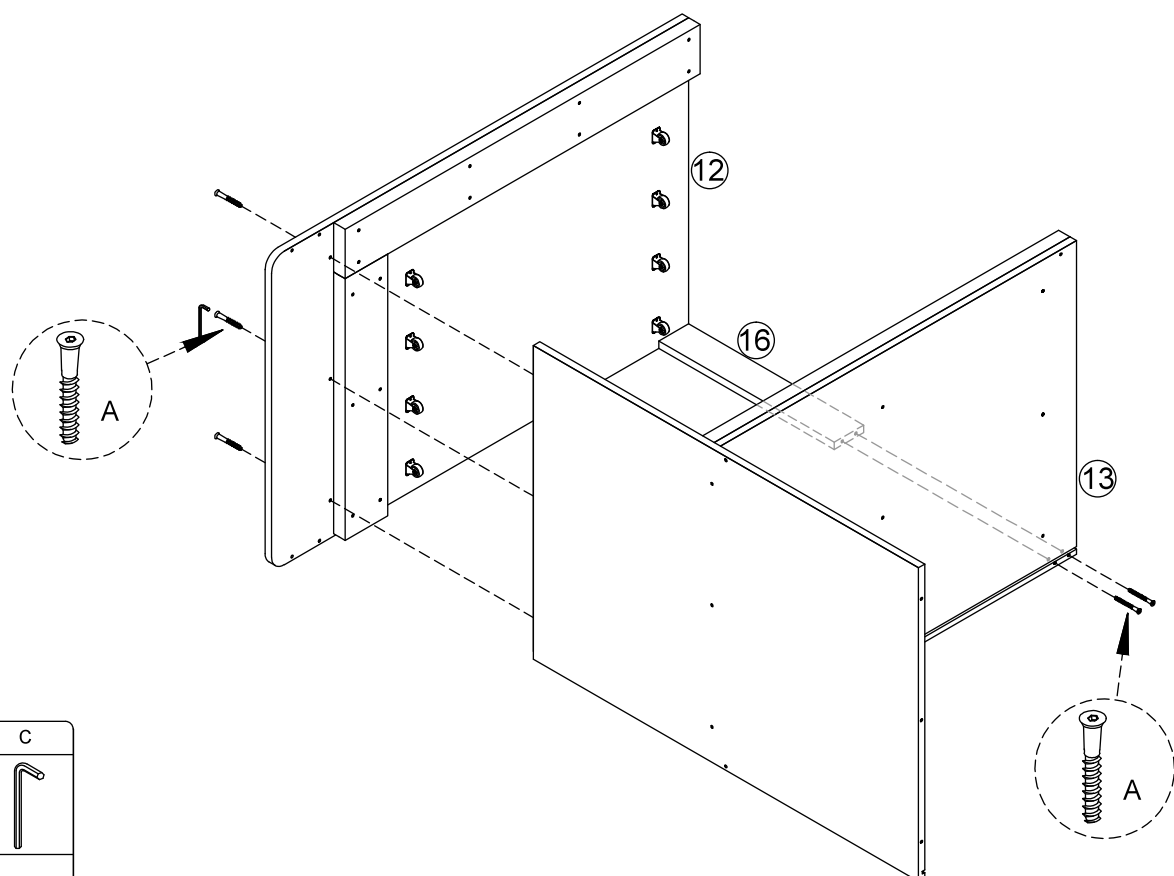


 
 
6.

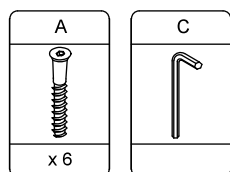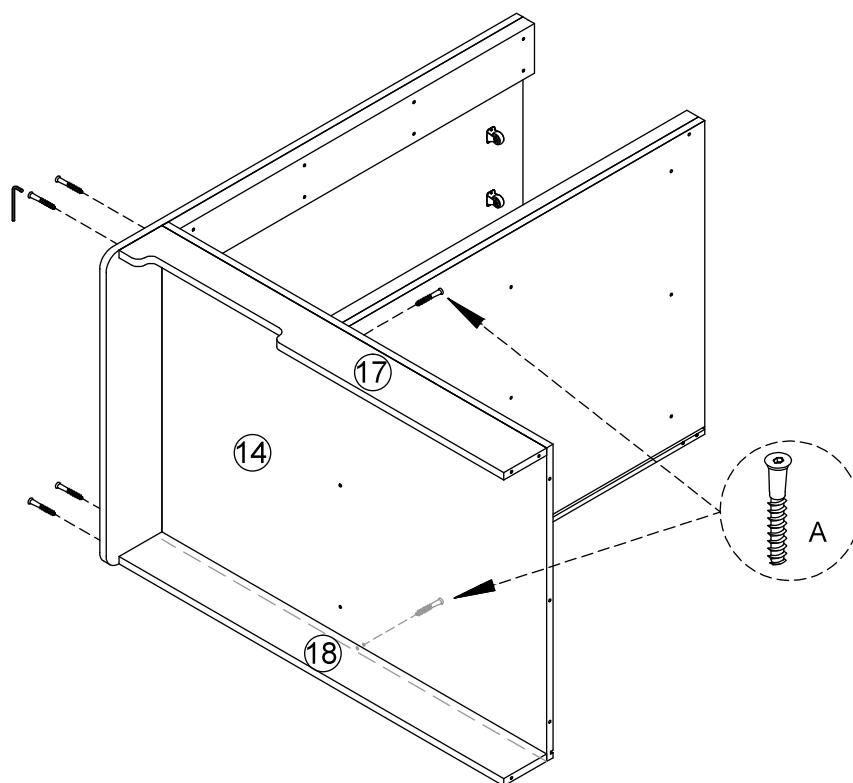


 
 
7.

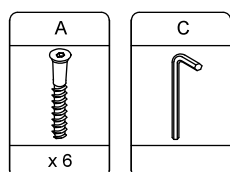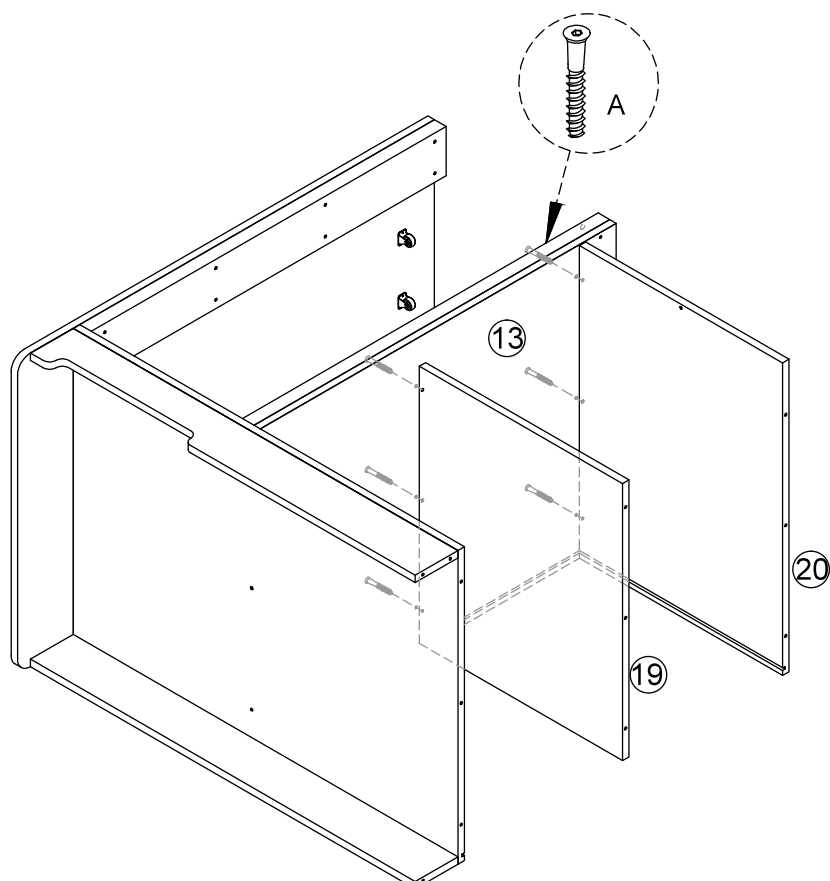

  
 
8.

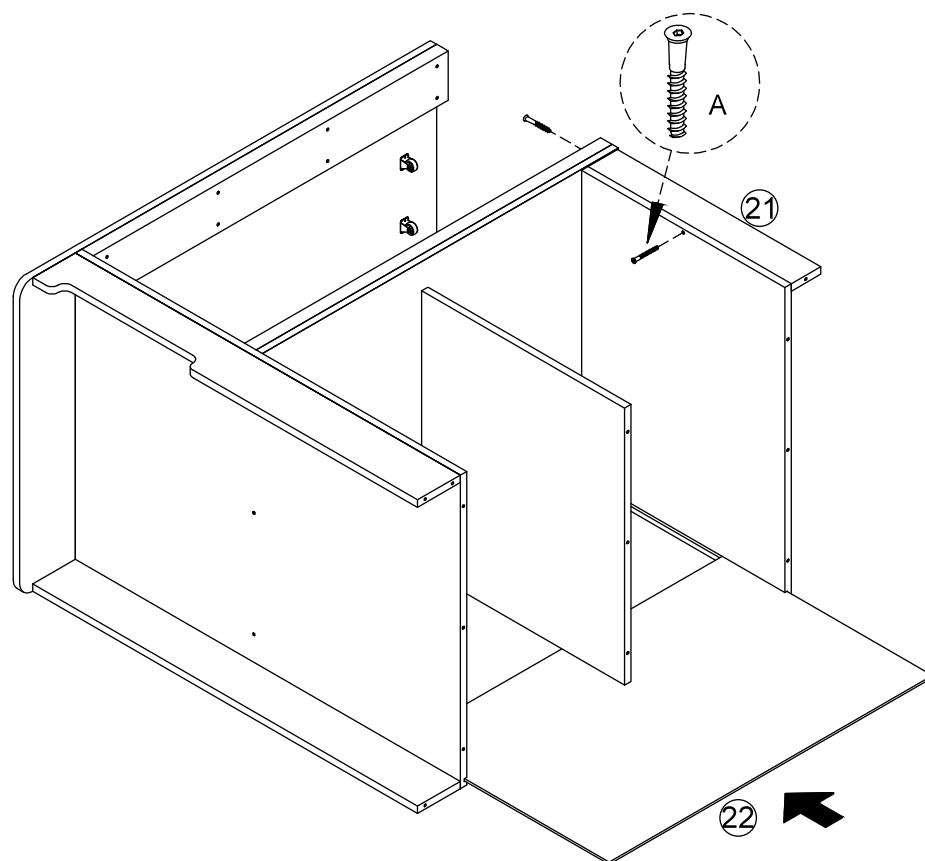

 
 
 
9.

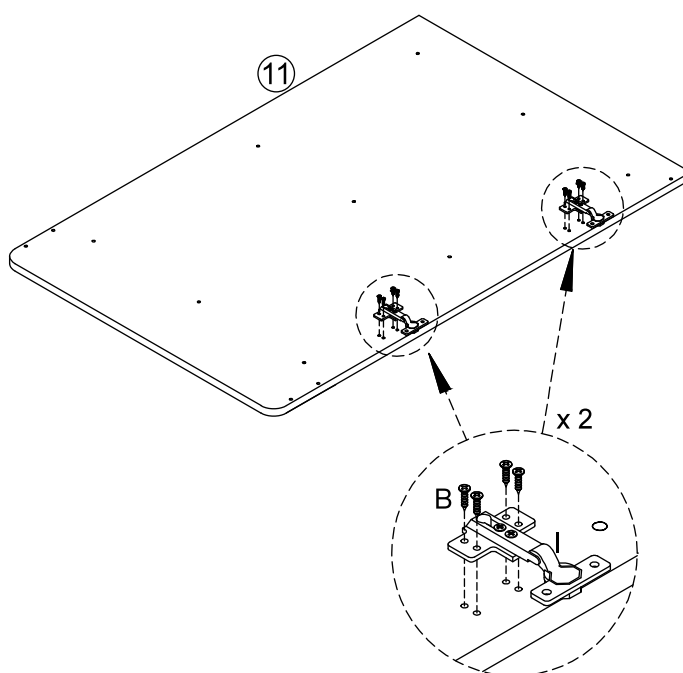

  10.

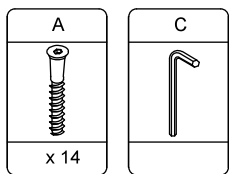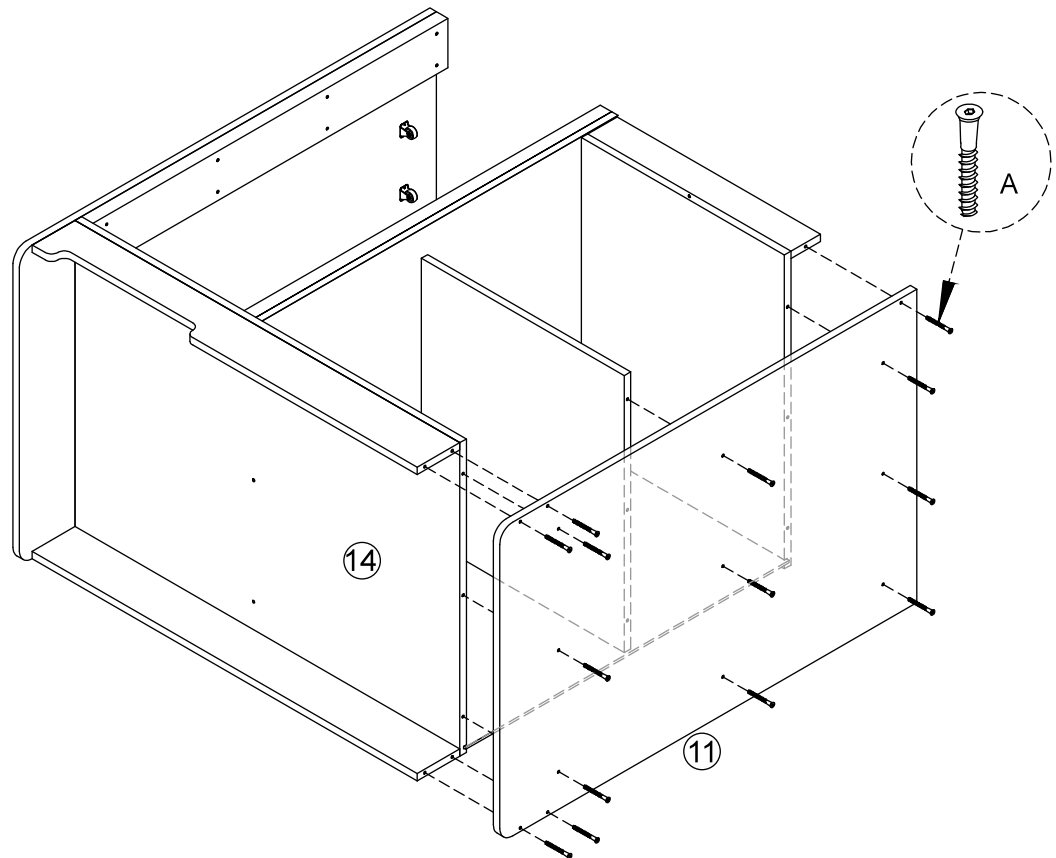

   11.

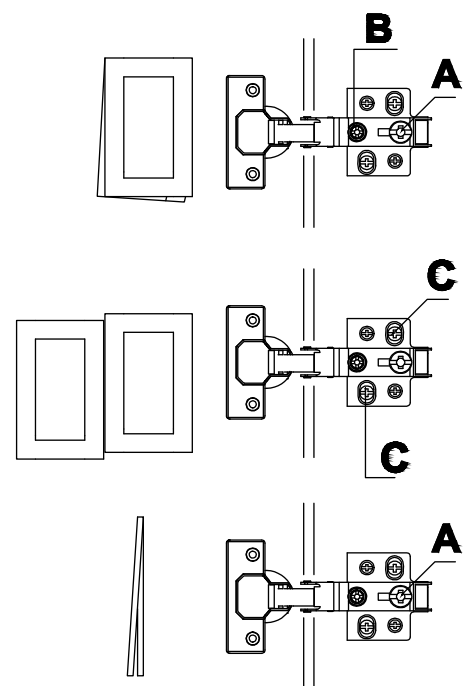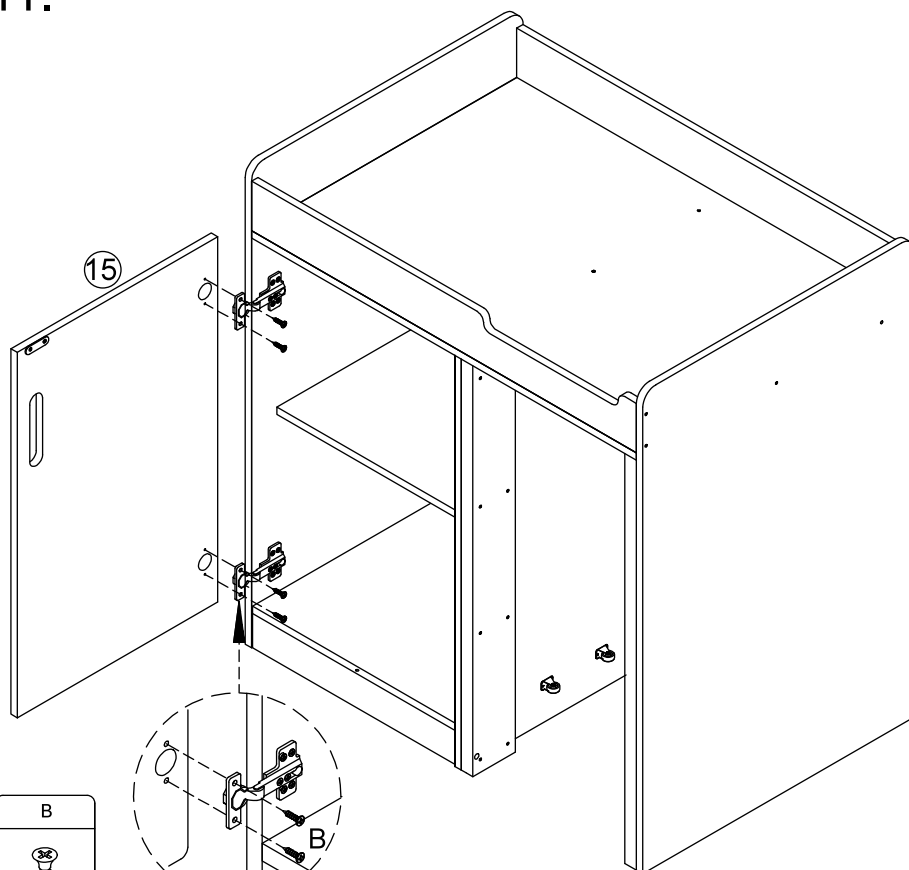

12.

