

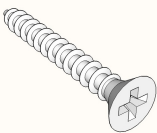
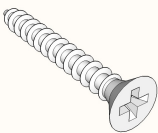
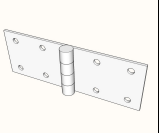


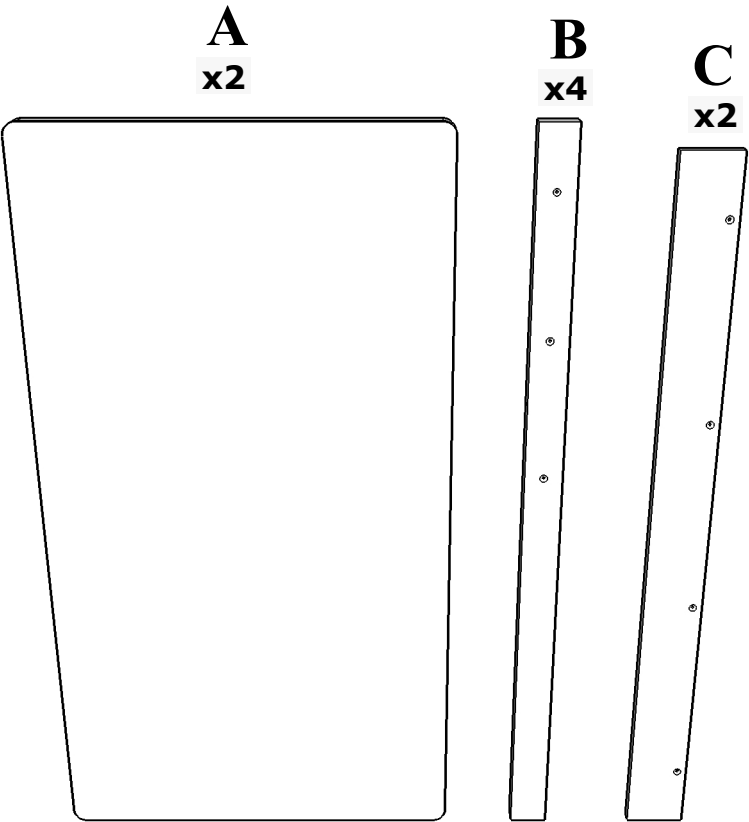


**PARTS AND
FITTINGS LIST**


*spare pieces possible

x16	x20	x4	x2	x2
				
Wood screw 4,0x20	Wood screw 4,0x50	Screw eye	Chain	Hinge

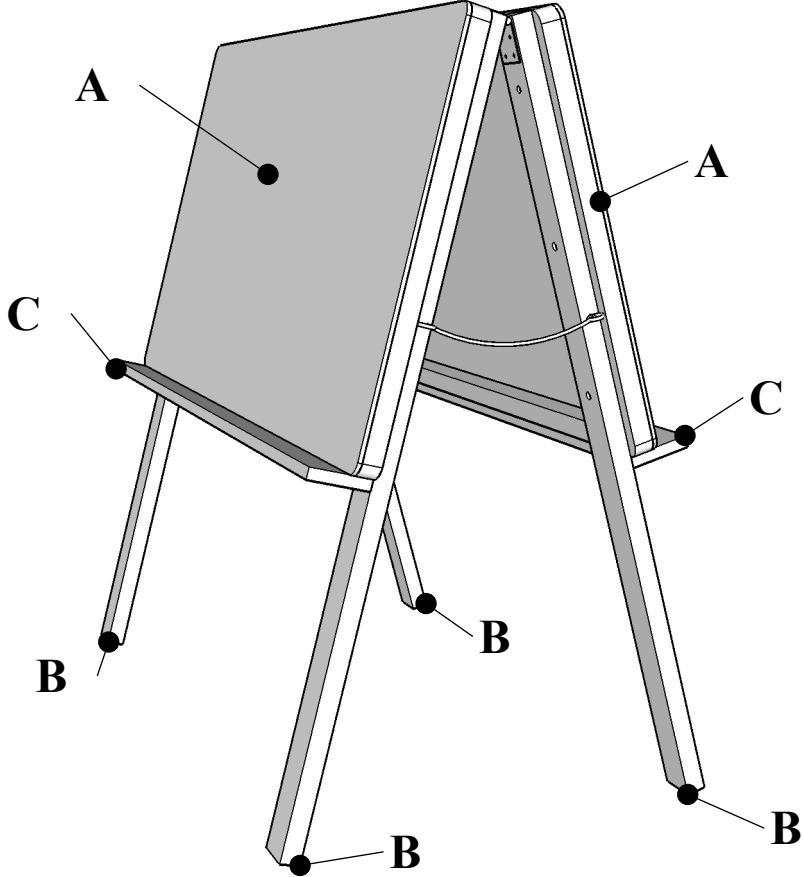


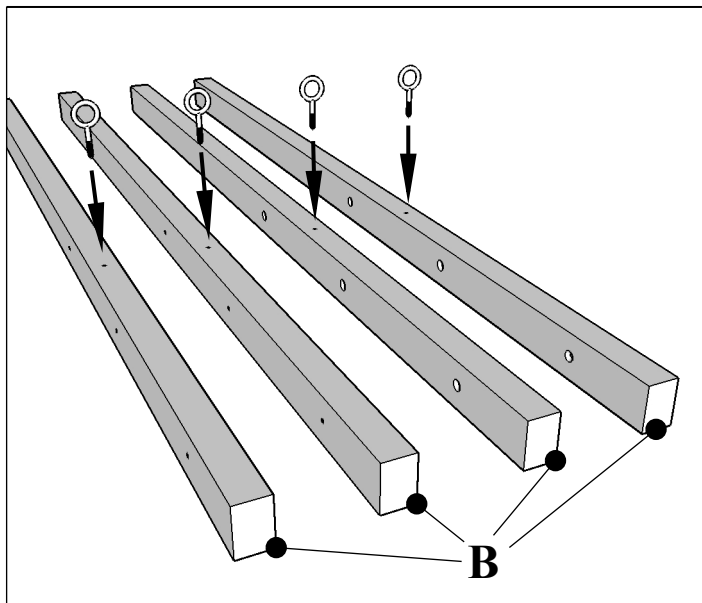


1. Screw in screw eyes in predrilled holes

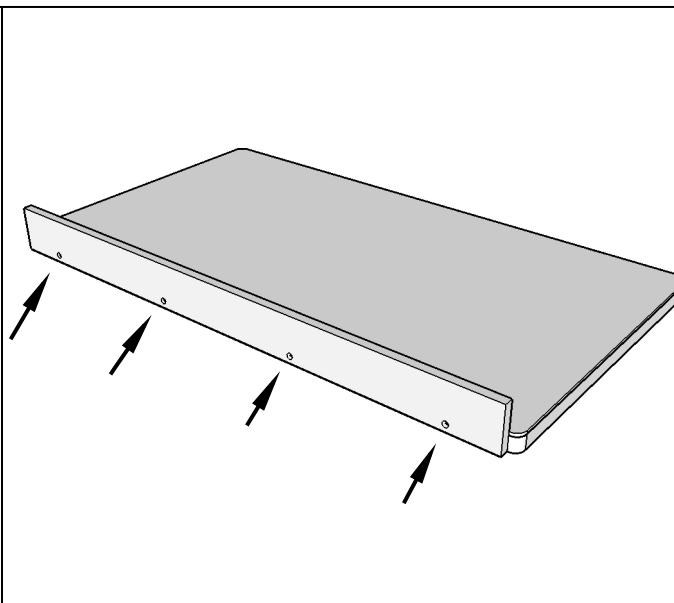


2. Use 4,0x50 wood screws

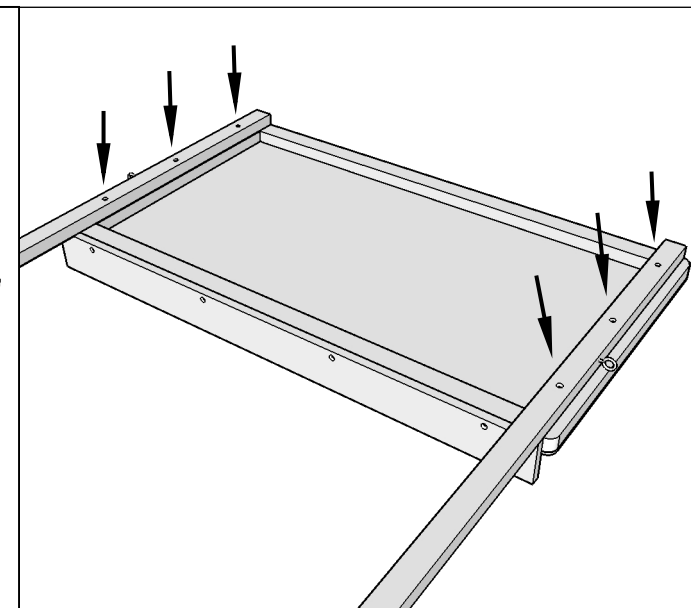


3. Use 4,0x50 wood screws

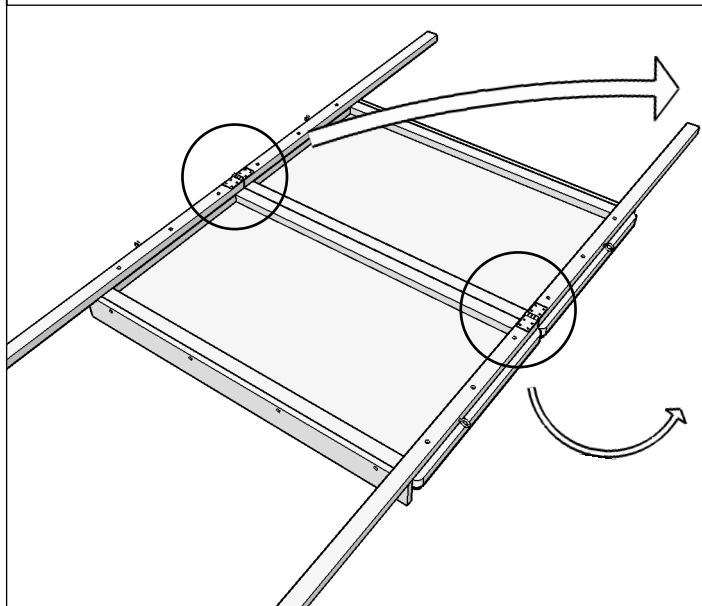

4. Repeat 1-3 steps. Fix hinges using 4,0x20 wood screws

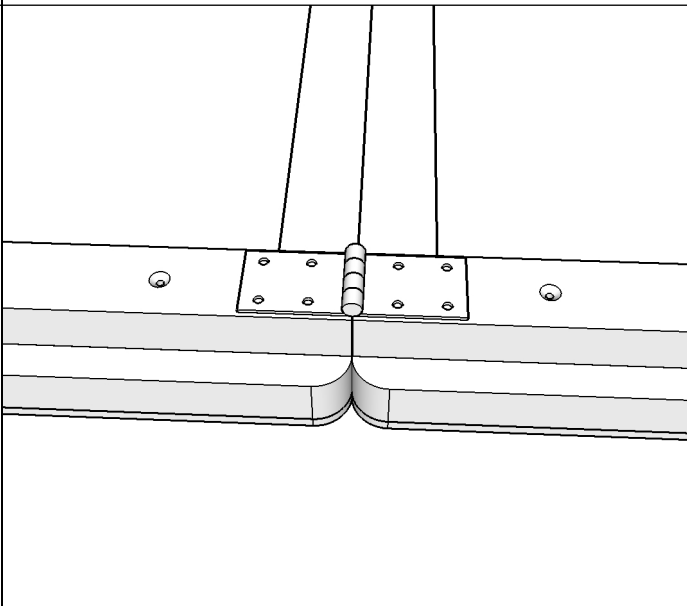

5. Fix hinges as shown

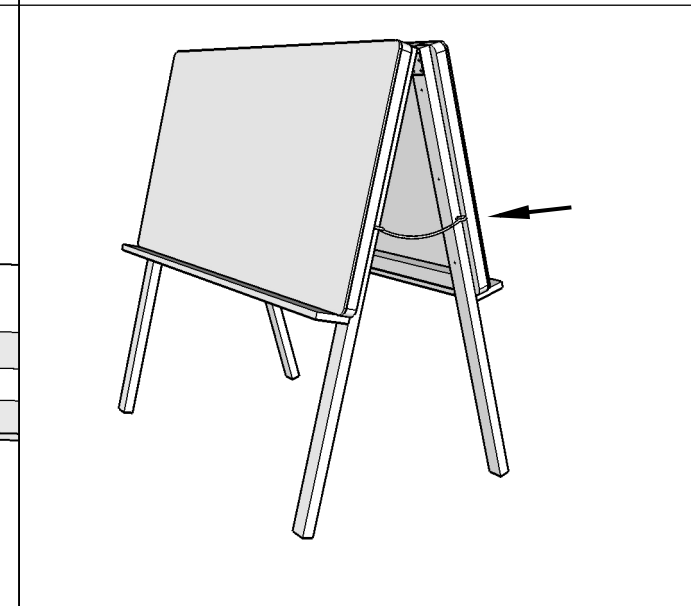

6. Support easel using chain on screw eyes