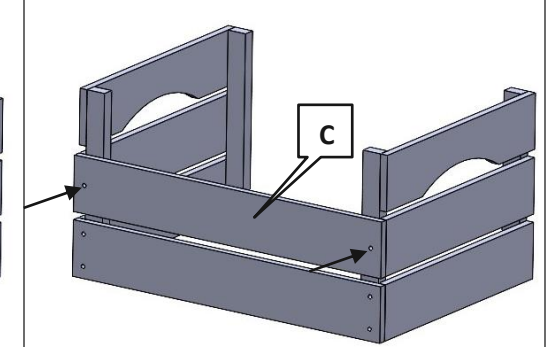 
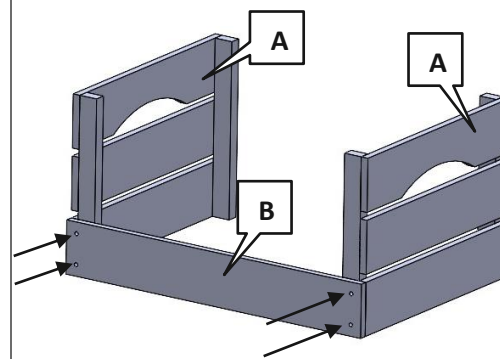 
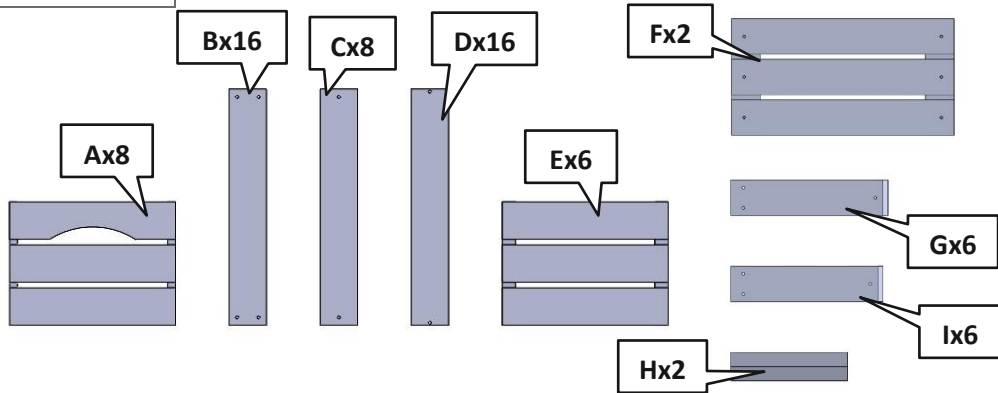 


52845 – Block of Flats Dolls House (6Pk)

Assembly Instructions

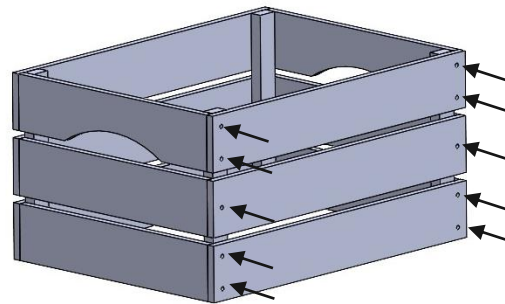 
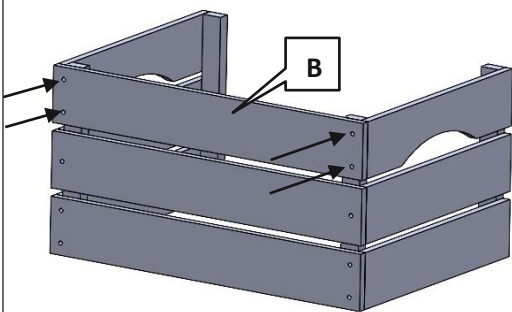 
Components:													
Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Tools Required	
A.	End Panel	8	B.	Long Plank 4 holes	16	C.	Long Plank 2 holes	8	D.	Base Plank	16	Screwdriver	
E.	Divider	6	F.	Triangle Panel	2	G.	Short Plank 3 holes	6	H.	Triangle Support	2		
I.	Shorter Plank 3 holes	6	J.	20mm Screws	172	K.			L.				



1. Check you have all the components. Part I is slightly shorter than part G. Be careful of the locations of the pre-drilled holes.

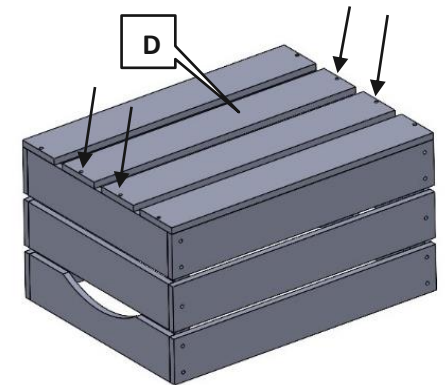 
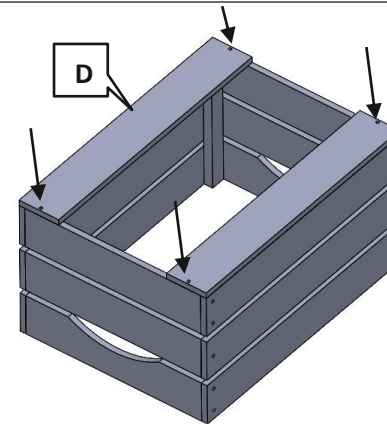 
2. Position both of part A and one of part B as shown. Fix together using 4x 20mm screws as indicated.

3. Position one of part C as shown. Fix in place using 2x 20mm screws.



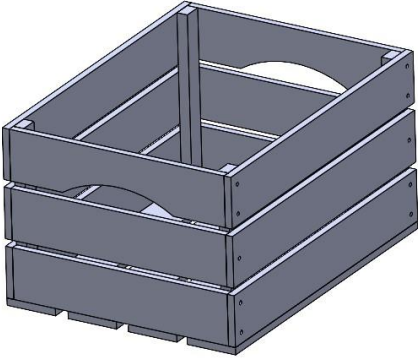 
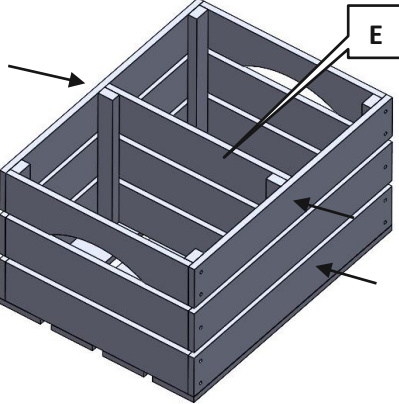 
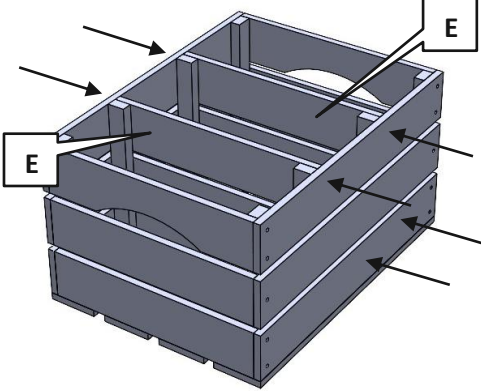 
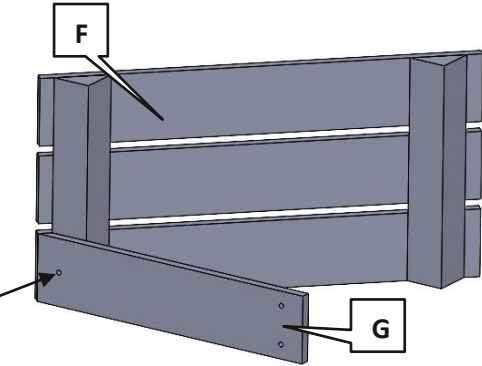 
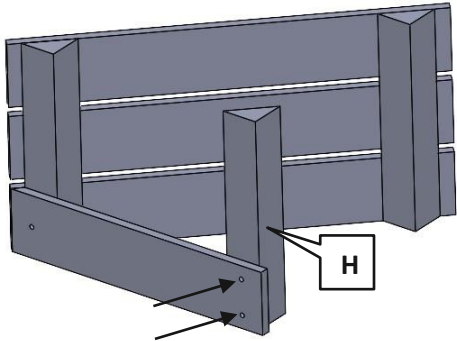 
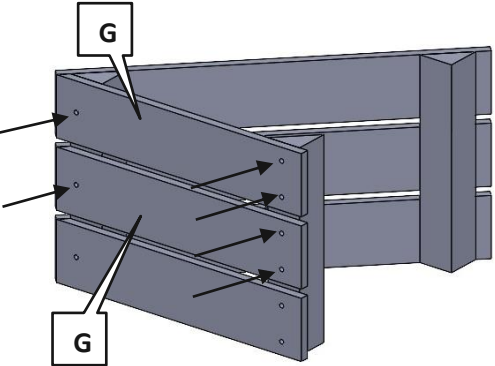 
4. Position a second of part B as shown and fix in place using 4x 20mm screws.

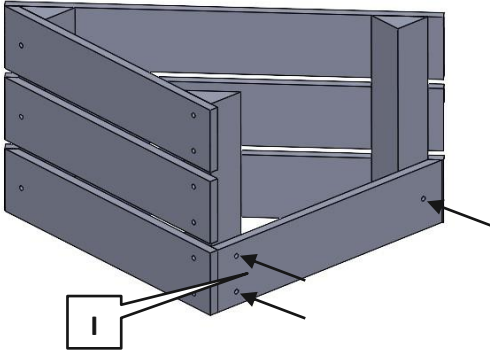 
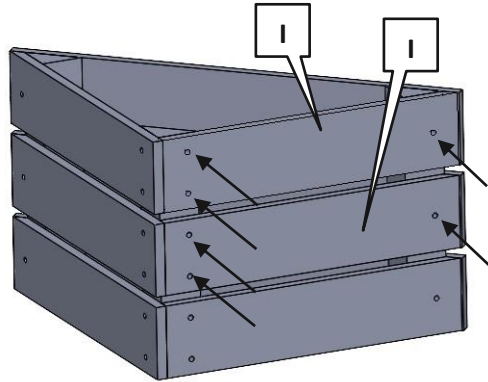 
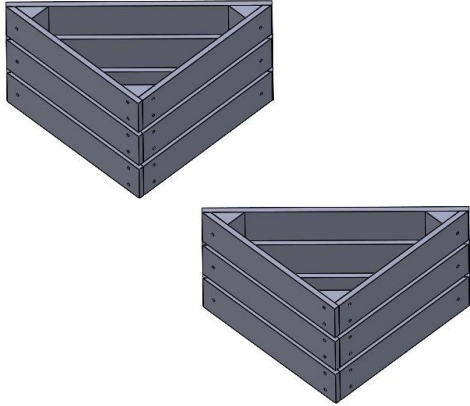 
5. Repeat steps 2-4 for the other side, using 2x part B and 1x part C as shown.



6. Lay the product upside down. Position 2 of part D as shown, ensuring the edges are flush. Fix in place using 4x 20mm screws.

7. Position another 2x part D as shown, ensuring all the planks are evenly spaced. Fix in place using 4x 20mm screws.

			
8. Repeat steps 2-7 with the remaining 3 rectangular crates.	9. Position one of the crates and one of part E as shown. Fix in place using 4x 20mm screws as indicated.	10. Repeat step 9 with a second crate and a second of part E, using 4x 20mm screws.	11. Position one of the crates and 2x part E as shown. Fix together using 8x 20mm screws in the directions shown.
			
12. Repeat step 11 with the remaining crate and remaining parts E as shown.	13. Position part F and one of part G as shown. Fix together using 1x 20mm screw as shown.	14. Position part H as shown and fix in place using 2x 20mm screws as indicated.	15. Position 2x part G as shown and fix in place using 6x 20mm screws as indicated.

			
16. Position one of part I as shown and fix in place using 3x 20mm screws as shown.	17. Repeat step 16 with the remaining 2x part I, using 6x 20mm screws.	18. Repeat steps 13-17 with the second triangle crate as shown.	19. Done. Enjoy! Display items not included.

Indoor Wooden Products

Installation

- For any self-assembly products, ensure that it is fully and correctly assembled by following the instructions that are provided with the item. Please contact Cosy if you do not receive these instructions prior to assembly as Cosy is not liable for damage caused by incorrect assembly. Small parts such as screws, rivets, nuts, bolts and washers need regular checks to ensure they are securely in place as part of your care and maintenance routines.
- Indoor wooden products can be heavy and must be moved and handled correctly when building and siting them. They should be moved by at least two people using best practice manual handling techniques and procedures.

Safety

- As many of the products we supply are classed as 'toys' children should be appropriately instructed and supervised at all times when using them.
- As with any new piece of equipment or new children using existing equipment, a risk benefit assessment needs to be undertaken and rules for use clearly communicated to ensure maximum fun in the safest way.
- Point out obvious specific risks relating to individual products and rules of use.
- Identify which products may need higher levels of supervision and store them in an area to be treated differently.
- If you are using these products outdoors be aware that the risk will increase relating to certain weathers such as increased slippiness, manage accordingly.
- Inform the participants that as some items are heavy or long, they should not be carried or held above head height and that some should ideally be moved using two people to ensure that no injuries occur.
- Ensure all supervisors are risk awareness trained and there is a sufficient level of supervision at all times.

Maintenance

- All treatment on the play equipment **MUST** be re-applied 6-12 months after purchase to help prolong its life.
- Please ensure that any stains or paints used are child-friendly and non-toxic.
- If the blackboard paint begins to deteriorate, you can refresh this by sanding off the spoiled paint and reapplying over this area. You can purchase this paint directly from Cosy or any respectable hardware retailer.
- Feel free to sand any edges that become rough or splintered and wire brush any mould or moss to keep the product useable and clean.
- If your product has doors, ensure that at the end of each session, the doors are completely closed with all latches used where applicable to help lessen any warping over time.
- Some of these products can be used outside, but they must be stored indoors at the end of the day.
- Check play equipment daily after use for breaks and hazards such as cracks and splinters.
- We recommend that all products are checked and maintained regularly to ensure they are kept in pristine condition.