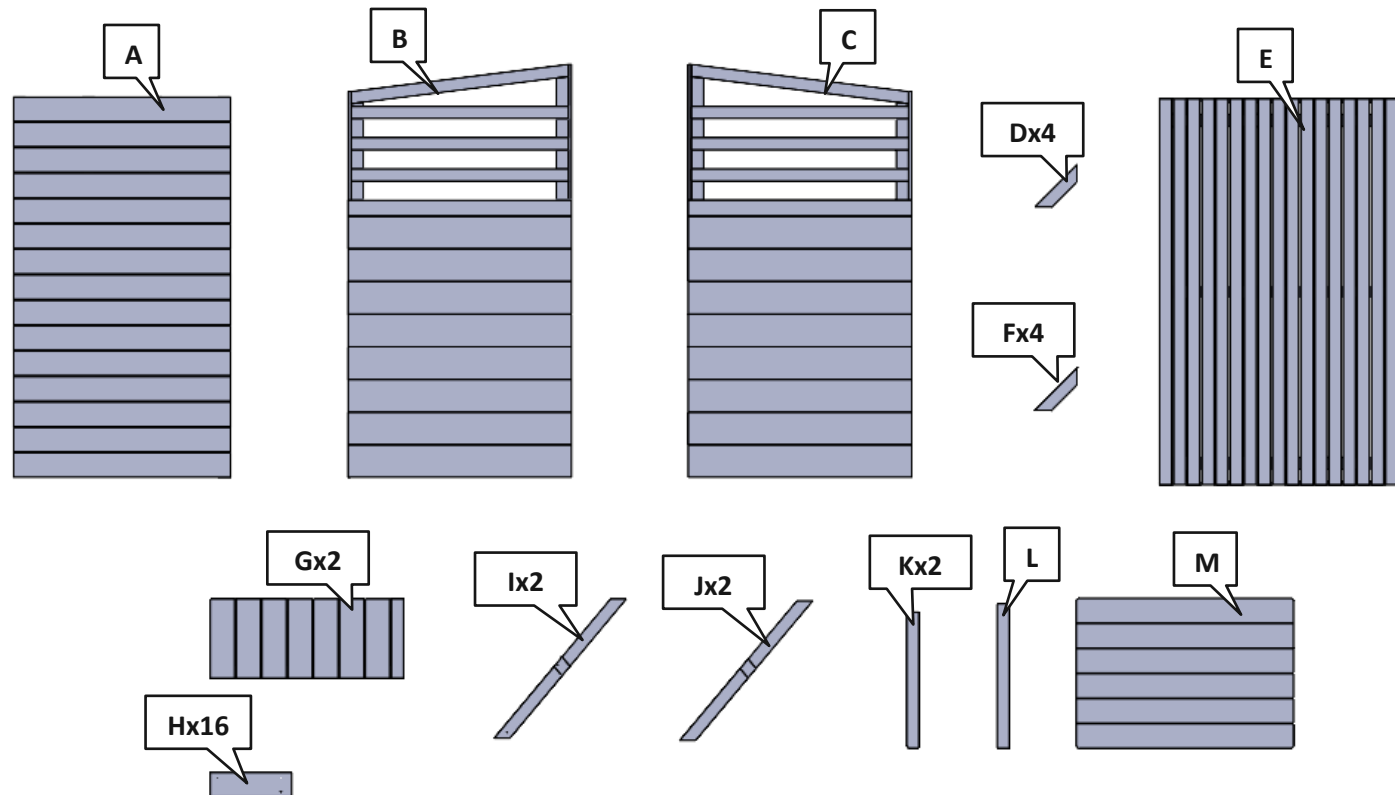 










54042 – Cosy Chatter Cube


Assembly Instructions

Components:			Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Tools Required
			A.	Base Panel	1	B.	LH Side Panel	1	C.	RH Side Panel	1	Electric Drill
			D.	Bottom Brace	4	E.	Roof Panel	1	F.	Roof Brace	4	T20 Driver Bit
			G.	Seat Front	2	H.	Seat Top Plank	16	I.	Table Leg Part 1	2	T10 Driver Bit
			J.	Table Leg Part 2	2	K.	Table Support	2	L.	Table Crossbar	1	
			M.	Table Top	1	N.	80mm Screws	38	O.	60mm Screws	6	
			P.	40mm Screws	70							




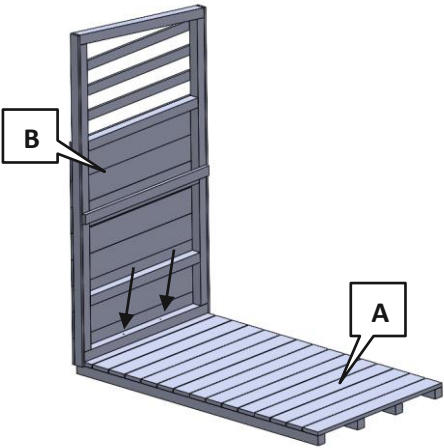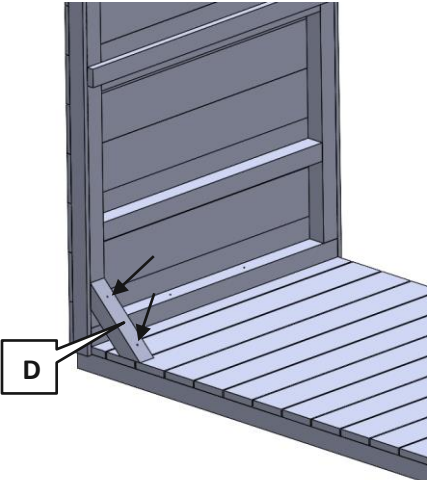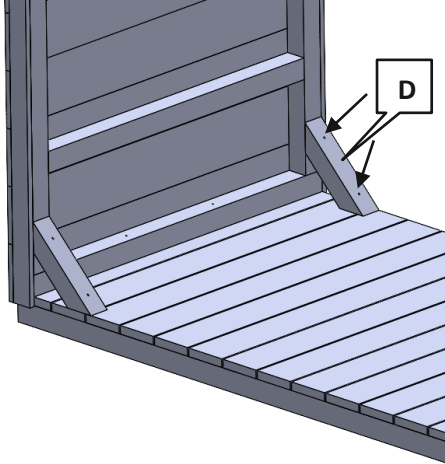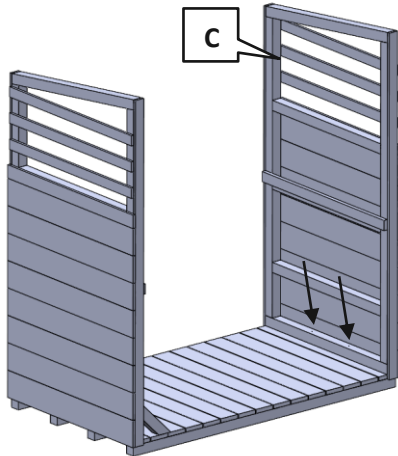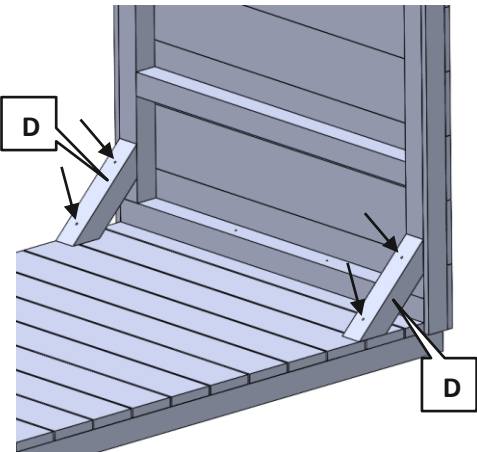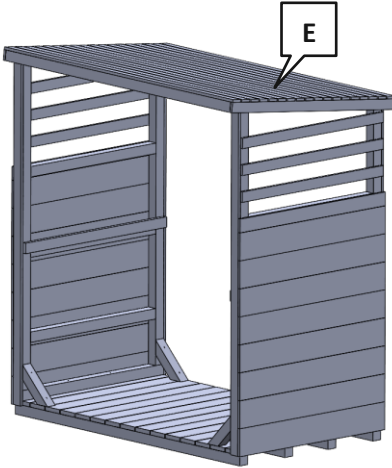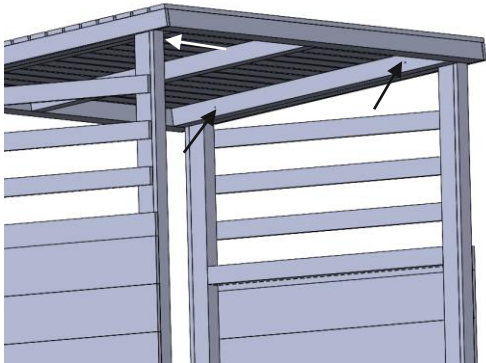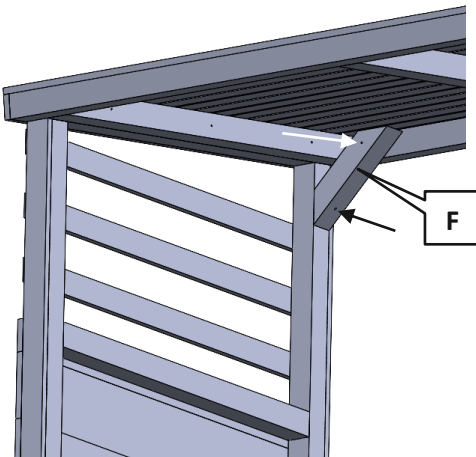        1. Check you have all the components. Adult assembly required. Two person build.


			
2. Position parts A and B together as shown. Fix together using 2x 80mm screws as indicated.	3. Position one of part D as shown. Fix in place using 2x 80mm screws as indicated.	4. Position another of part D as shown. Fix in place using 2x 80mm screws as indicated.	5. Position part C as shown. Fix in place using 2x 80mm screws as indicated.
			
6. Position the remaining 2x part D as shown and fix in place using 4x 80mm screws as indicated.	7. Position part E as shown.	8. Fix in place using 4x 60mm screws as indicated.	9. Position one of part F as shown. Fix in place using 2x 80mm screws as indicated.

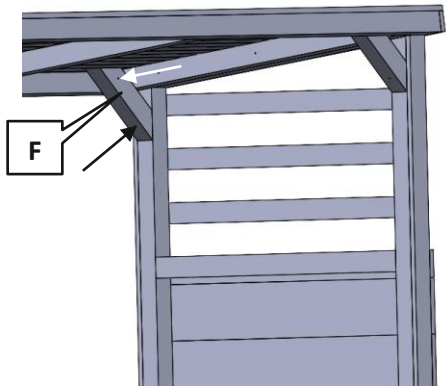 

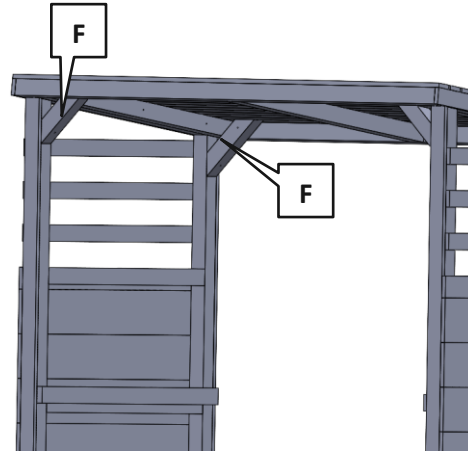 
10. Position another of part F as shown. Fix in place using 2x 80mm screws as indicated.



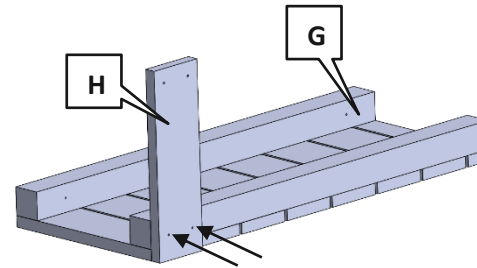 
11. Position the remaining 2x part F as shown. Fix in place using 4x 80mm screws as indicated.



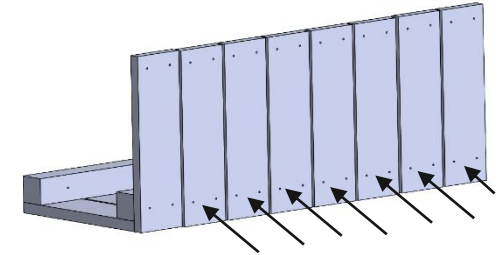 
12. Position one of parts G and H as shown. Fix together using 2x 40mm screws as indicated.



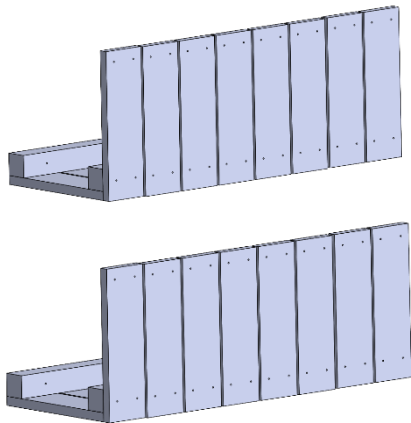 
13. Repeat step 12 with another 7x part H, using 14x 40mm screws.



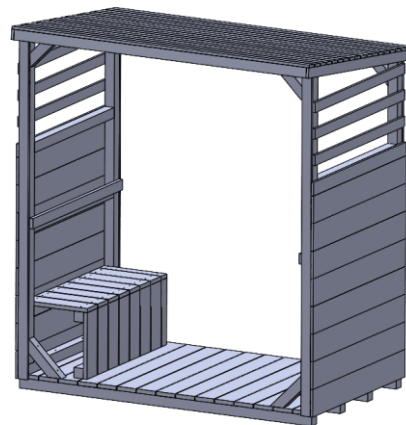 
14. Repeat steps 12-13 with the second seat assembly.










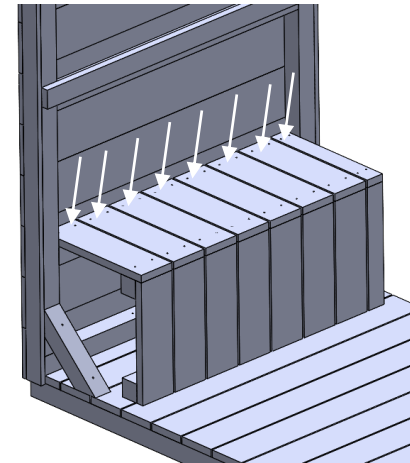 
15. Position one of the completed seat assemblies as shown.




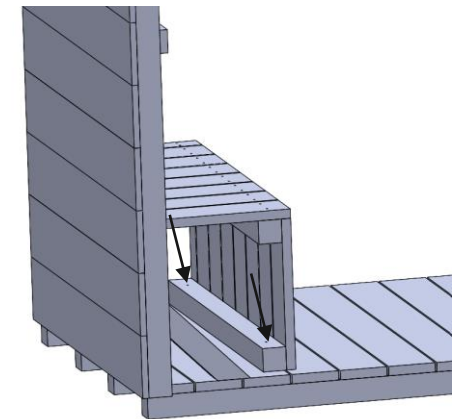 16. Fix in place using 16x 40mm screws as indicated.




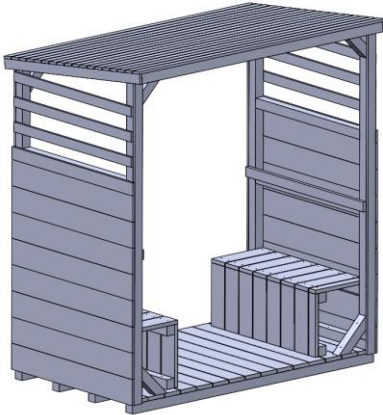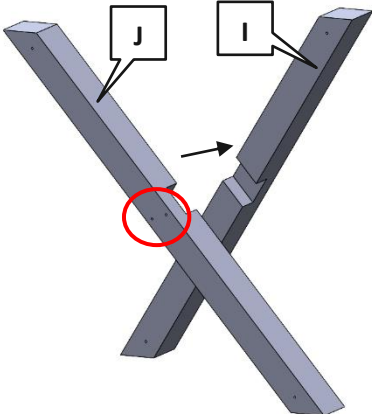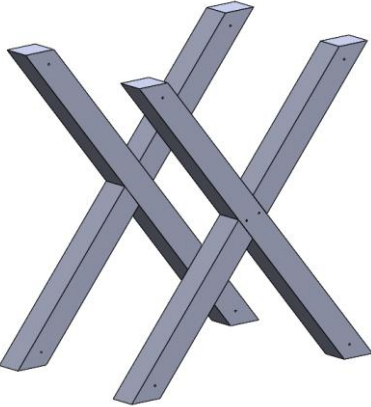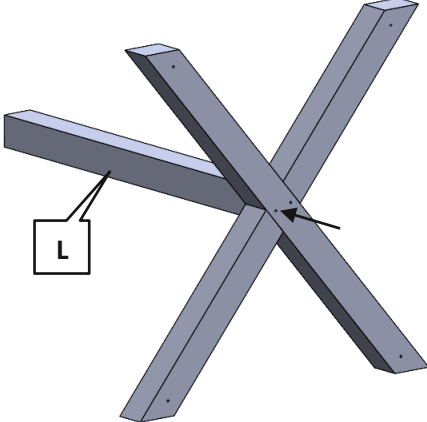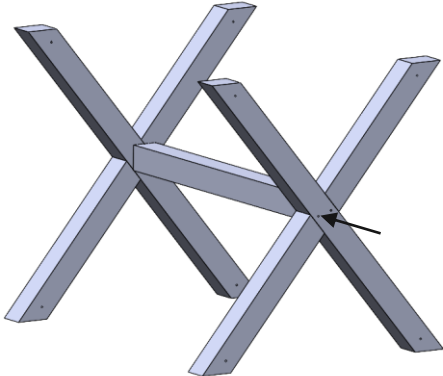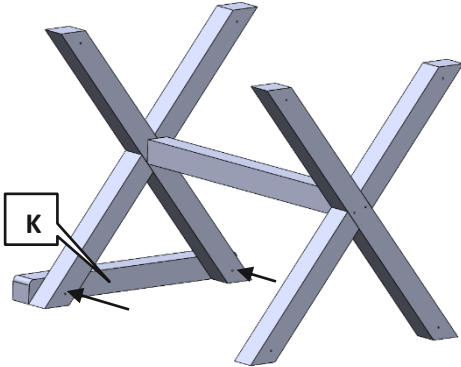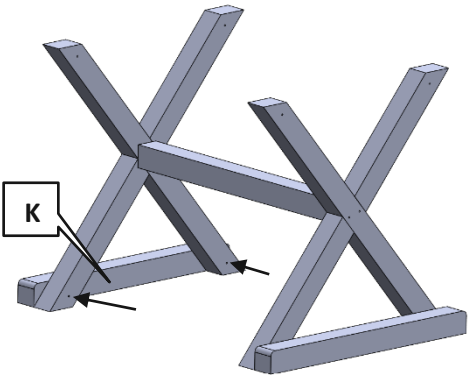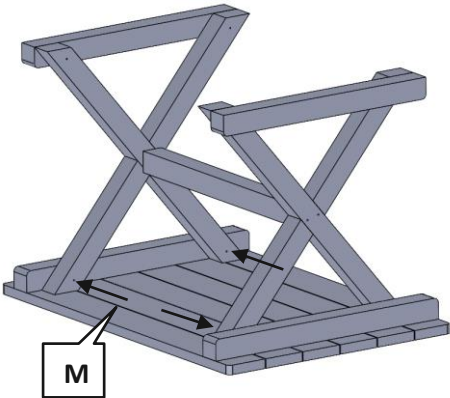        17. Fix in place further using 2x 80mm screws as indicated.


			
18. Repeat steps 15-17 with the second seat assembly.	19. Position one of parts I and J together as shown, ensuring they slot together. NOTE Part J has pilot holes in the centre.	20. Repeat step 19 with the remaining parts I and J as shown.	21. Position part L as shown. Fix in place using 1x 80mm screws as indicated.
			
22. Position the second leg frame as shown. Fix in place using 1x 80mm screws as indicated.	23. Position one of part K as shown. Fix in place using 2x 80mm screws as indicated.	24. Position the remaining part K as shown. Fix in place using 2x 80mm screws as indicated.	25. Flip the leg frame over. Position part M as shown. Fix in place using 4x 80mm screws as indicated.

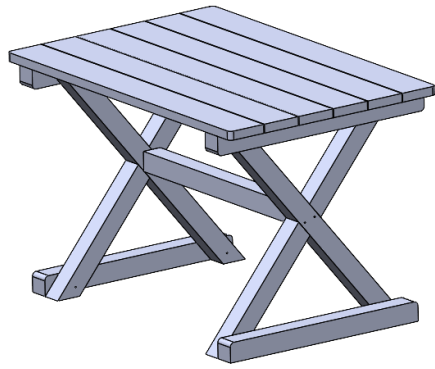 

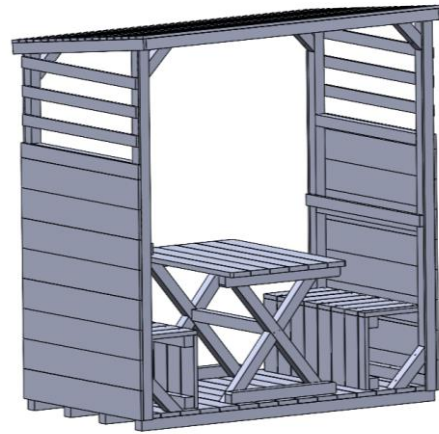 
26. Table complete.



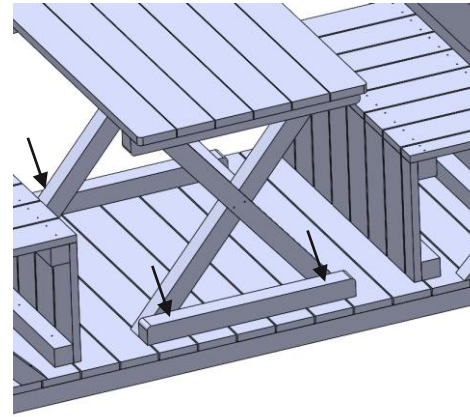 27. Position the table in the centre as shown.



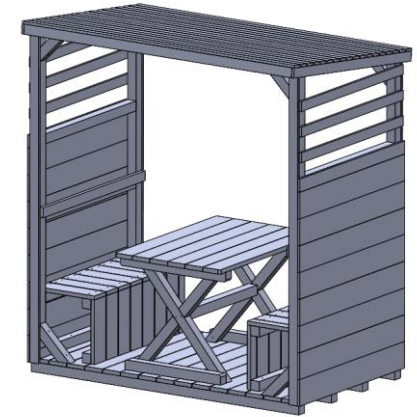 28. Fix in place using 4x 80mm screws as indicated.



29. Done. Enjoy!

Email us your Bright  Ideas
ideas@cosydirect.com

Outdoor Wooden Products

Installation

- For any self-assembly products, ensure that it is fully and correctly assembled by following the instructions that are provided with the item. Please contact Cosy if you do not receive these instructions prior to assembly as Cosy is not liable for damage caused by incorrect assembly. Small parts such as screws, rivets, nuts, bolts and washers need regular checks to ensure they are securely in place as part of your care and maintenance routines.
- Outdoor wooden products can be heavy and must be moved and handled correctly when building and siting them. They should be moved by at least two people using best practice manual handling techniques and procedures.

Safety

- As many of the products we supply are classed as 'toys' children should be appropriately instructed and supervised at all times when using them.
- As with any new piece of equipment or new children using existing equipment, a risk benefit assessment needs to be undertaken and rules for use clearly communicated to ensure maximum fun in the safest way.
- Point out obvious specific risks relating to individual products and rules of use.
- Identify which products may need higher levels of supervision and store them in an area to be treated differently.
- If you are using outdoor products be aware that the risk will increase relating to certain weathers such as increased slippiness, manage accordingly.
- Inform the participants that as some items are heavy or long, they should not be carried or held above head height and that some should ideally be moved using two people to ensure that no injuries occur.
- Ensure all supervisors are risk awareness trained and there is a sufficient level of supervision at all times.

Maintenance

Outdoor wooden products can be prone to changes in appearance and shape, especially in extreme weather conditions. These will not affect the structural integrity of the product, this is a natural feature.

- All treatment on the play equipment **MUST** be re-applied 6-12 months after purchase to help prolong its life.
- Please ensure that any stains or paints used are child-friendly and non-toxic.
- If the blackboard paint begins to deteriorate, you can refresh this by sanding off the spoiled paint and reapplying over this area. You can purchase this paint directly from Cosy or any respectable hardware retailer.
- Feel free to sand any edges that become rough or splintered and wire brush any mould or moss to keep the product useable and clean.
- If your product has doors, ensure that at the end of each session, the doors are completely closed with all latches used where applicable to help lessen any warping over time.
- These products can be used inside and outside. They must be stored dry in a covered area when not in use as this will greatly prolong their lifespan.
- Check play equipment daily after use for breaks and hazards such as cracks and splinters.
- We recommend that all products are checked and maintained regularly to ensure they are kept in pristine condition.