



Assembly Instructions

Beefy Rustic Arch

Cosy Direct Code: 47347



(W x D x H) 1.83m x 0.54m x 1.5m

PLEASE KEEP THESE INSTRUCTIONS

Beefy Rustic Arch Assembly Instructions

Requires 2 Person assembly


Caution – Construction involves working at height. Suitable equipment required.

Tools required: Corded / cordless drill, 3mm drill bit, *Pozi- drive bit / Screwdriver (*Crosshead), Hammer, Adjustable Spanner.
(All screw holes to be pre-drilled)

Please take a few moments to check all pack contents listed



Product Name Pack List		
Item	Description	Quantity
A	Roof Panel	2
B	Side Panel	2
C	Diagonal Bracings	4
D	Finial	2

Fixings	Quantity
120mm Screw	4
100mm Screw	8
80mm Screw	4
45mm Bolt, Nut & Washer	2

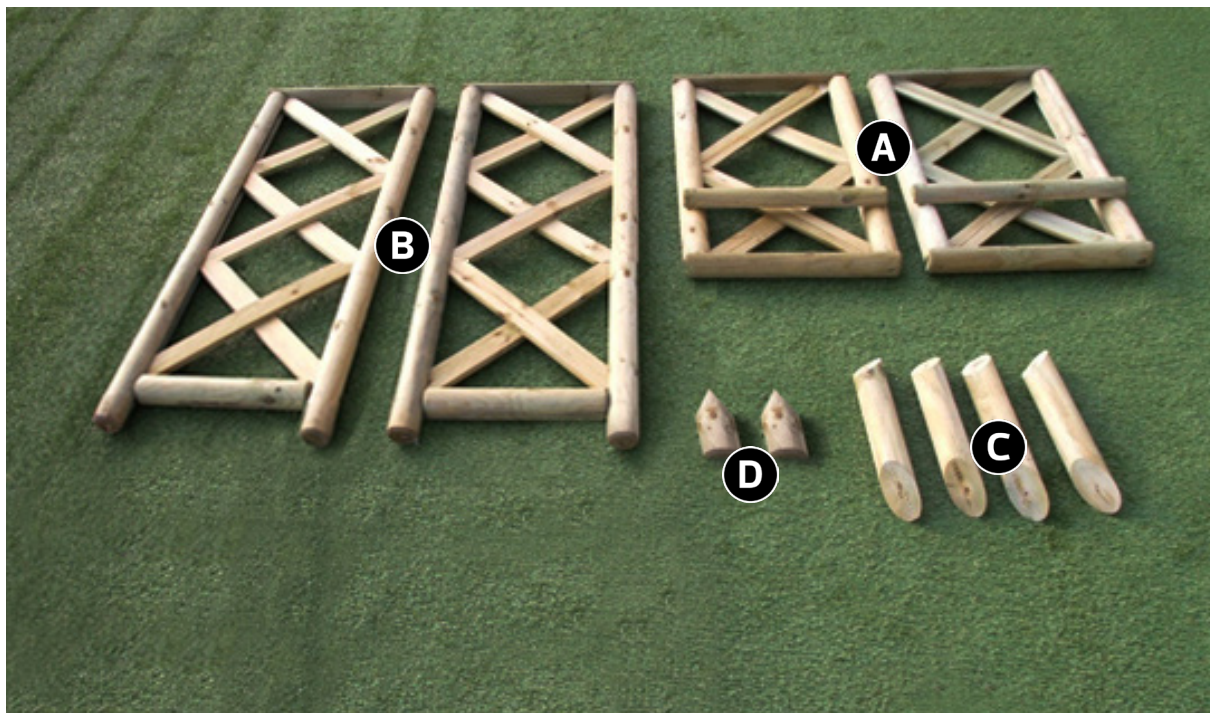



This product is made from pressure-treated timber. It should not be painted or coated with any other treatment until at least 6 months after purchase

1

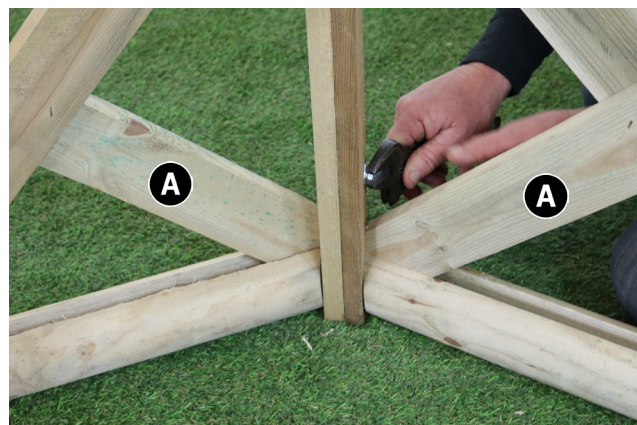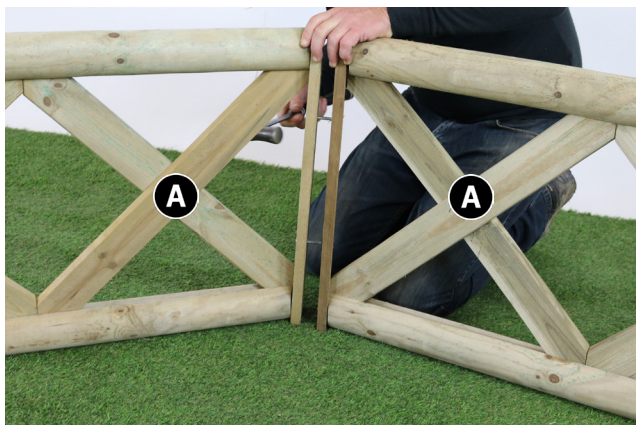


Position Roof Panels (A) as shown. Align bolt holes and attach using 2 x 45mm Bolts, Nuts & Washers.

2

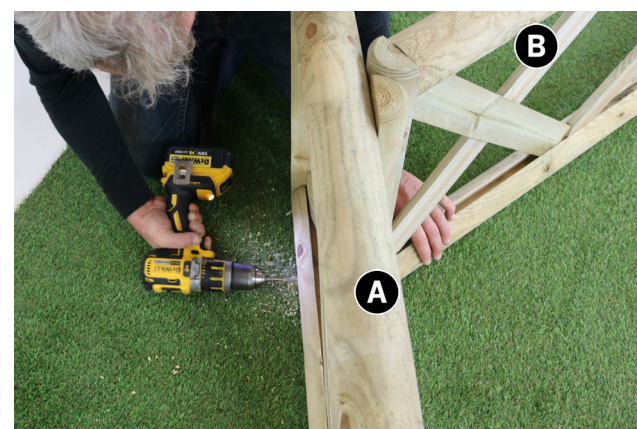
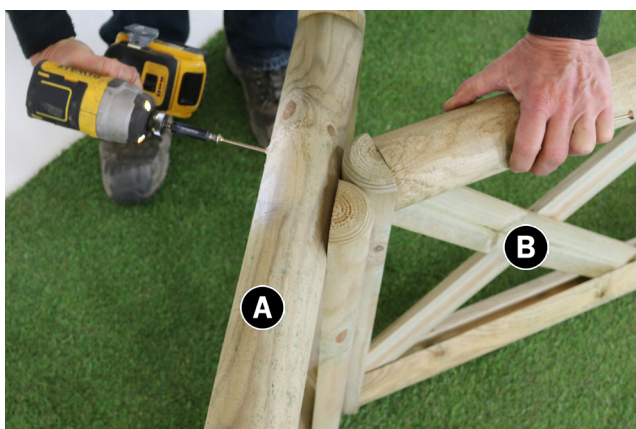


Position Side Panel (B) as shown and fix using 2 x 120mm Screws (1 x Screw per post)

3

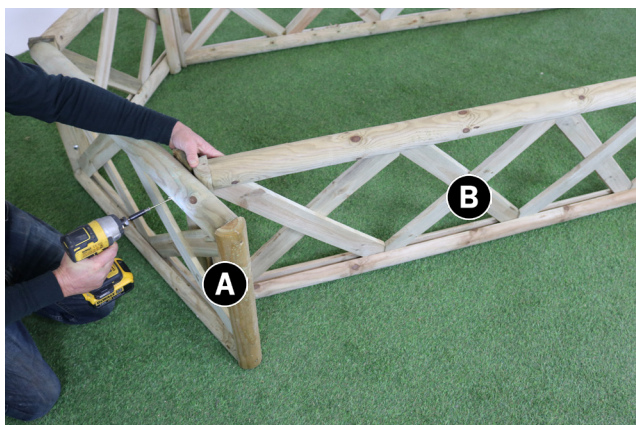



Place remaining Side Panel (B) as shown, and fix in position using 2 x 120mm Screws (1 x Screw per post).

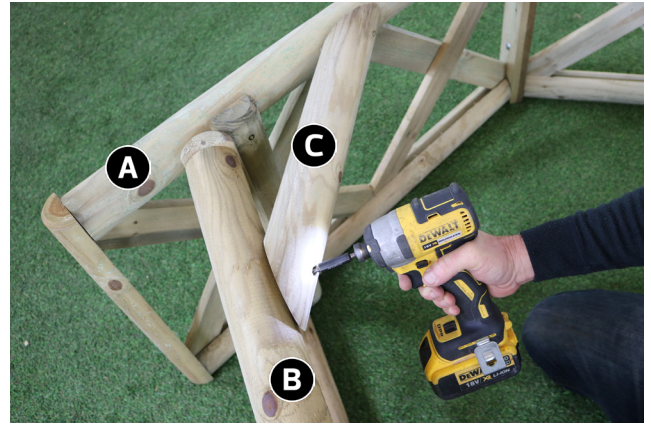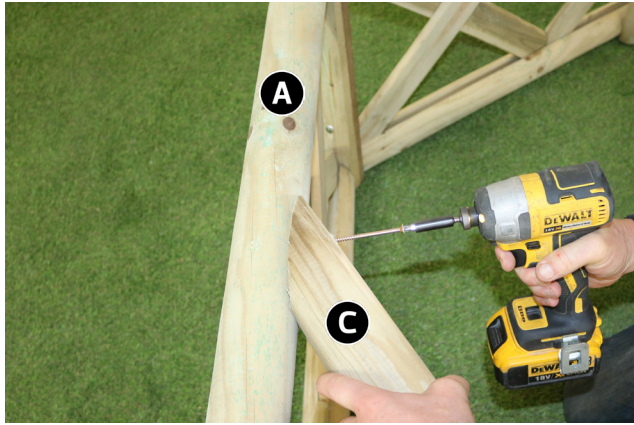

Ensure Side Panels (B) are parallel with each other and attach 1 x Bracing (C) using 2 x 100mm Screws as shown.



Maintain position of Side Panels (B) and attach remaining 3 x Bracings (C) using 6 x 100mm Screws (2 x Screws per Bracing).

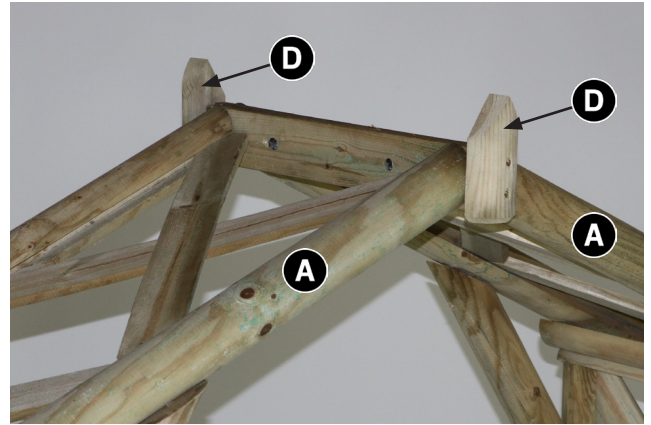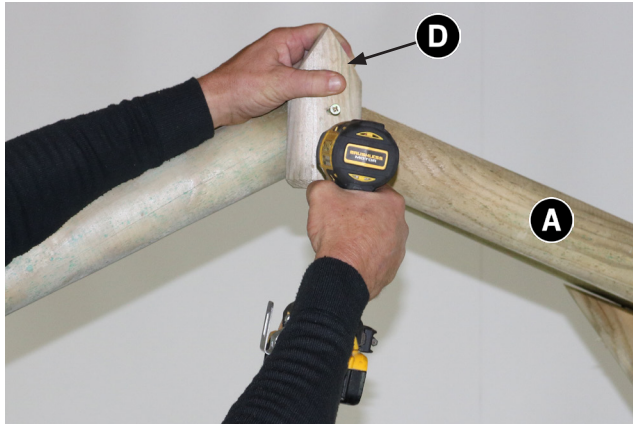

Attach Finials (D) to apex of Roof Panels (A) using 4 x 80mm Screws (2 x Screws per Finial (D)).

Beefy Rustic Arch is now complete.

Email us your Bright Ideas
ideas@cosydirect.com

We would love to hear your feedback on our products & assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:
alastair@cosydirect.com