
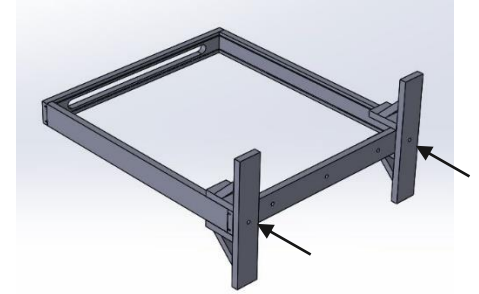
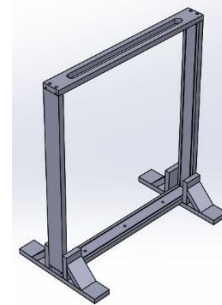


10580 – Worm Farm

Assembly Instructions





Components:	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty
	A.	Frame	1	B.	Feet	2	C.	Perspex Sheet	2	D.	40mm Screws	4

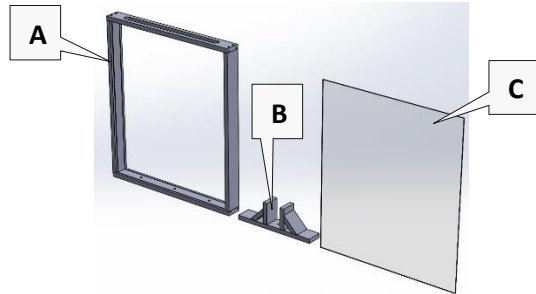

1. Check you have all the components.

2. Position Part A & both parts B as shown.

3. Fix in place as indicated using 2x40mm screws.

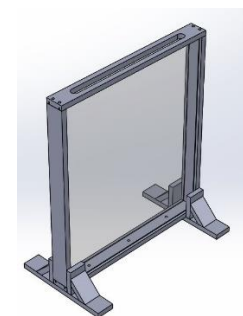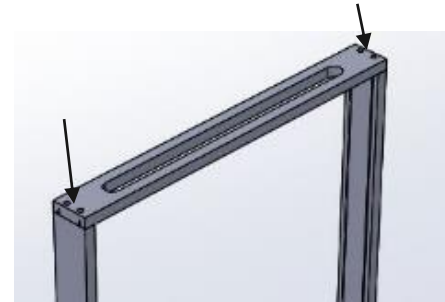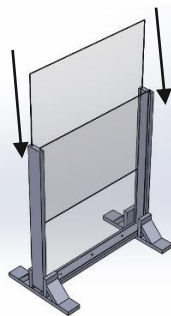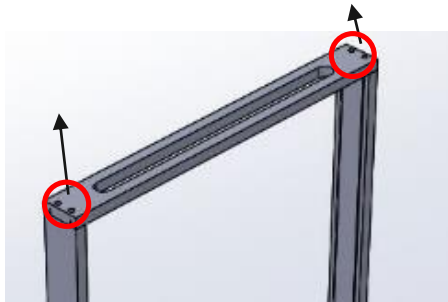

4. Remove screws & top section from the top of part A as indicated.

5. Remove protective film from parts C.
6. Insert parts C into the slots as indicated.

7. Replace top section as shown. Fix in place using 4x40mm screws.

8. Done.

Email us your  Bright Ideas
ideas@cosydirect.com

We would love to hear your feedback on our products & assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com