


15425 & 23483 - Corner Mark Making Dens




Assembly Instructions

Components:

Bag of screws x 1, 2x Blackboard Wall Panels, 1x Trellis Roof Panel

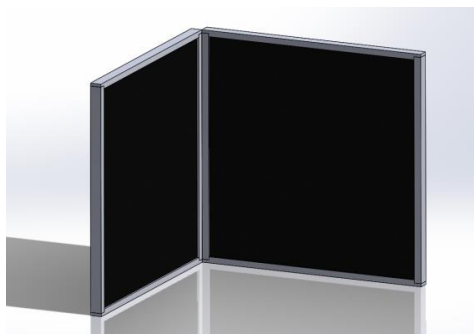

1. If they are hinged, just open to 90 degrees.

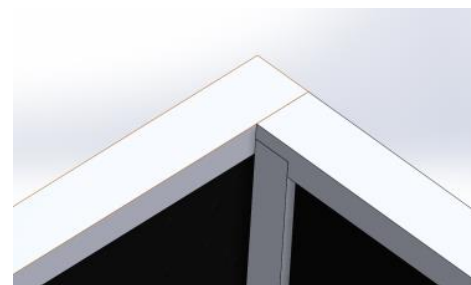

2. If not, place the slightly wider panel up against the other as shown. Screw together.



3. Place the trellis roof panel on the top and screw down with the remaining screws.



8. Enjoy!

Email us your  Ideas

ideas@cosydirect.com

We would love to hear your feedback on our assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com