


The handy Poly Dump Cart

Note: Please read and understand all the safety instructions before using this appliance. Failure to comply with these fitting instructions may result in damage to the appliance and injury.

Save these instructions for further reference.

Exploded Drawing for assembly

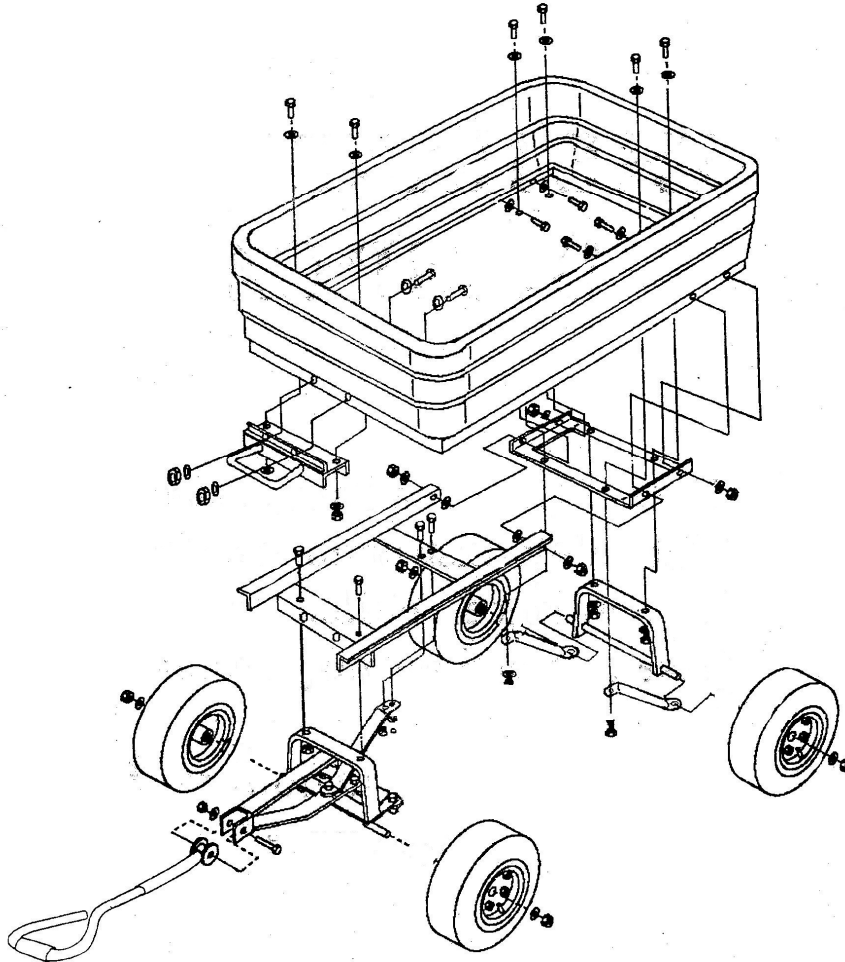

Nut & Bolt pack contents:

12 x M8x20mm Screw
2 X M8X20mm Bolts
15 x M8 Nut
15 x M8 Washer
4 x M12 Nut
4 x Large Washer
1 x M8x60mm Screw

Parts list contents:

Tub
Lock mechanism
Front frame
Rear frame
Front bracket assembly
Rear bracket
Left rear brace
Right rear brace
Handle
Coupling
Wheel x 4


Important safety instructions

1. Read all instruction carefully before use:
2. Do not load Garden Dump Cart with more than 300KGS. Do not use the dumping feature of the garden dump cart with more than 400lbs (181KG)
3. Do not allow children to use the garden Dump cart unsupervised. The garden dump cart is not a toy.
4. Always distribute the load evenly over the surface of the bed.
5. Do not load any items on the top edge of the plastic tray.
6. If any parts become damaged broken or misplaced, do not use the garden dump cart until replacements have been obtained by contacting the help line.
7. Do not operate or use objects that can cause damage to the pneumatic tires or inner tubes. **Do not inflate the tires more than 30PSI /2.1 Bar**
8. Keep these instructions for future use.


Assembly instructions

Your Garden Dump Cart requires assembly. Account for all parts and hardware before beginning assembly.
Tools required for assembly: standard flat blade screwdriver, and a socket set (or two adjustable wrenches)


Assemble front bracket to frame using M8X20mm Bolts (2pcs) M8 Lock nuts (4pcs) and washers (4pcs)
Round head M8X20mm (2pcs)

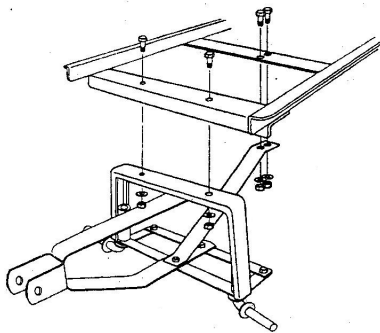


Assemble lock to tub using round head M8X20mm (4pcs) M8 Lock nuts (4pcs) washers (4pcs)

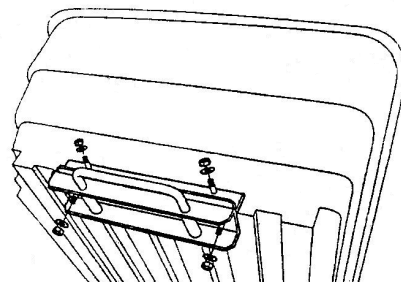


Assemble rear bracket to rear frame and tub using Round head M8X20mm bolts (4pcs.), M8 lock nuts (4pcs) 8mm washers (8pcs.).

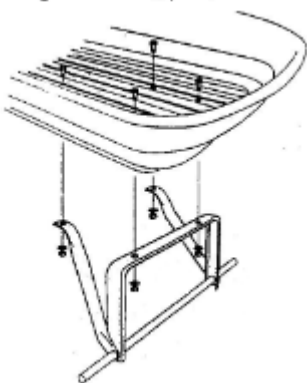

Place tub into its dump position. Remove shoulder bolts from rear. Take the front axle and frame and slide it over the back bracket where the bolts were just removed. Once aligned, reinsert shoulder bolts. The rear frame, front frame and tub should now all be connected.

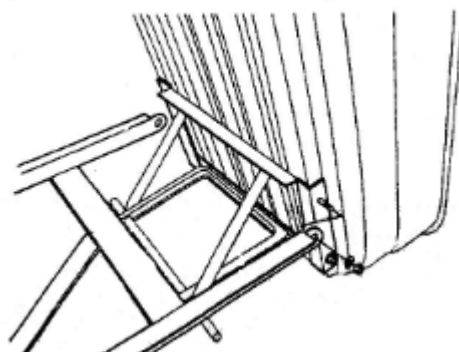


Assemble the wheels using the M12 lock nuts (4pcs.) and large washers (4pcs.).

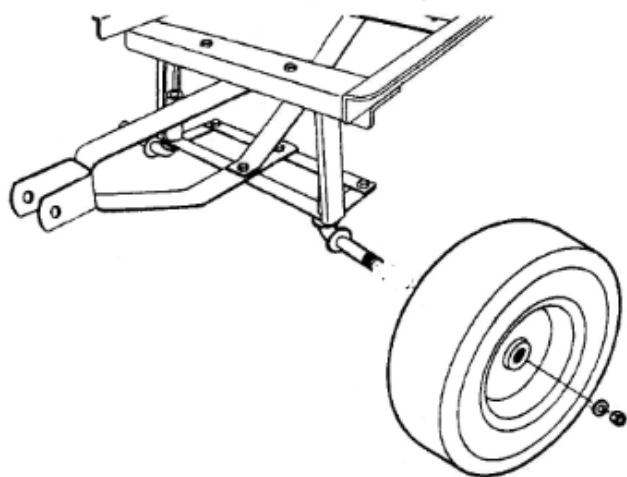


Using the dumping feature

To operate the dumping feature, pull the dumping release handle outward to release the plastic bed from the locking mechanism. Lift up the release handle to rotate cart upward into the dumping position.

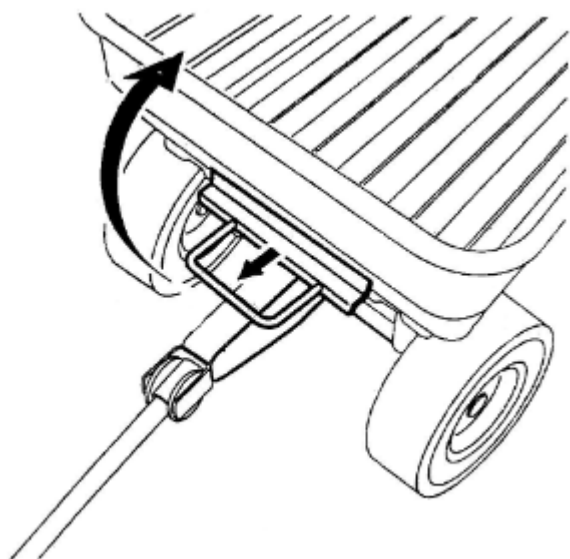


Assemble the handle to the yoke using M8x60 bolt (1pc.), M6 lock nut (1pc.), and washer (1pc.).

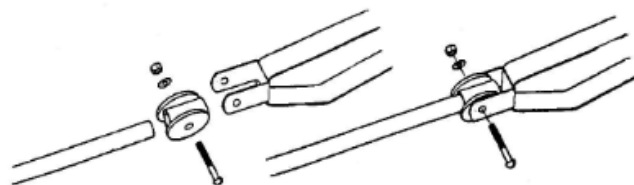

Returning the plastic bed to the lowered position

Rotate the plastic bed back down the lowered position. Make sure the dumping release handle is locked into place when the cart is in the lowered position.

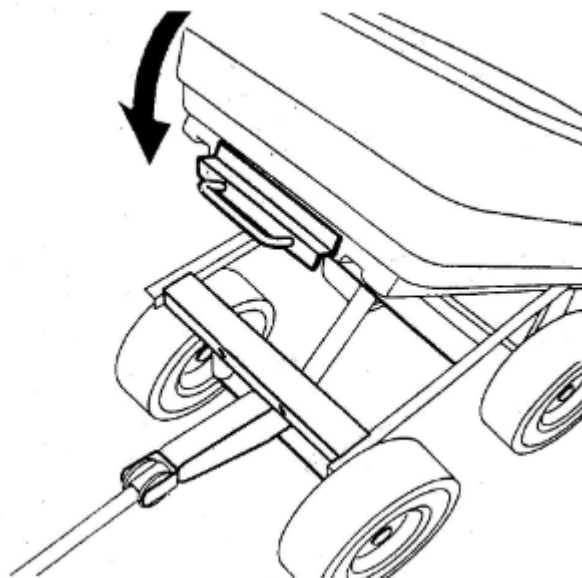

⚠ CAUTION

**DO NOT EXCEED MAXIMUM OVERALL LOAD CAPACITY 300KGS
MAXIMUM DUMPING LOAD CAPACITY 400 LBS.**

Contact our help line

Phone 01473 747084

Fax 01473 745761

Email helpline@blackspur.com