
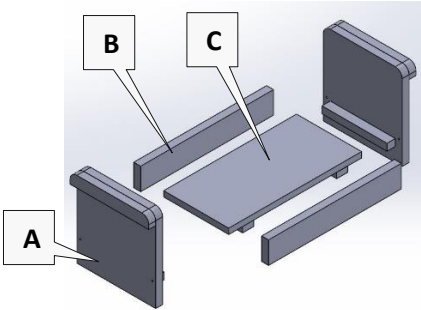
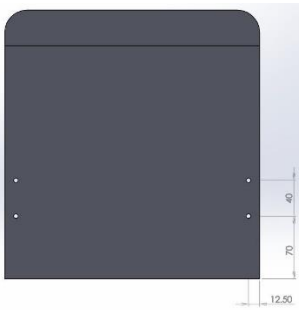
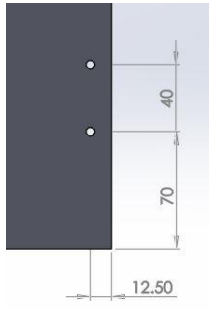
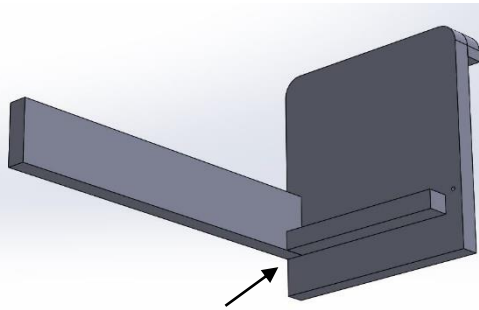
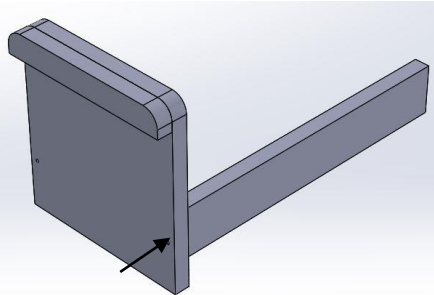
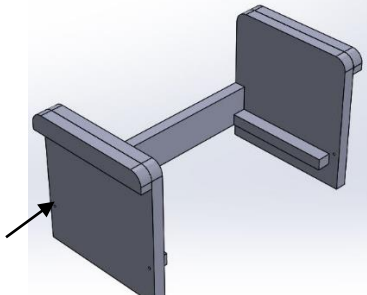
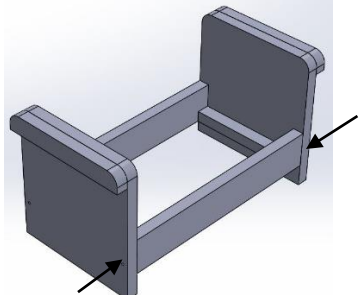
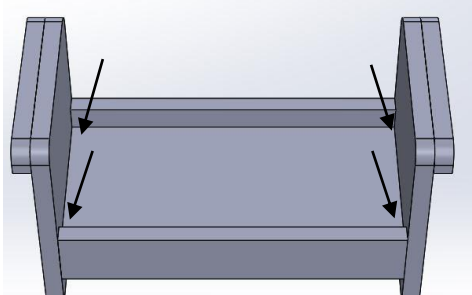


24999 – Dolls Bed

Assembly Instructions

Components:											
Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty
A.	End Panel	2	B.	Side Plank	2	C.	Bed Base	1	D.	70mm Screws	8
E.	40mm Screws	4									

							
1. Check you have all the components.		2. Firstly you will need to drill 4 x 2mm pilot holes on both parts A.		3. Make a pencil mark at the dimensions stated above (dims are in mm) 4. Drill a pilot hole with a 2mm drill bit.		5. Position one of part A & B as shown, ensuring the join is square and flush along the bottom edge of part B as indicated.	
							
6. Screw into place through the pilot holes using 80mm screws.		7. Repeat step 5 & 6 with remaining part A.		8. Position remaing part B as shown and repeat steps 5-7.		9. Position part C as shown. Screw into place in each corner as indicated using 40mm screws.	

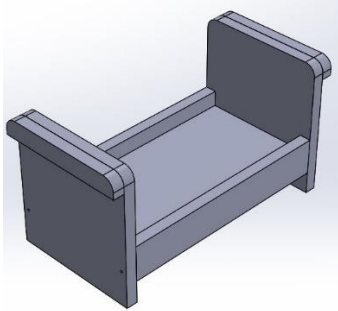

10. Done.



11. Enjoy. Display items not included.

Email us your Bright  Ideas
ideas@cosydirect.com

We would love to hear your feedback on our products & assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com