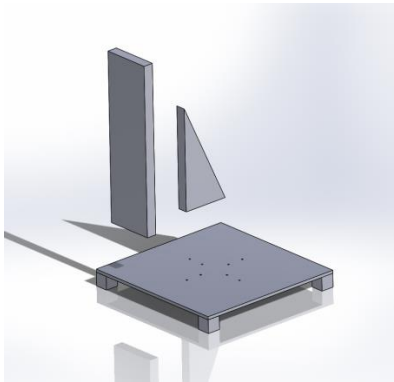
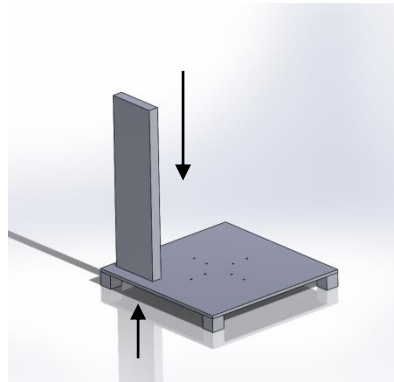
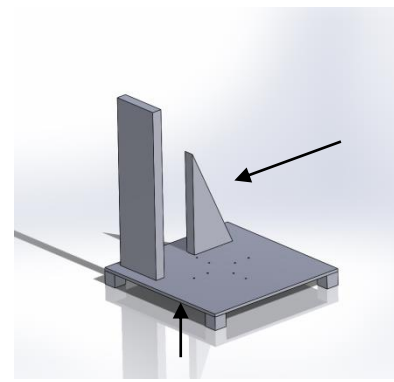
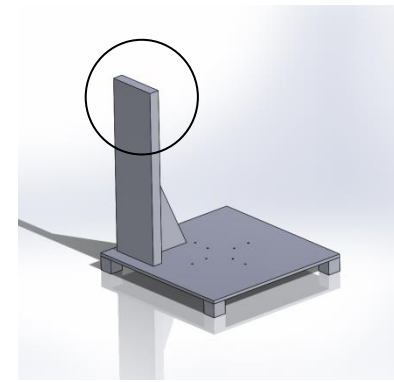


25059 - Barra Pumping Pod

Assembly Instructions

Components:											
Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty
A.	Base Panel	1	B.	Vertical Pump Panel	1	C.	Triangle Pump Support	1	D.	Bag of Screws	1

			
1. Check that you have all of your components and grab a screwdriver.	2. First, take part B and position it over the corner of Part A as shown. Align it with the pre-drilled holes and fix in place by screwing upwards through the base.	3. Next, take part C and align it up against the rear of B in the direction shown. 4. Once in place, screw through the front of the holes in B to fix down. 5. You will also need to screw upwards through the base and into C to ensure that the entire pod column is fixed firmly.	6. Finally, position your pump against the column where highlighted. 7. Screw in place through the holes on the feet of the pump. 8. Enjoy!

Email us your  Bright Ideas
ideas@cosydirect.com

We would love to hear your feedback on our assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com