




26392

Highway Builders yard (3pk)


Components: 3 back panels, 6 side panels, 3 front panels, 1 decorative sign.
Bolts and screws to complete included. Accessories not included.

Flexibly designed to be totally independent of each other these bays don't have to be stood next to one another!


1

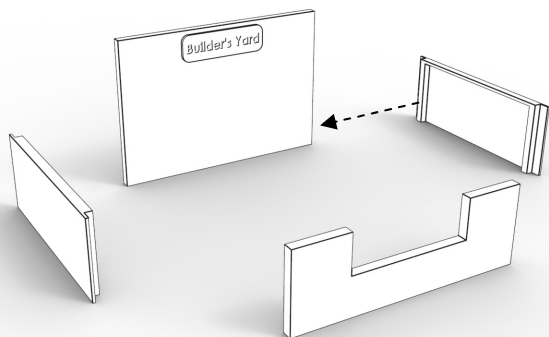


2

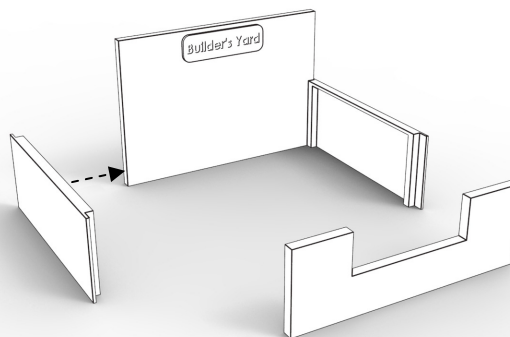


3

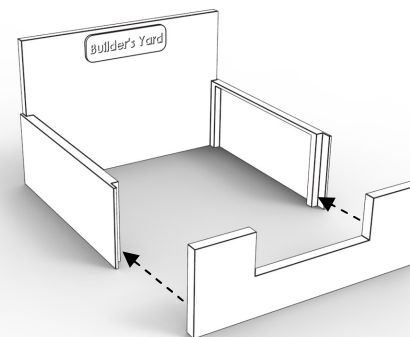

4

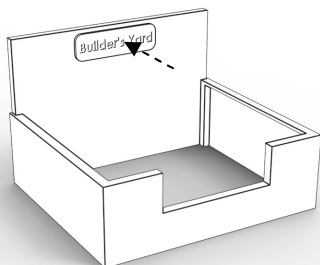

5

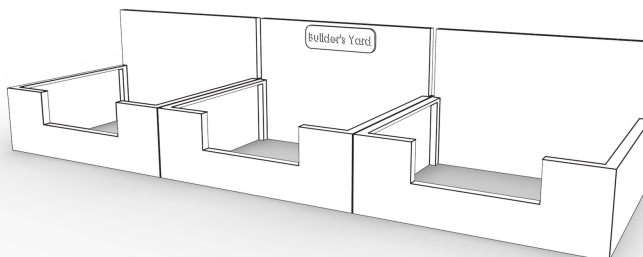

1. Begin by attaching one of the side panels to one of the back panels.
2. Repeat with the second side section .
3. Then attach a front panel.
4. For one of the units, secure the decorative sign with screws to the top of the back panel
5. Repeat steps 1-4 for the other two units.