


26969 - Longscale Workbench



Assembly Instructions

Components:


Bag of hex screws x 1, Small woodscrews x2, tabletop x1, upper panel x1, legs x2, lower shelf supports x2, lower shelf base x1.

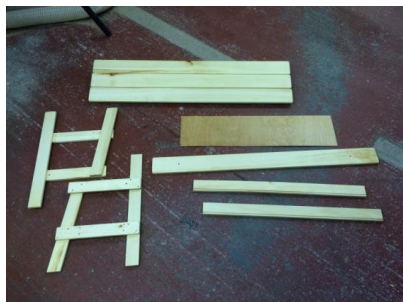

1. Check that you have all of your parts and grab a screwdriver.



2. Position each of the legs onto either side of the tabletop aligning it with the structure underneath.

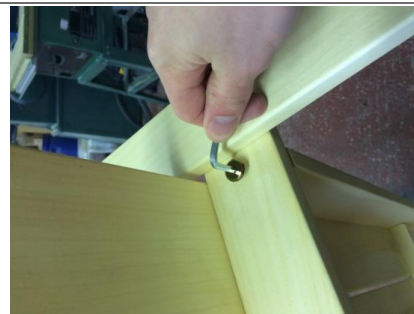

3. Screw one large bolt through the hole in the leg using the allen key provided.



4. Use your screwdriver to screw one of the screws through the other hole at the front of the leg and into the tabletop.



5. Attach the top surface by aligning the holes in the panel with those in the top of the legs and screwing down.



6. To build the lower frame, screw one of the crossbars in as shown with the cut-out at the bottom.



7. Slide the thin plywood panel in along the cut-out in the lower crossbar and push the other in position to match.



8. Screw this final crossbar in position and you're done! Enjoy your new workbench.

Email us your  Bright Ideas
ideas@cosydirect.com

We would love to hear your feedback on our assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com