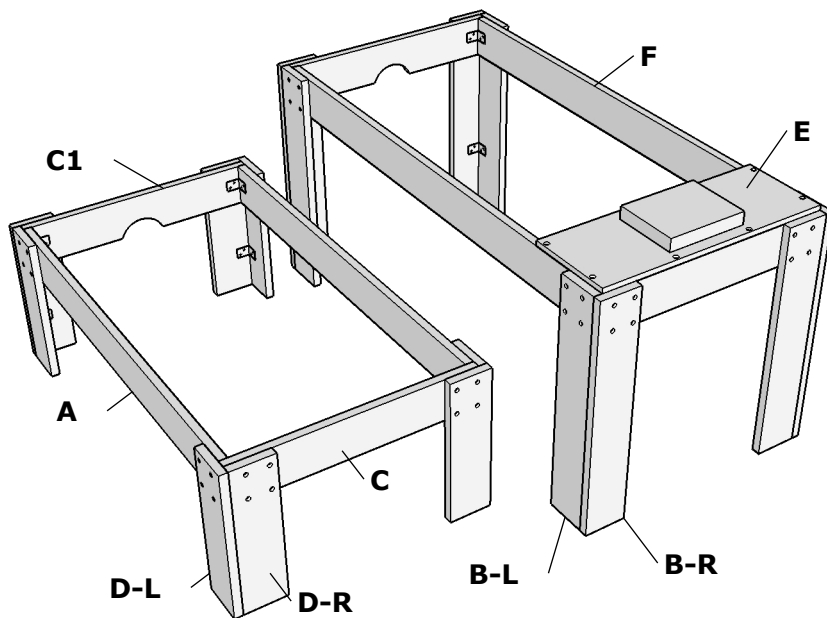


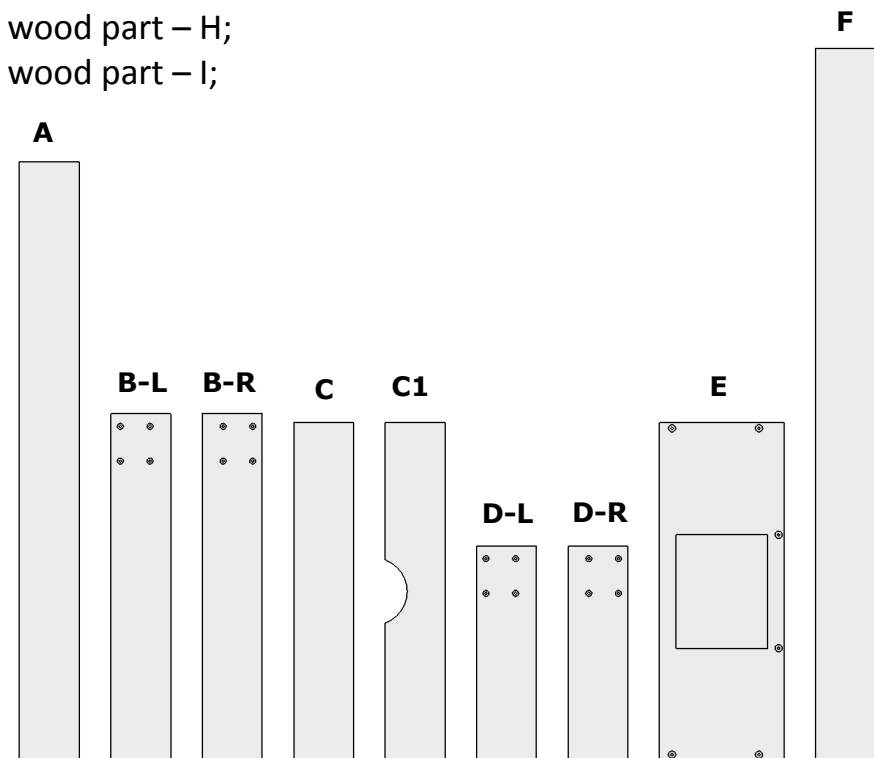


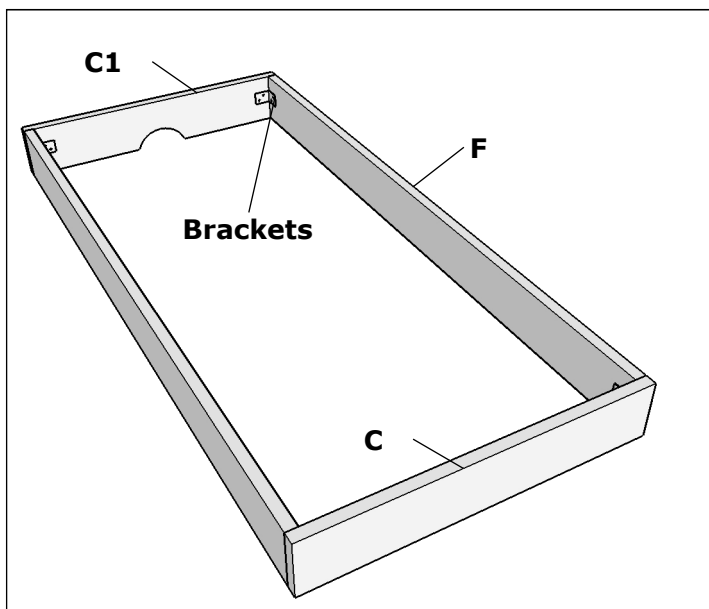
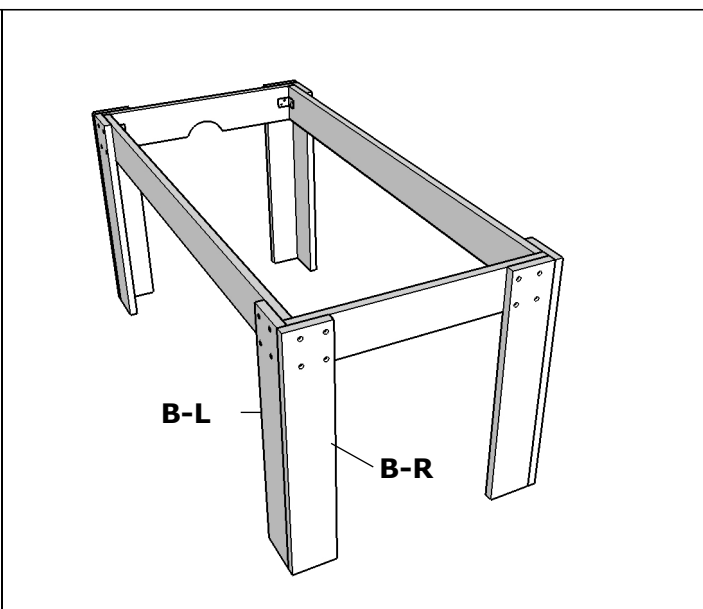
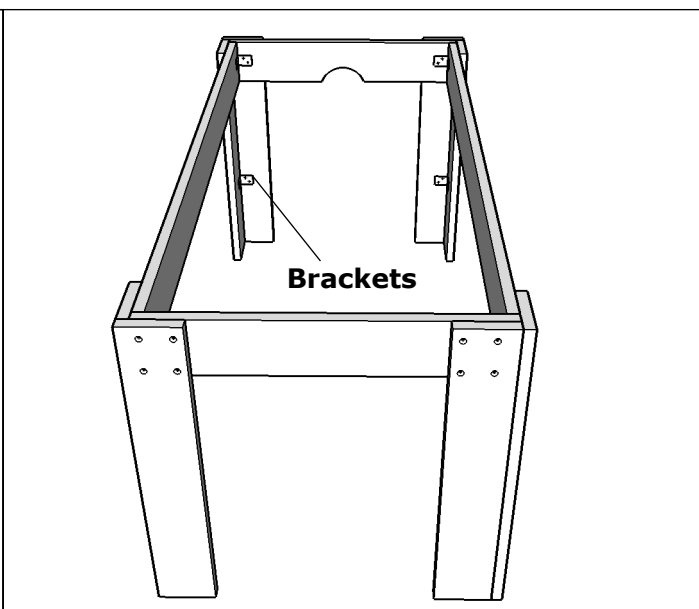
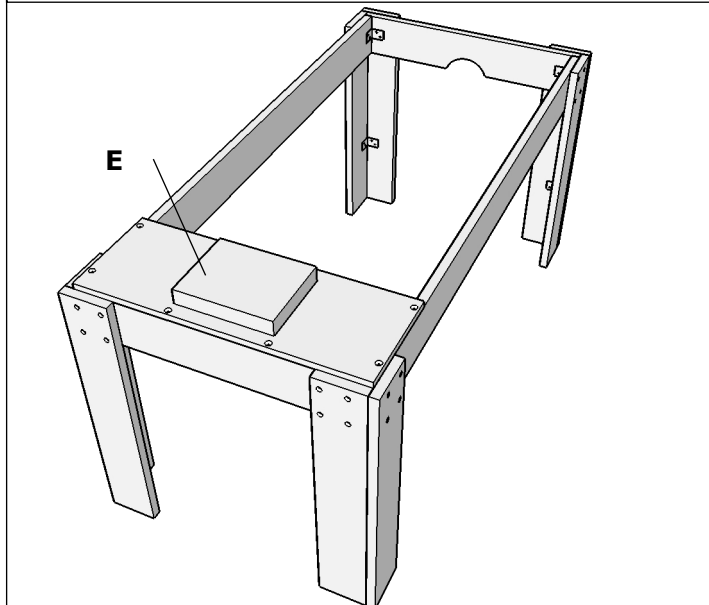
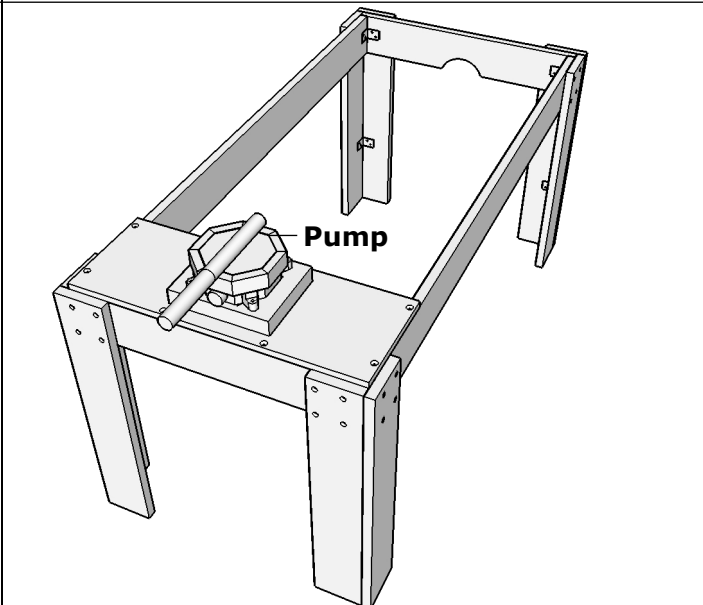
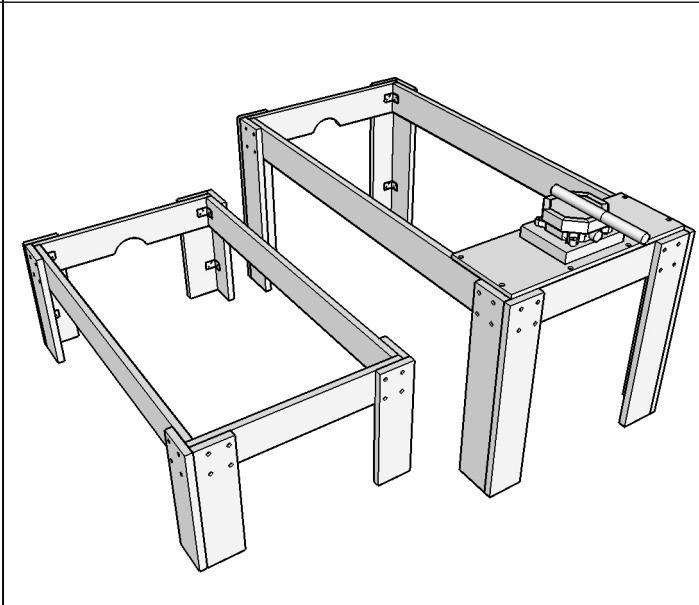
COMPONENTS

1 x wood part – A;
 1 x wood part – B;
 1 x wood part – C;
 2 x wood part – D;
 1 x wood part – E;
 1 x wood part – F;
 2 x wood part – G;
 2 x wood part – H;
 2 x wood part – I;

1 x bag of screws 3,5x16(68pcs);
 1 x bag of screws 3,5x30(68pcs);
 1 x bag of screws 3,5x40(7pcs);
 1 x bag of screws 4,5x30(5pcs);

1x bag of brackets (16pcs);



		
1. Use 3,5x16 screws to fix brackets.	2. Screw through B parts into frame using 3,5x30 screws.	3. Use 3,5x16 screws to fix brackets.
		
4. Screw through E into frame using 3,5x40 screws.	5. Fix pump using 4,5x30 screws.	6. Repeat 1-5 steps for other tray, without pump. DONE !