
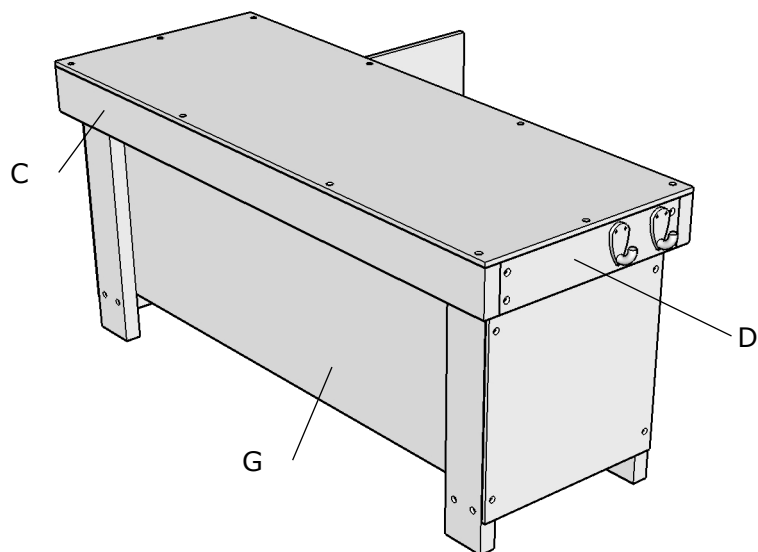


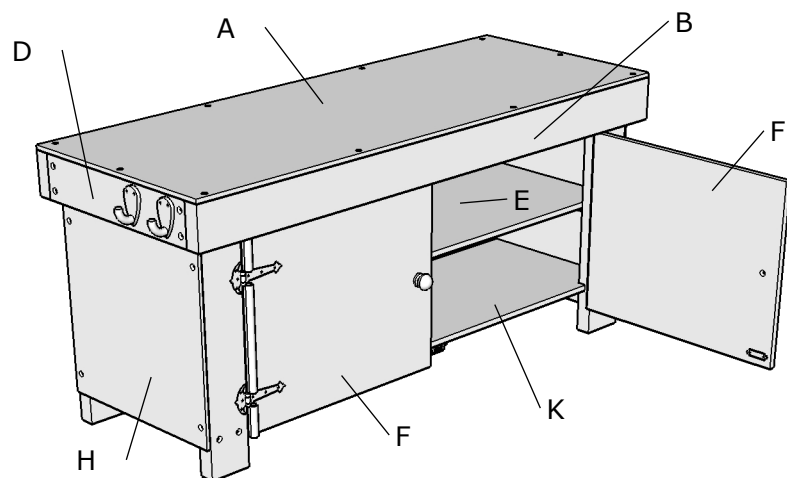








COMPONENTS


1 x wood part – A;
1 x wood part – B;
1 x wood part – C;
2 x wood part – D;
1 x wood part – E;
2 x wood part – F;
1 x wood part – G;
2 x wood part – H;
1 x wood part – K;

1 x bag of screws 3,0x12(9pcs);
1 x bag of screws 3,5x12(14pcs);
1 x bag of screws 3,5x25(22pcs);
1 x bag of screws 3,5x30(11pcs);
1 x bag of screws 4,0x50(26pcs);
1 x bag of screws 4,0x70(9pcs);
1 x bag of screws 4,0x35(2pcs);


1x bag of plastic hooks (2pcs);
1x bag of wooden handles with screws (2pcs);
1x bag of magnets (2pcs);
1x bag of hinges (4pcs);

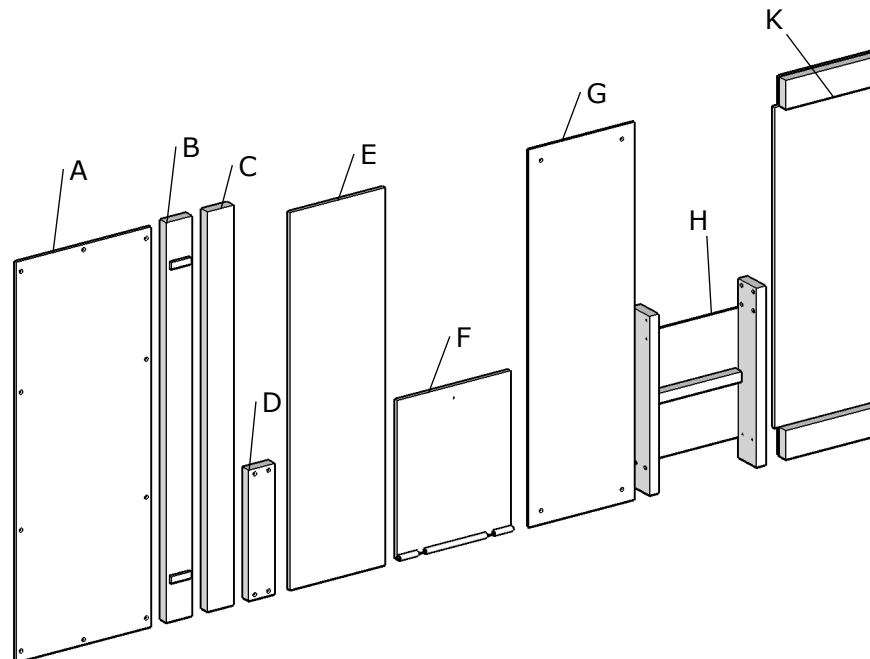

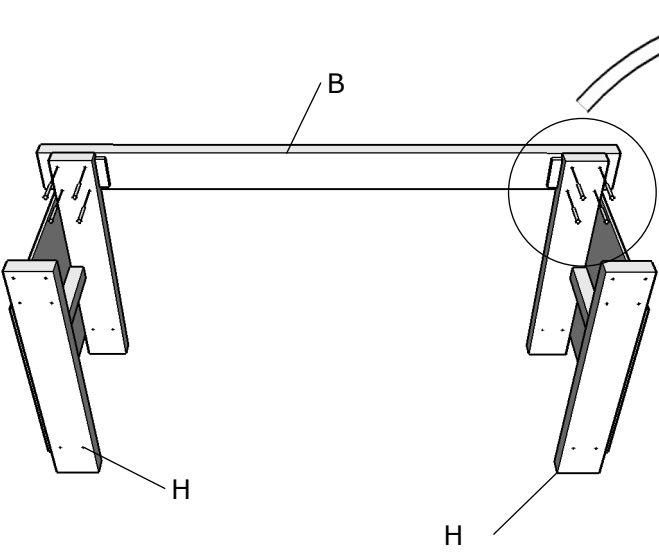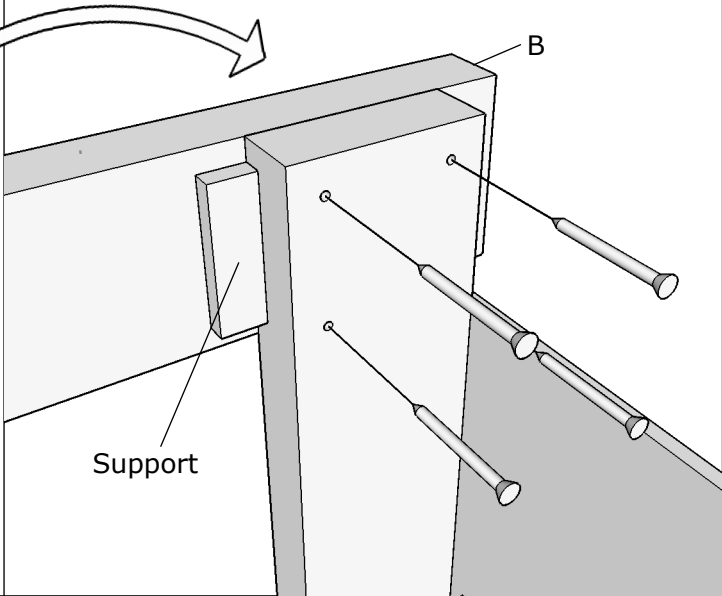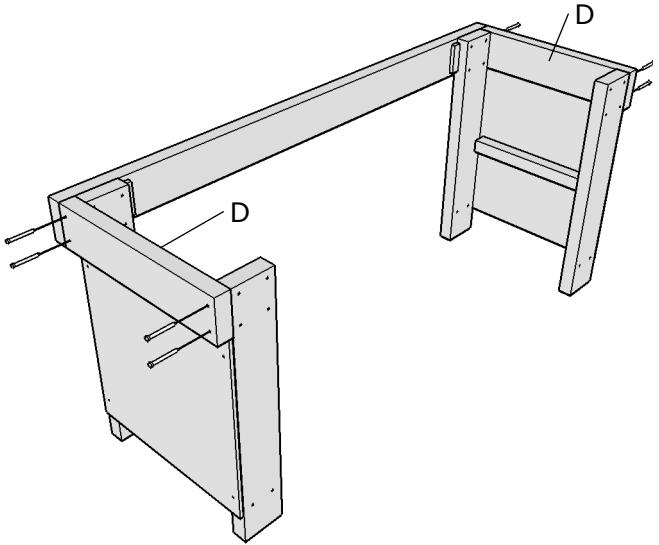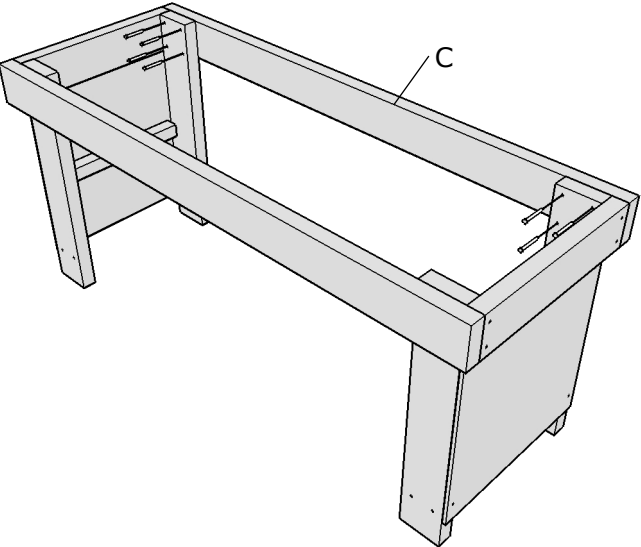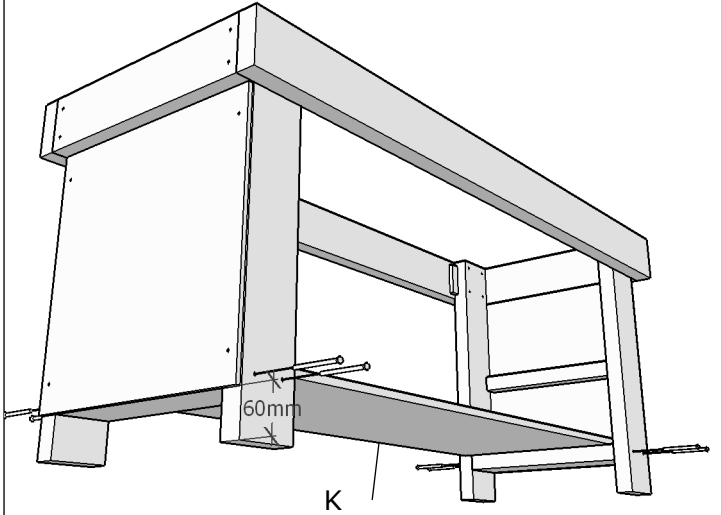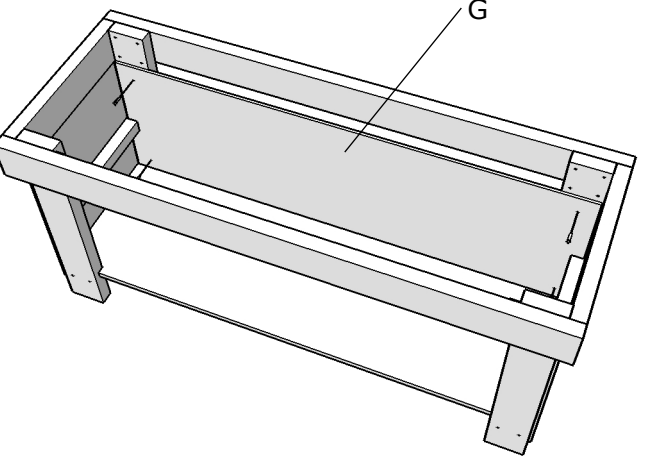
		
1. Use 4,0x50 wood screws.	2. Make sure, that „B“ is touching support without any gap.	3. Use 4,0x50 wood screws.
		
4. Use 4,0x50 wood screws.	5. Use 4,0x70 wood screws. Make the right distance.	6. Use 3,5x25 wood screws.

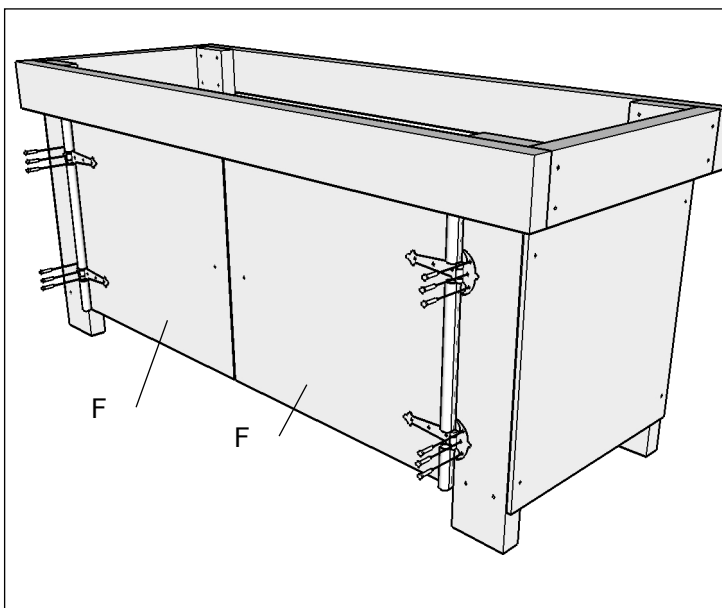


7. Use 3,5x25 wood screws. (to fit hinges to legs)

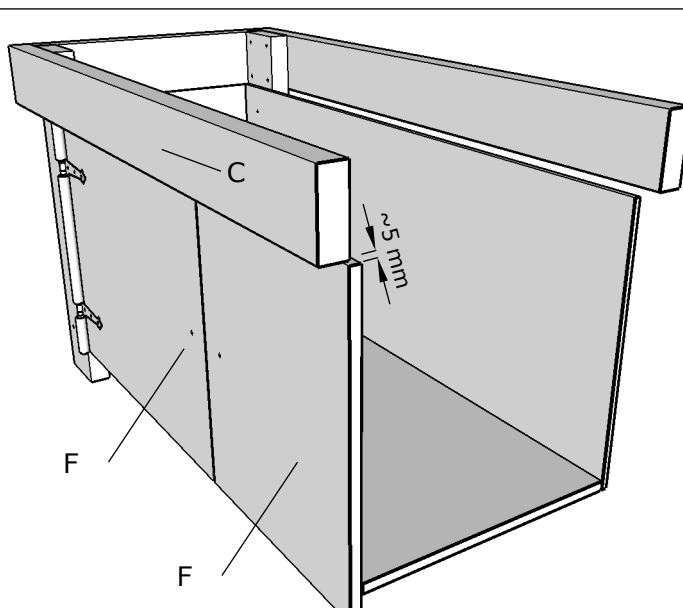


8. Set the right gap. (between part „F“ and part „C“)

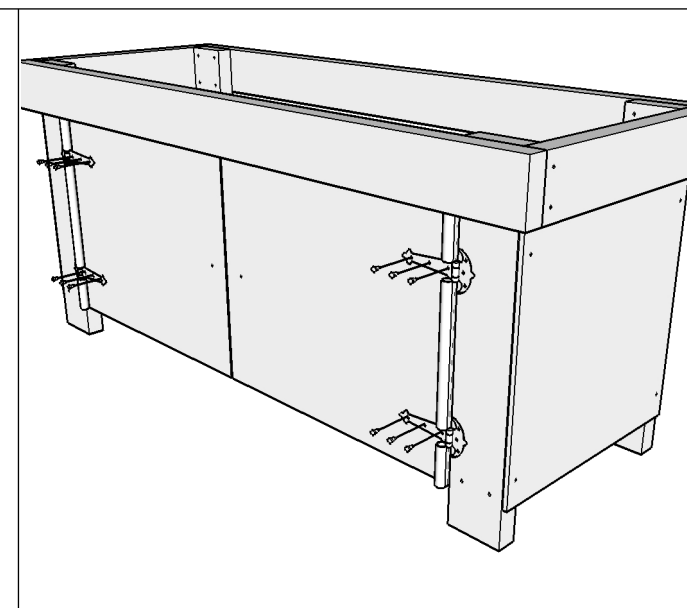


9. Use 3,5x12 wood screws. (to fit hinges to doors)

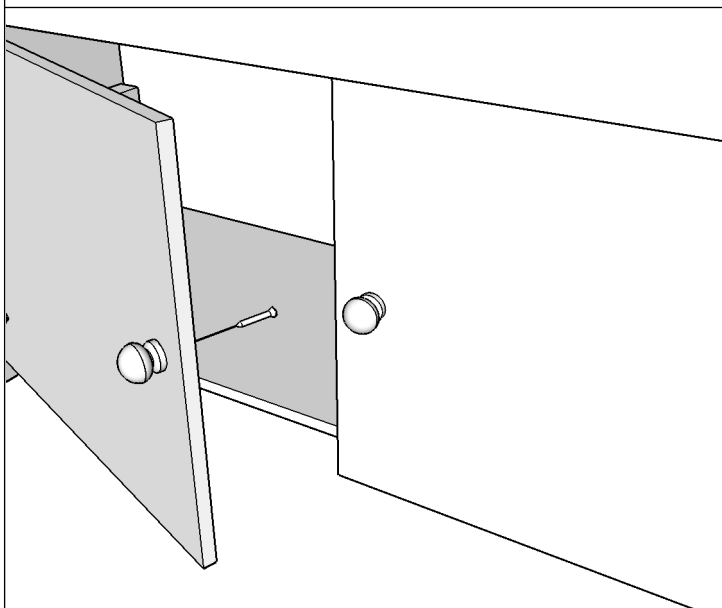


10. Use 4,0x35 wood screws.

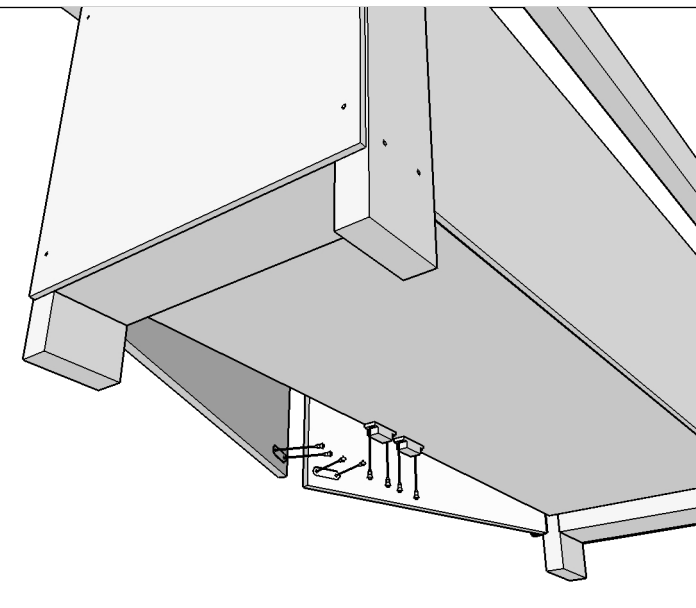


11. Use 3,0x12 wood screws.

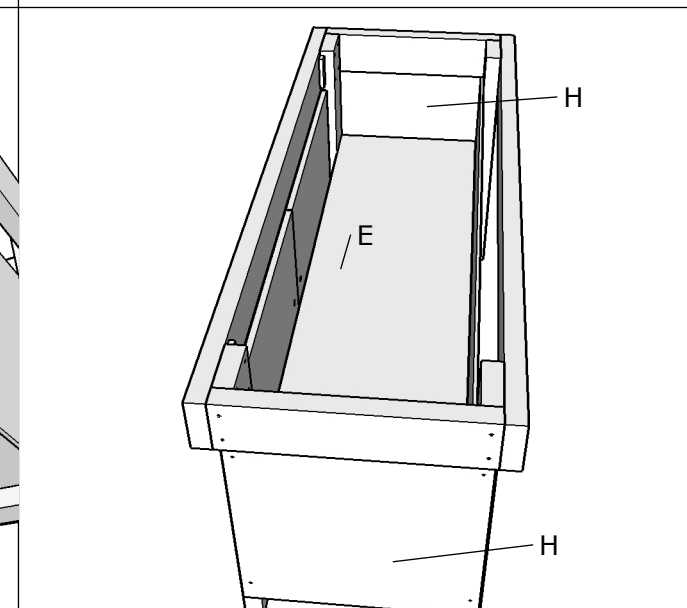


12. Insert part „E“ between parts „H“. Don't use screws.

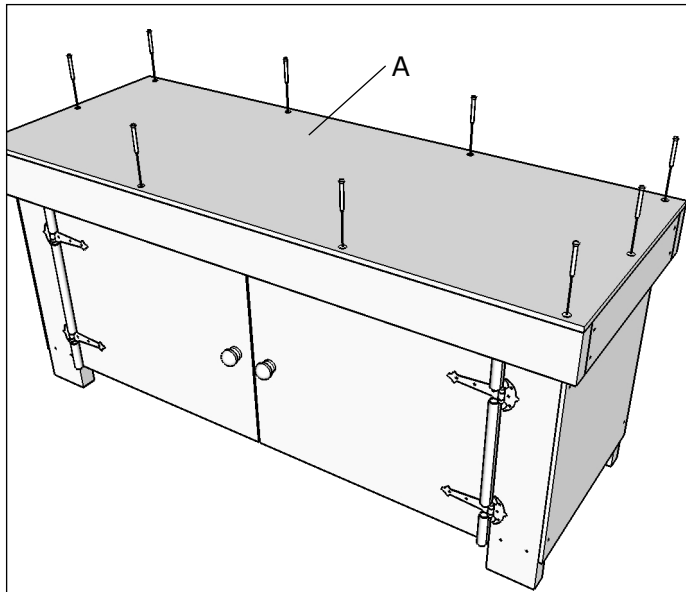

13. Use 3,5x30 wood screws.

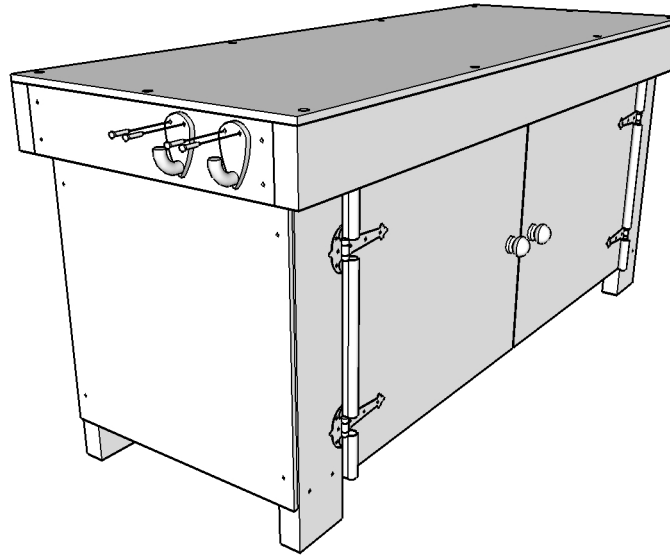

14. Use 3,5x25 wood screws.

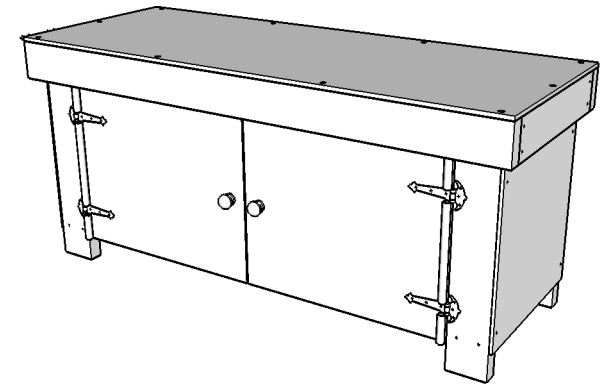

15. DONE !