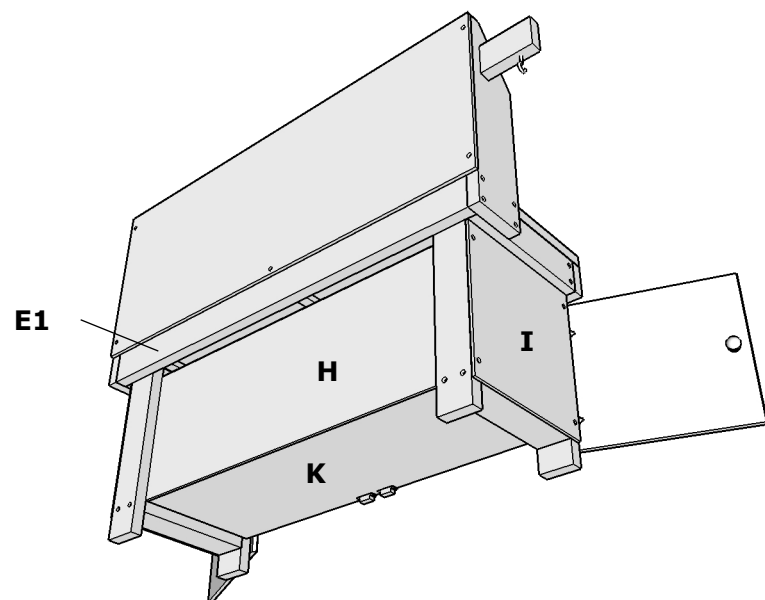
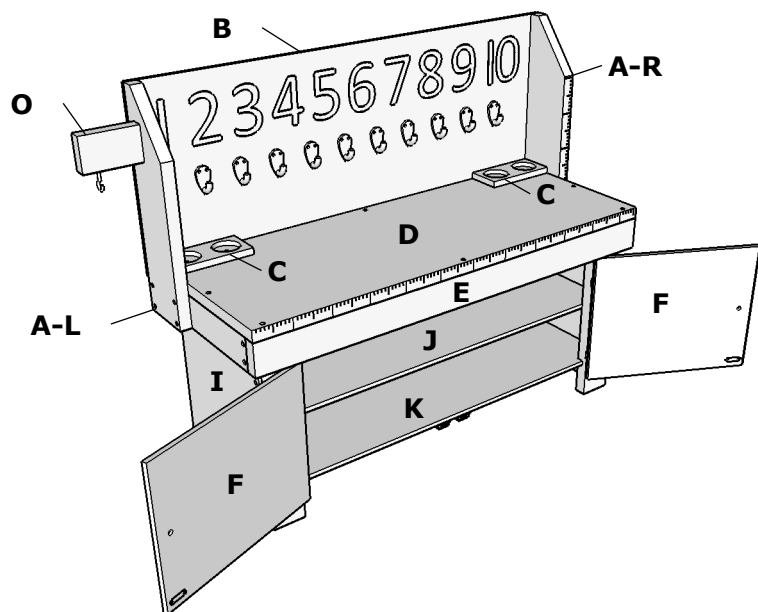




COMPONENTS

2 x wood part – A (left and right)

1 x wood part – B;

2 x wood part – C;

1 x wood part – D;

1 x wood part – E;

1 x wood part – E1;

2 x wood part – F;

2 x wood part – G;

1 x wood part – H;

2 x wood part – I;

1 x wood part – J;

1 x wood part – K;

1 x wood part – O;

1 x bag of screws 3,0x12(9pcs);

1 x bag of screws 3,5x12(35pcs);

1 x bag of screws 3,5x25(32pcs);

1 x bag of screws 4,0x50(38pcs);

1 x bag of screws 4,0x70(15pcs);

1 x bag of screws 4,0x35(2pcs);

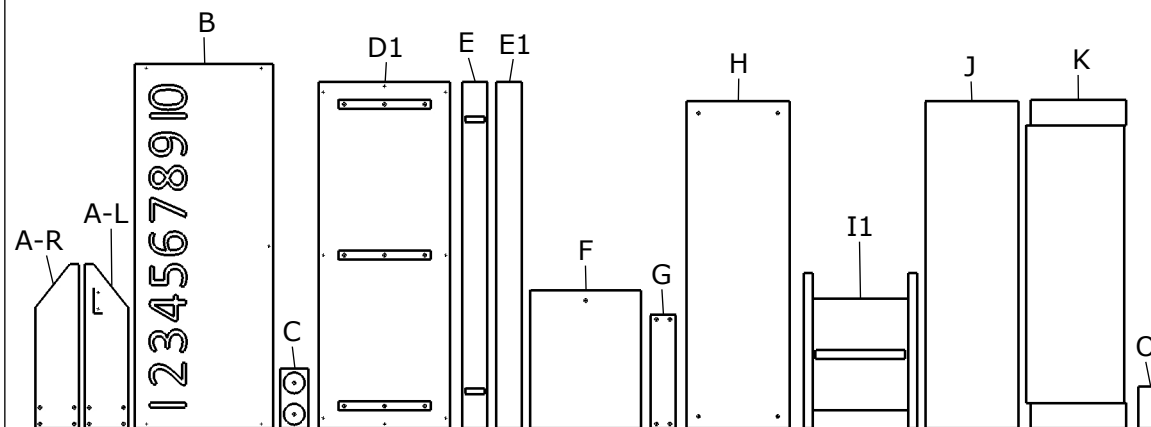
1x bag of plastic hooks (10pcs);

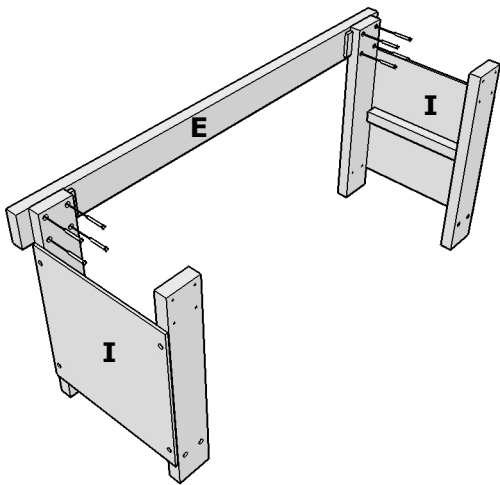
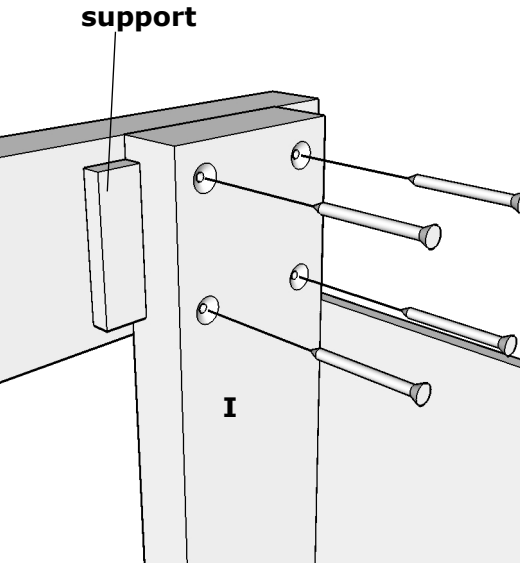
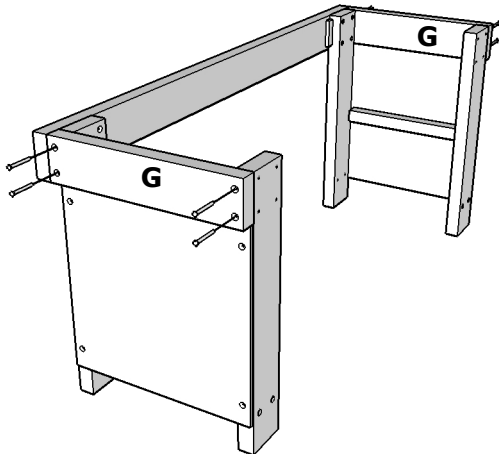
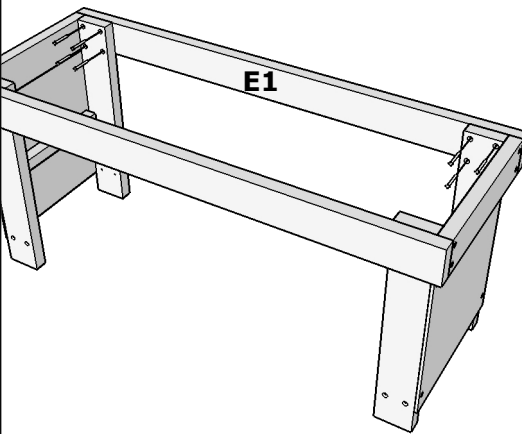
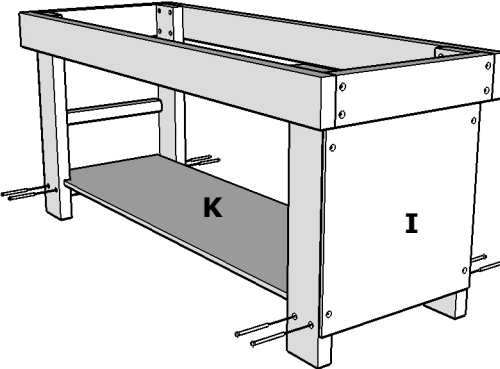
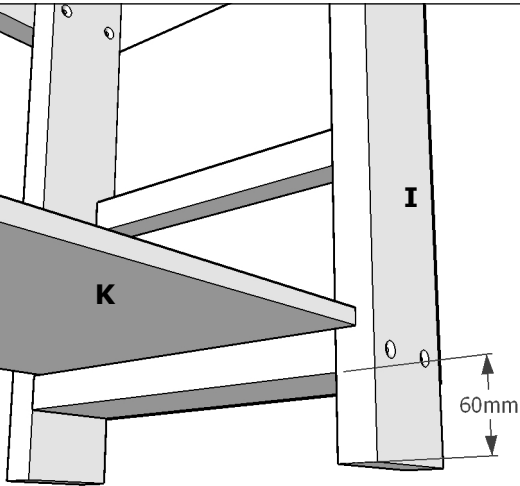
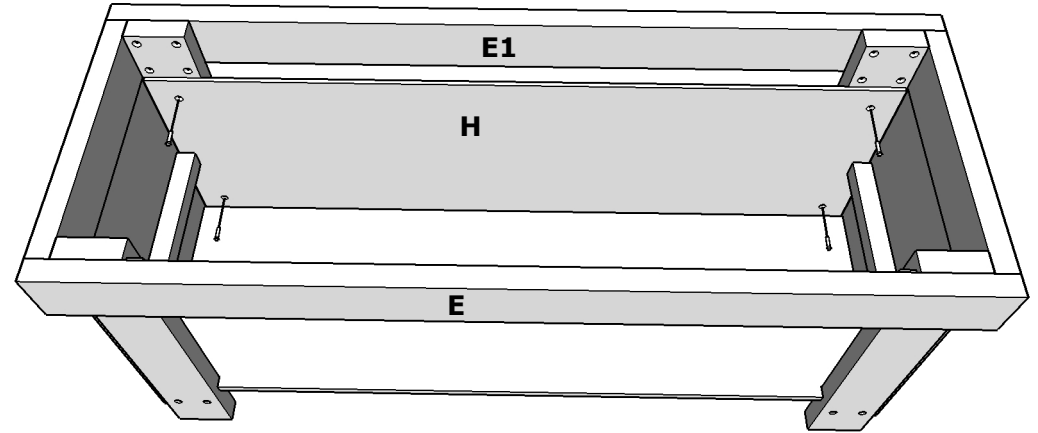
1x bag of wooden handles with screws (2pcs);

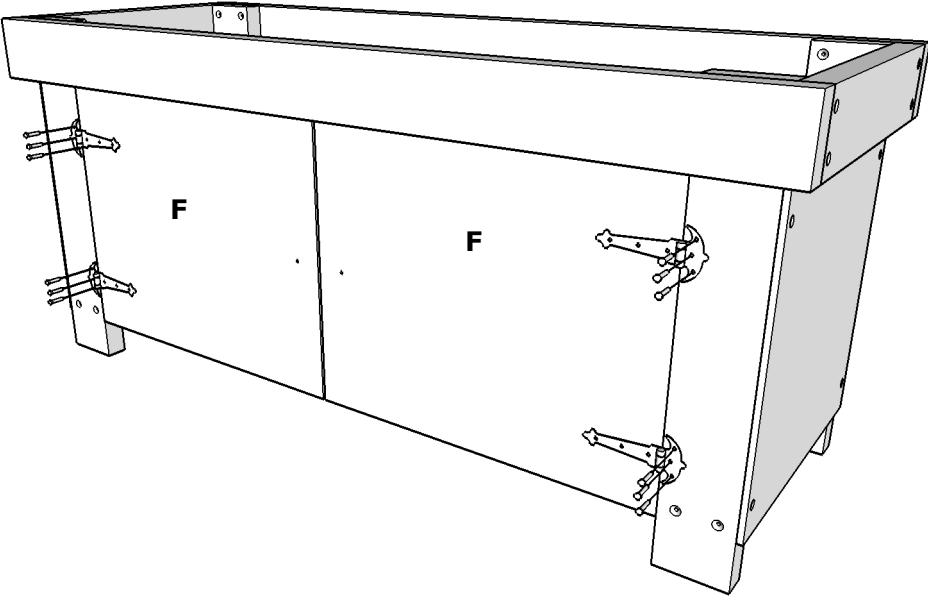
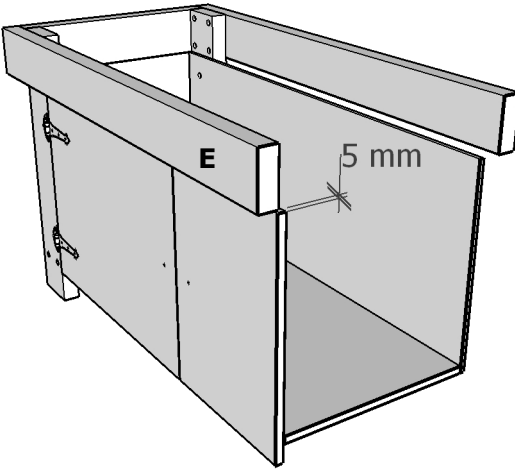
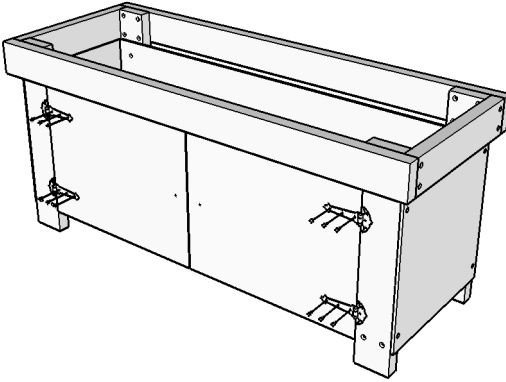
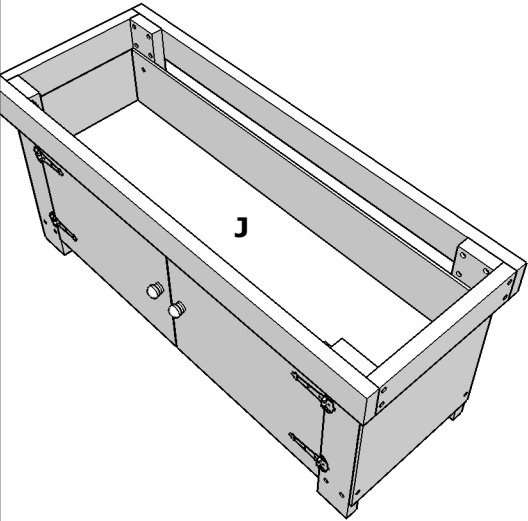
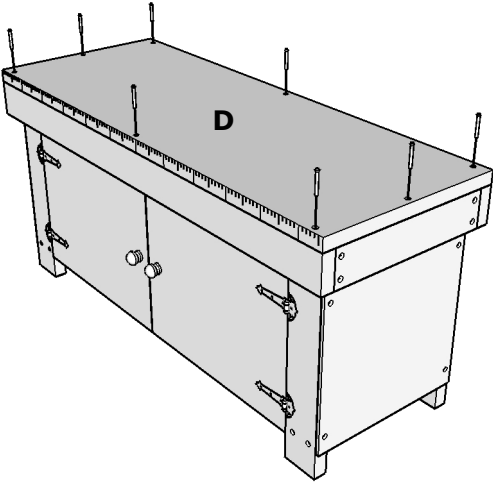
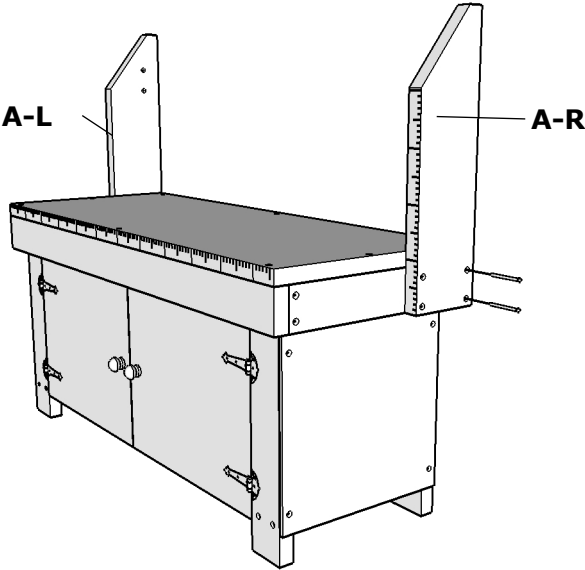
1x bag of magnets (2pcs);

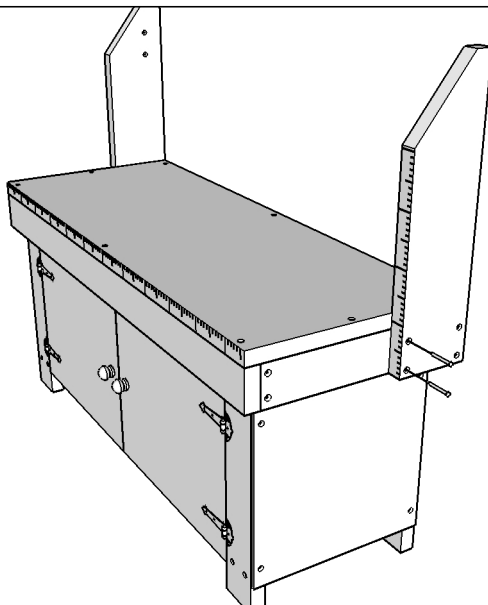
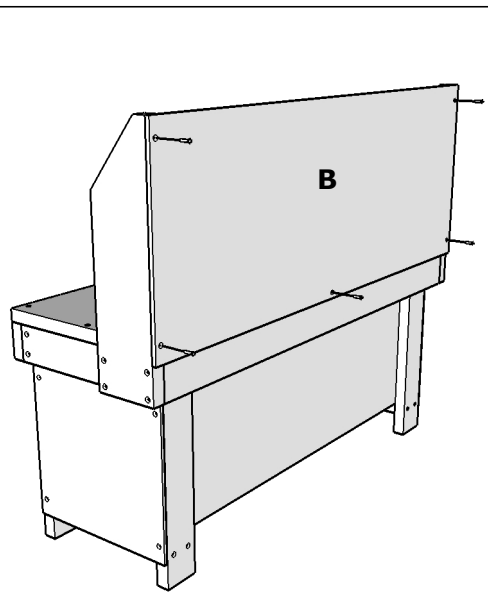
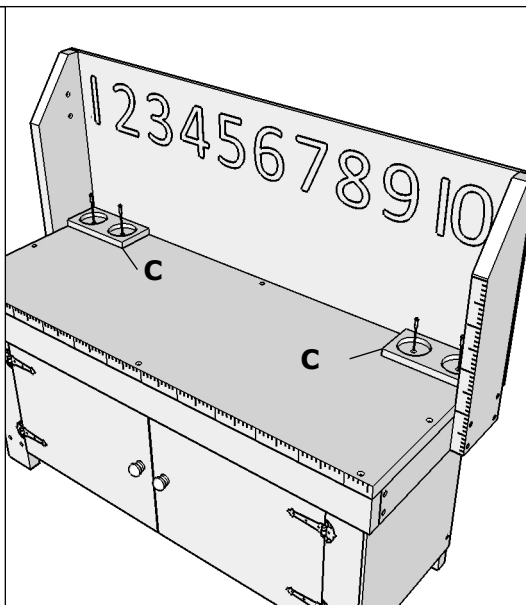
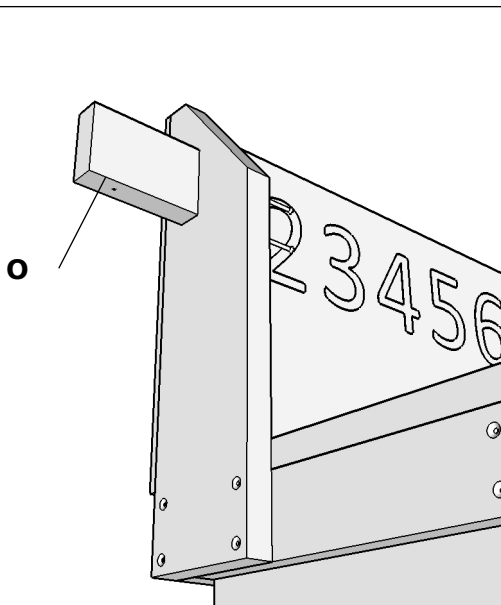
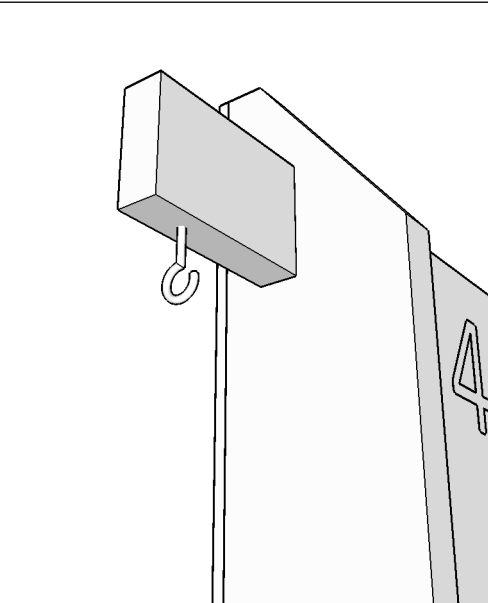
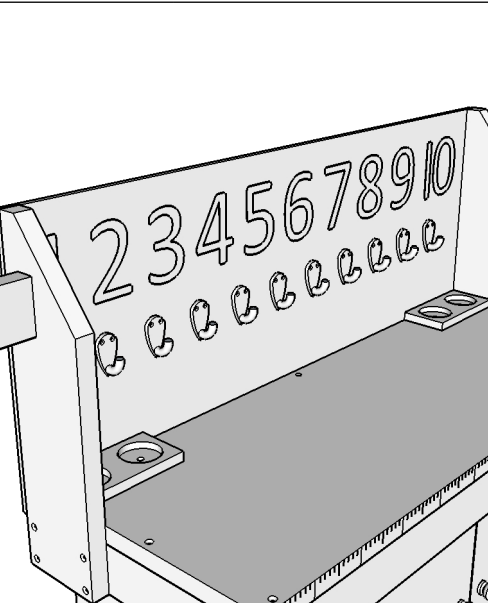
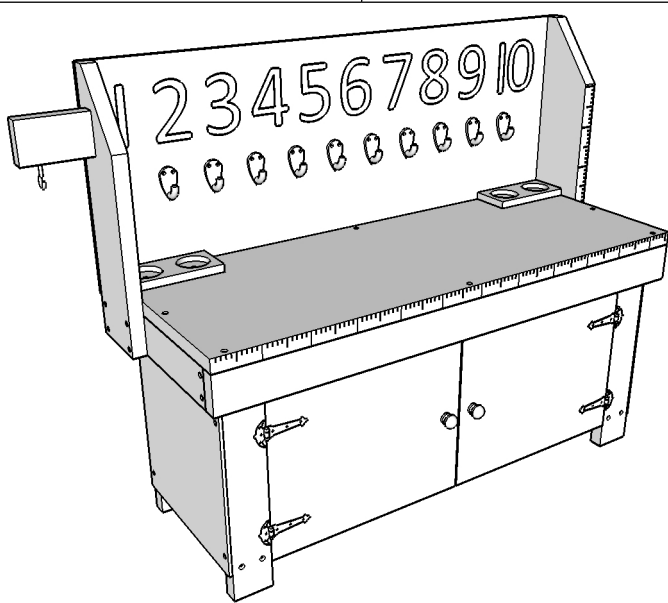
1x bag of hinges (4pcs);

1x screw hook (1pcs);



	 support		
1. Use 4,0x50 screws.	2. Make sure, that I is touching support without any gap.	3. Use 4,0x50 screws to fix part G.	4. Use 4,0x50 screws to fix part E1.
	 60mm		
5. Use 4,0x70 screws to fix part K.	6. Make sure, to fix part K 60mm from the bottom.	7. Use 3,5x25 screws to fix part H.	

		
8. Use 3,5x25 wood screws. (to fit hinges to legs)	9. Between doors and part E should be about 5mm gap.	10. Use 3,5x12 screws to fix hinges to doors.
		
11. Insert part J. No screws needed.	12. Use 4,0x50 screws.	13. Use 4,0x70 screws.

			
14. Use 4,0x50 screws.	15. Use 3,5x25 screws to fix part B.	16. Use 3,5x25 screws to fix part C.	17. Use 4,0x70 screws fo fix part O. (hole facing down)
			
18. Screw in the screw hook in to premade hole.	19. Fix plastic hooks using 3,5x12 screws.	DONE !	