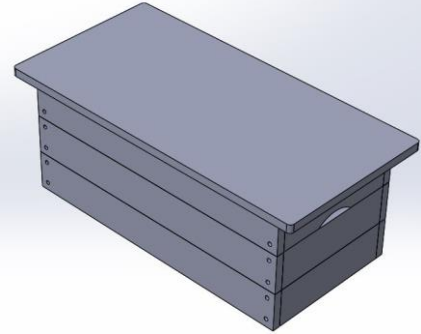
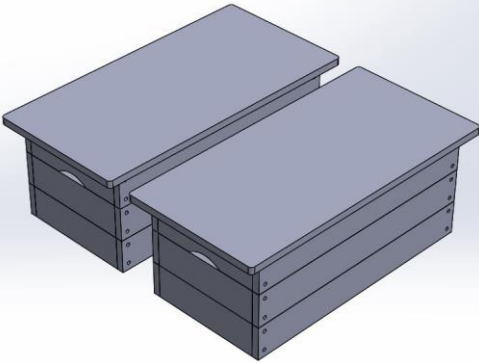


31414 – Natural Carry Benches (2Pk)

Assembly Instructions

Components:	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty
	A.	End Panel	4	B.	Side Panel (4 holes)	8	C.	Side Panel (2 holes)	4	D.	Grass Top	2
	E.	35mm Screws	48									

1. Check you have all the components.				2. Position parts A & B as shown. Fix in place using 2x35mm screws.				3. Position part A as shown. Fix in place using 2x35mm screws.				4. Position part B as shown. Fix in place using 4x35mm screws.			
5. Position part C as shown. Fix in place using 2x35mm screws.				6. Repeat steps 2-5.				7. Position the completed base section squarely on part D as shown.				8. Fix in place using 4x35mm screws.			

		
9.	10. Repeat steps 2-8.	11. Enjoy.

Email us your Bright  Ideas
ideas@cosydirect.com

We would love to hear your feedback on our products & assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com