


LUNCHBOX TROLLEY (C1197)

ASSEMBLY INSTRUCTIONS



Contents

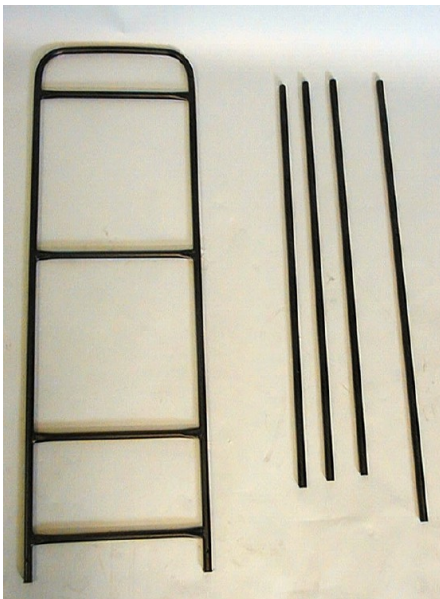

2 x side assemblies (2 x fixing holes to rear of trolley)
2 x short tubes with fixing holes (cross connecting to rear)
1 x short tube (cross connecting to front)
1 x long tube (rear vertical support)




1 x top basket (without rear loop)
2 x lower baskets (with rear loops)



8 x 30mm black bolts
2 x 25mm bolts
2 x lock nuts



M10 Spanner
M4 Allen Key

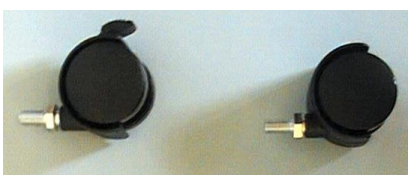

1 x locking castor
3 x non-locking castors
Pre-assembled

Assembly

**Tools Required – M4 Allen key
(provided); Flat bladed screwdriver**




Locate 30mm bolt through lower fixing hole at rear of side frame and screw into insert thread in the end of short cross tube (with centre fixing hole) over insert. Ensure the centre fixing hole is facing upwards and tighten bolt



Repeat to locate the top cross tube to the top of the side frame (Ensure the centre hole in the cross tube is in line with the bottom cross tube hole).

Repeat to locate the front cross tube (without centre fixing tube) to the bottom of the side frame

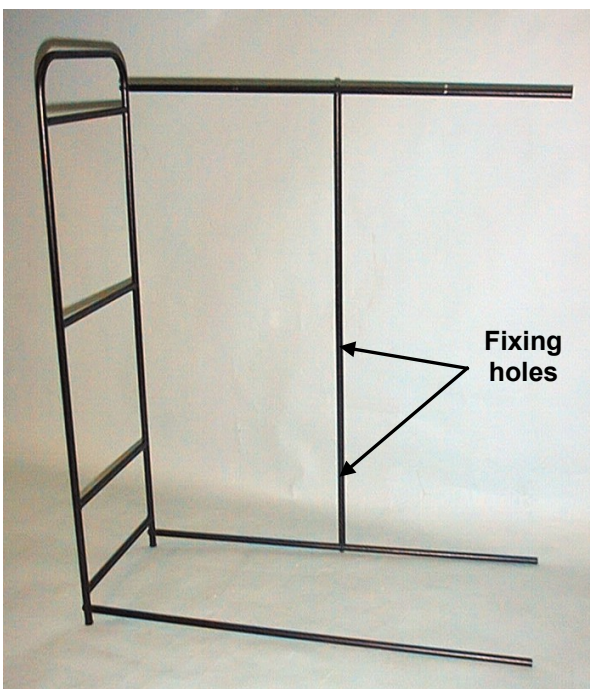

Repeat the above instructions to locate the long rear vertical support tube to the rear cross tubes.

Ensure the 2 holes through the tube are at the lower part of the assembly.



Repeat the above instructions to locate the 2nd side to the 3 cross tubes.



Sit all 3 Baskets onto the cross rails as shown. The top basket does not have the rear 'u' hook.



Using 2 x 25mm Bolts and the nuts secure the bottom and middle baskets to the back tube as shown.

After assembly is complete check all nuts and bolts to ensure