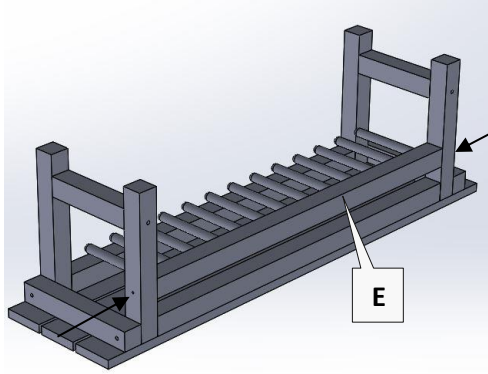
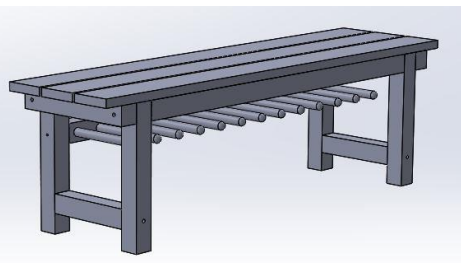


35802 – Camborne Wellie Bench (2pk)

Assembly Instructions

Components:	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Tools Required
	A.	Bench Top	2	B.	Leg (2pre-drilled holes)	4	C.	Leg (3 pre-drilled holes)	4	D.	Brace	4	Screwdriver
	E.	Peg Rail	2	F.	Screws	20							

1. Check you have all the components.				2. Position part A and one of part B as shown, ensuring the pre-drilled holes are in the correct location.				3. Screw into place in the direction indicated through the pre-drilled holes, using 1x screw.				4. Repeat steps 2 and 3 with another part B, using 1x screw.			
5. Position one of part C as shown, ensuring the pre-drilled holes are in the correct location. Screw into place in the direction indicated through the pre-drilled holes using 1x screw.				6. Repeat step 5 with remaining part C, using 1x screw.				7. Position one of part D as shown. Screw into place in the directions indicated through the pre-drilled holes using 2x screws.				8. Repeat step 7 with remaining part D, using 2x screws.			

		
9. Position part E as shown. Screw into place in the directions indicated through the pre-drilled holes using 2x screws.	10. Repeat steps 2-9 with the second wellie bench.	11. Done. Enjoy! Display items not included.