



36799 – Jumping Off Slope

Assembly Instructions


Components:	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty		Tools Required
	A.	Base	1	B.	LH Front Leg	1	C.	RH Front Leg	1	D.	Back Leg	2		Electric Drill
	E.	Platform	1	F.	Slope	1	G.	70mm Screws	16					

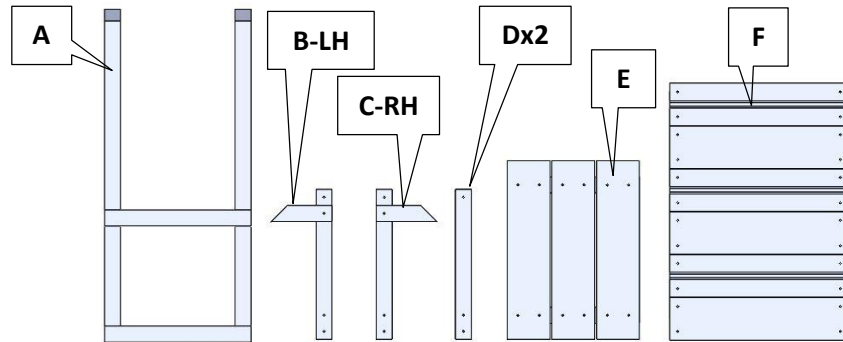


1. Check you have all your components.

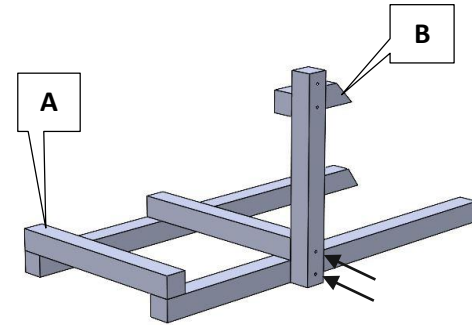


2. Position part A and B as shown. Fix together using 2x 70mm screws as shown.

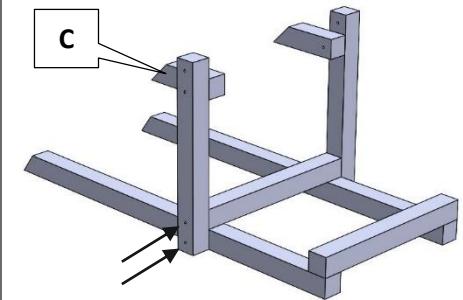


3. Position part C as shown. Fix together using 2x 70mm screws as shown.

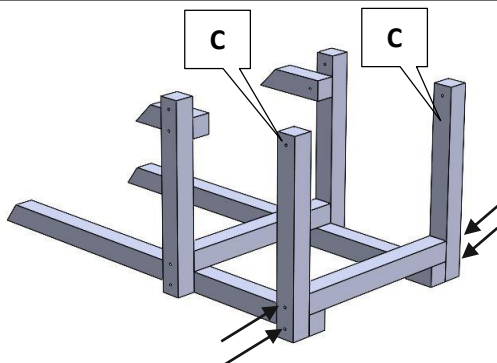


4. Position both of part C as shown and fix in place using 4x 70mm screws in the directions indicated.

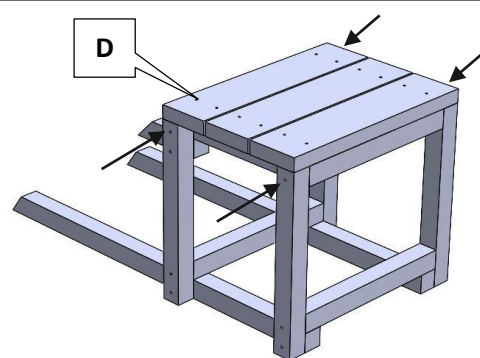

5. Position part D as shown. Fix in place using 4x 70mm screws in the directions indicated.

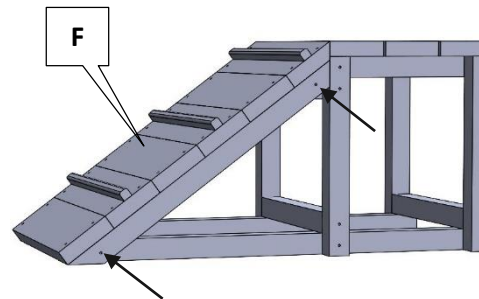

6. Position part F as shown. Fix in place using 2x 70mm screws in the directions indicated.

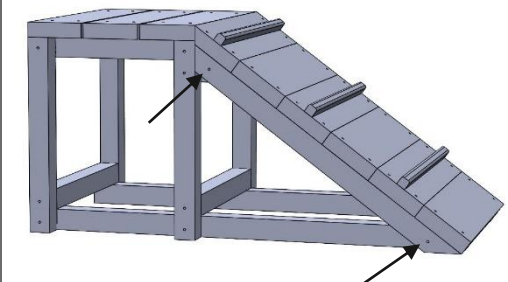

7. Repeat step 8 on the other side of the product, using 2x 70mm screws as shown.



8. Done. Enjoy!

Email us your Bright Ideas
ideas@cosydirect.com

