



48678 – Mini Deep Tuff Stand & Tray

Assembly Instructions


Components:	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty
	A.	Cross Bar 1	1	B.	Cross Bar 2 (with pilot hole)	1	C.	Leg	4	D.	50mm Countersunk Flathead Hex Screw	8
	E.	40mm Screw	1	F.	Tray	1						

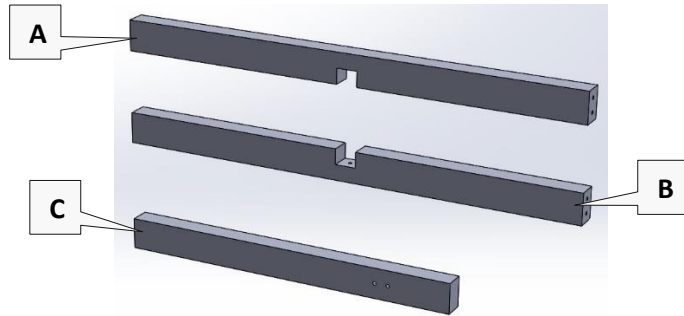


1. Check you have all the components.

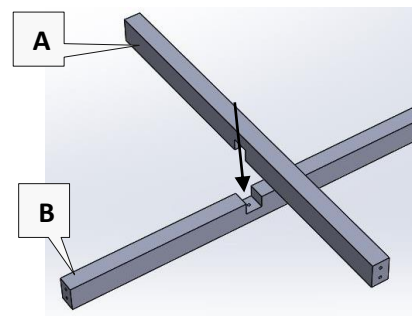


2. Position parts A & B as shown.

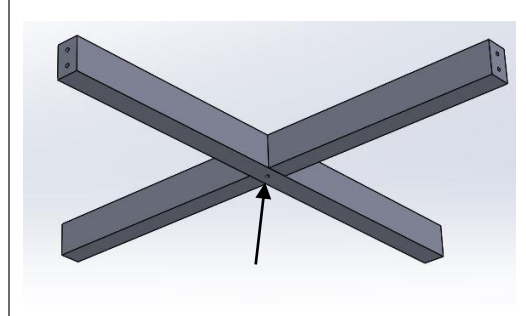


3. Fix in place using 1x40mm screw.

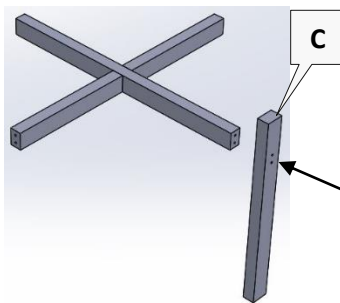

4. Position part C as shown.

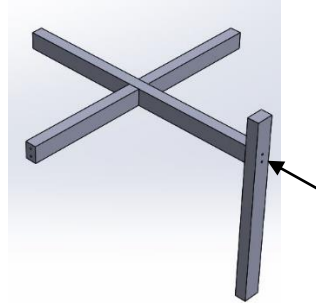

5. Fix in place using 2x50mm Countersunk Flathead Hex Screws.

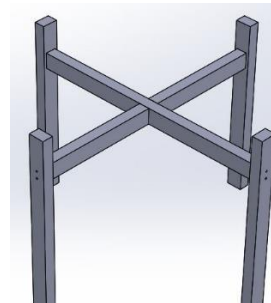

6. Repeat step 5.



7. Done.