



49484 – Decking Path

Assembly Instructions


Components:												
Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Tools Required
A.	Base	1	B.	Top Panel	1	C.	Straight Leg	2	D.	Corner Leg	4	Screwdriver
E.	70mm Screws	22	F.			G.			H.			

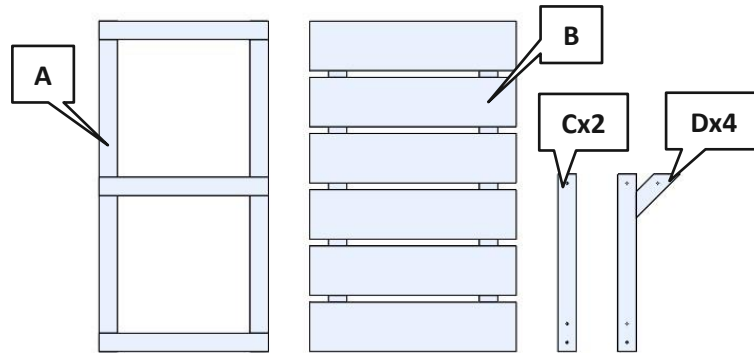


1. Check you have all the components.

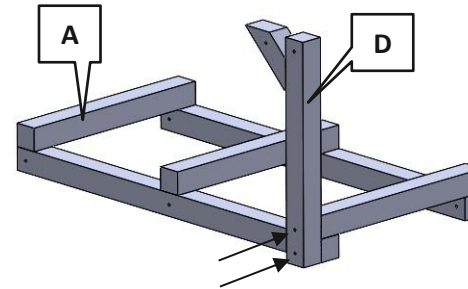


2. Position part A and one of part D as shown. Fix together using 2x 70mm screws.

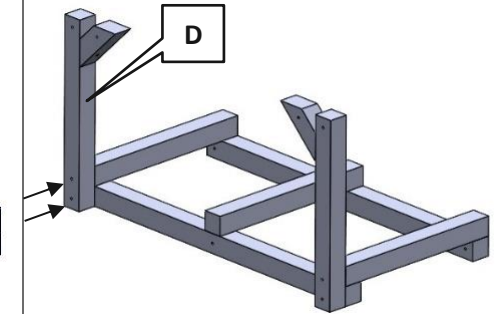


3. Position another of part D as shown and screw in place using 2x 70mm screws as shown.

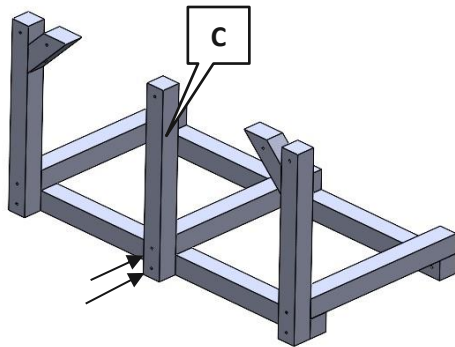

4. Position part C as shown and screw in place using 2x 70mm screws as indicated.

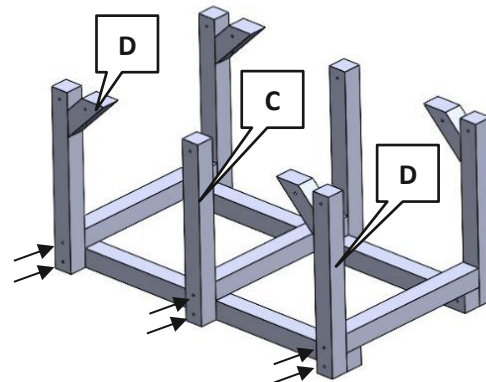

5. Repeat steps 2-4 with the remaining parts C and D, using 6x 70mm screws in the direction shown.

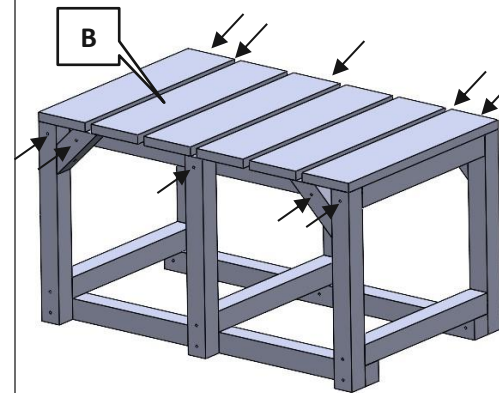

6. Position part B as shown. Screw in place using 10x 70mm screws in the directions indicated.



7. Done. Enjoy!