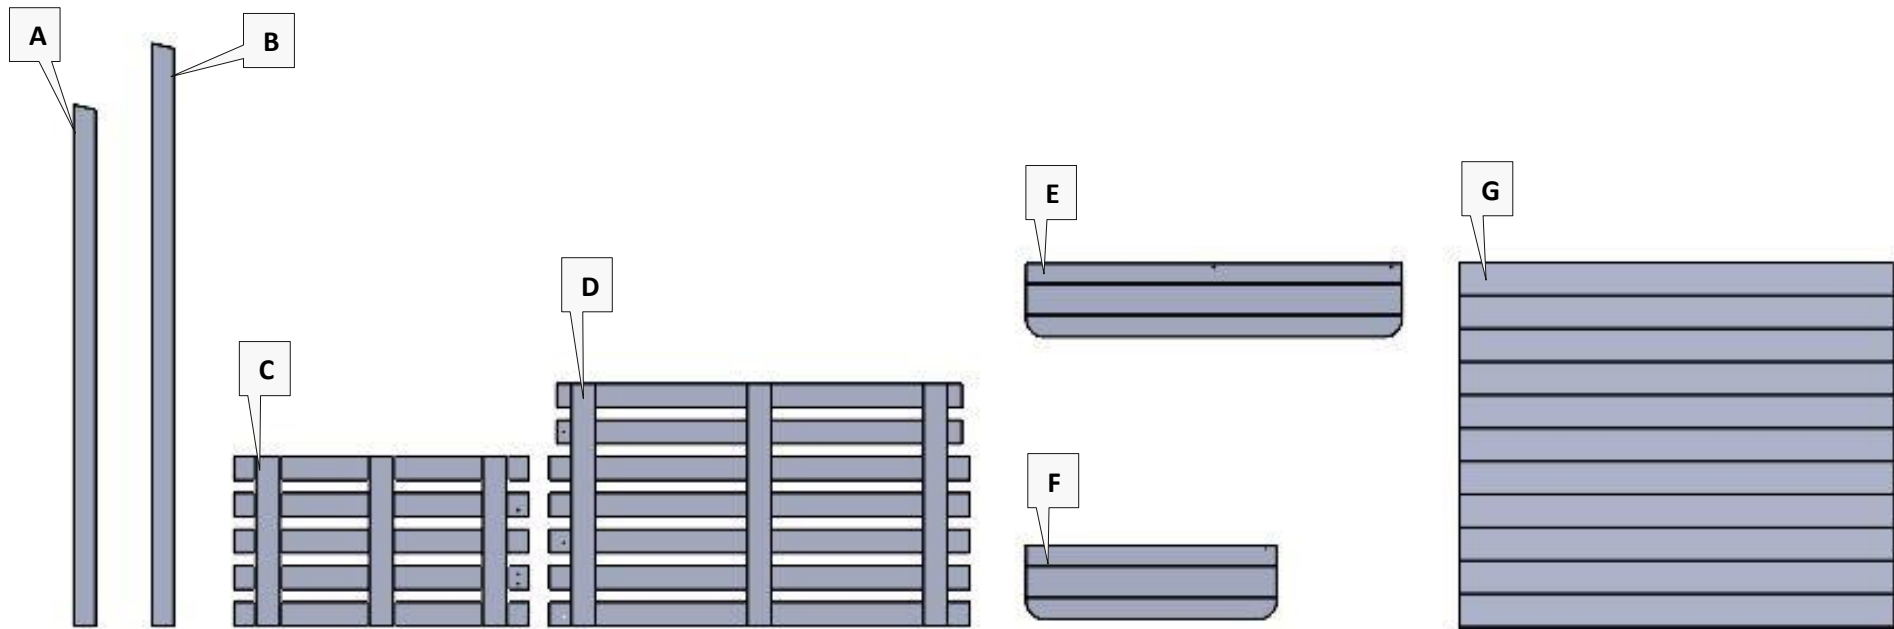


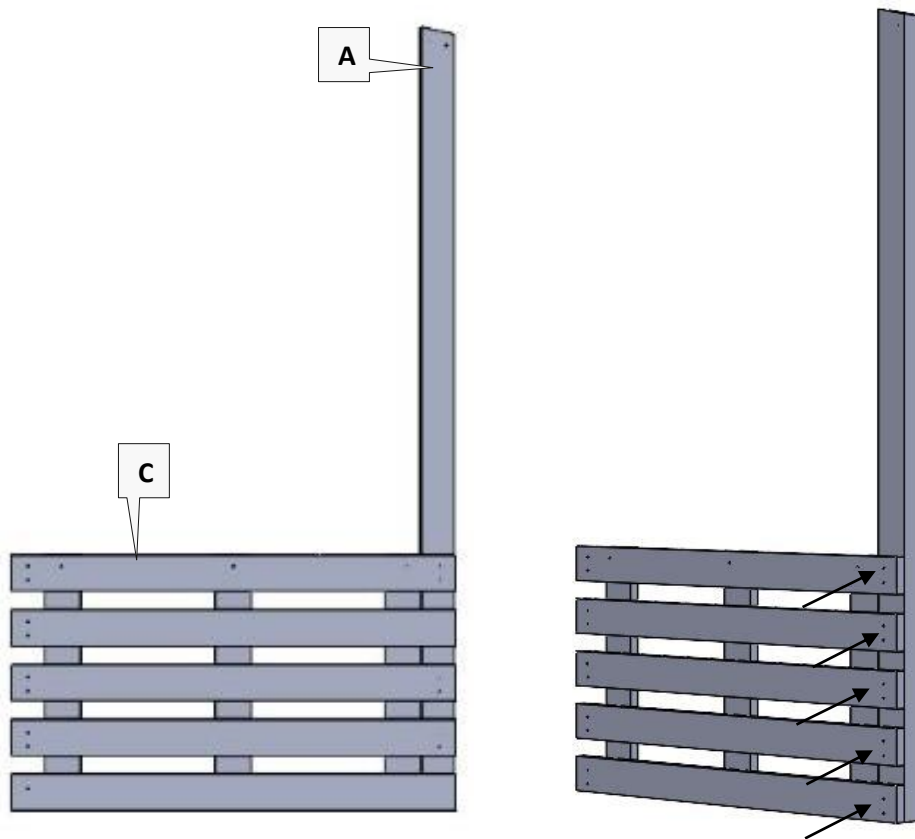
50074 – Grays Multi Height Shelter

Assembly Instructions

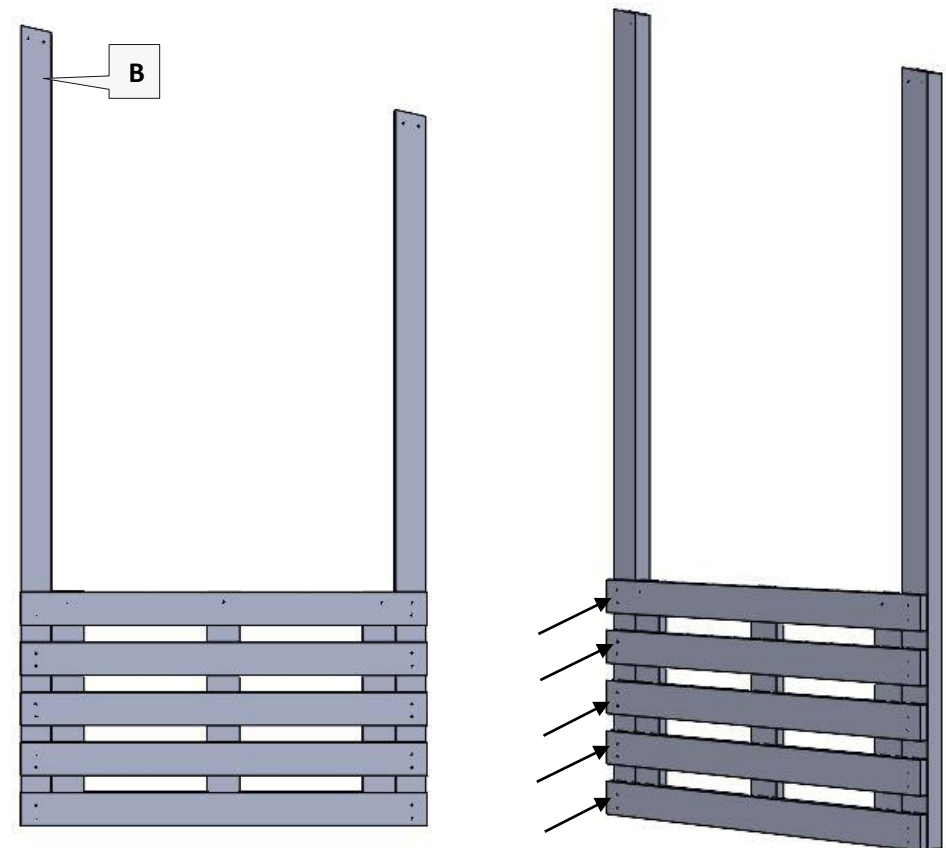
Components:		Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Tools Required
		A.	Front Post	2	B.	Back Post	2	C.	Side Panel	2	Electric Drill
		D.	Front Panel	1	E.	Front Ledge	1	F.	Side Ledge	2	
		G.	Roof Panel	1	H.	70mm Screws	17	I.	35mm Screws	63	



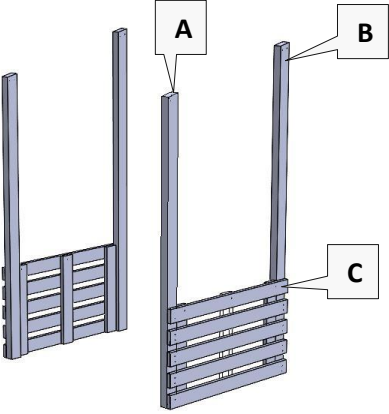
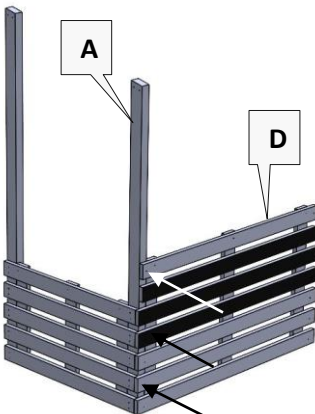
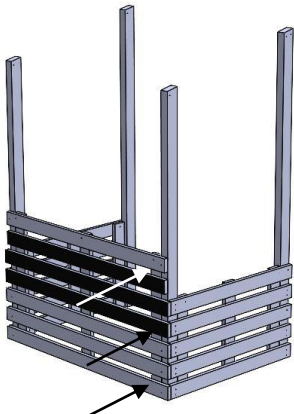
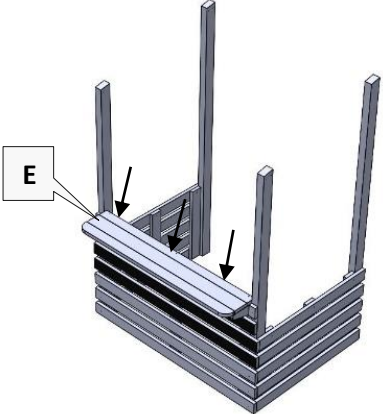
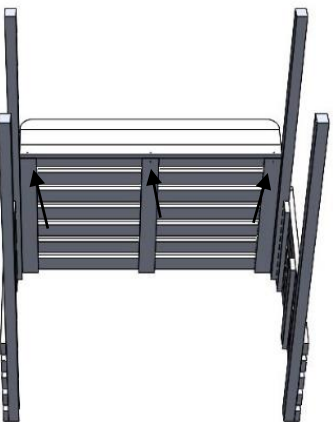
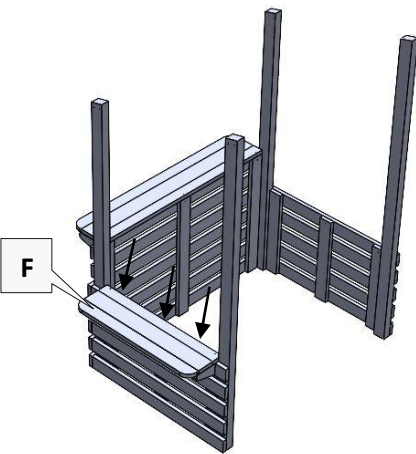
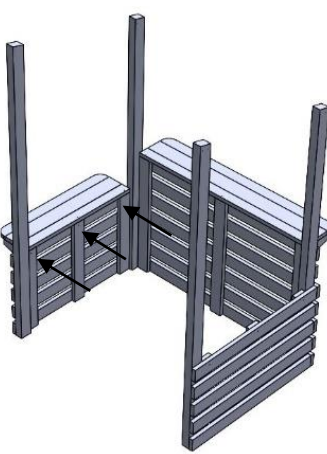
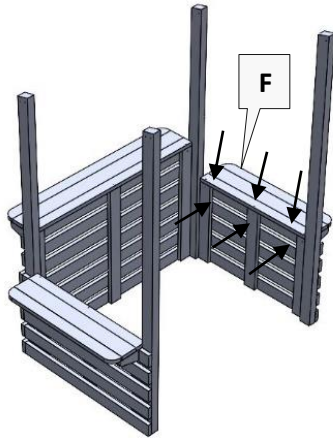
1. Check you have all the components.

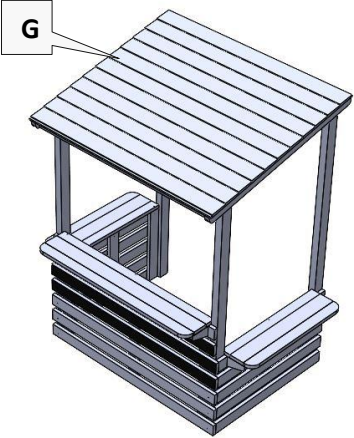
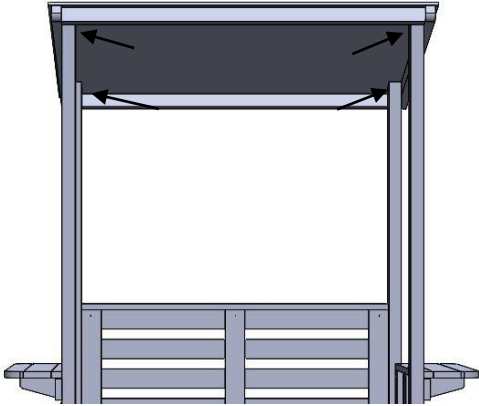


2. Position parts A & C as shown. Fix in place using 10x 35mm screws as indicated.



3. Position part B as shown. Fix in place using 10x 35mm screws as indicated. (LH panel complete)

			
4. Repeat steps 2 & 3 to create a mirrored version of the LH side panel. (RH panel complete)	5. Position part D & LH side panel as shown. Fix in place using 7x 35mm screws as indicated.	6. Position part RH side panel as shown. Fix in place using 7x 35mm screws as indicated.	7. Position part E as shown. Fix in place using 3x 35mm screws as indicated.
			
8. Fix in place using 3x 70mm screws as indicated.	9. Position part F as shown. Fix in place using 3x 35mm screws as indicated.	10. Fix in place using 3x 70mm screws as indicated.	11. Repeat steps 9 & 10.

		
12. Position part G as shown.	13. Fix in place using 8x 70mm screws as indicated.	14. Done.