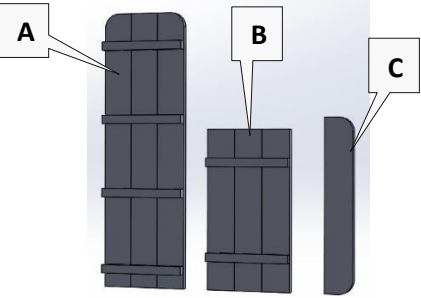
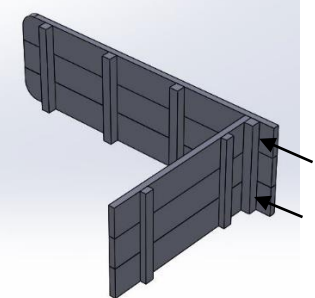
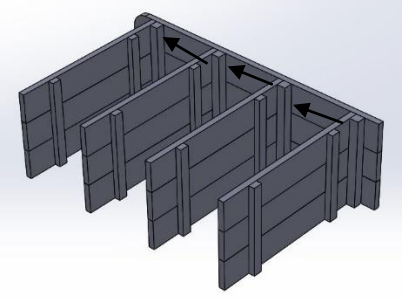
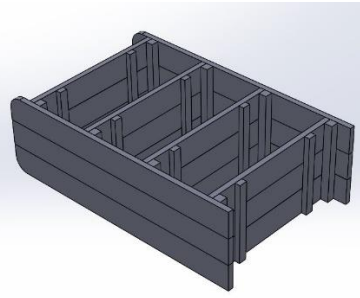
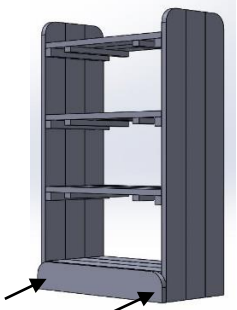
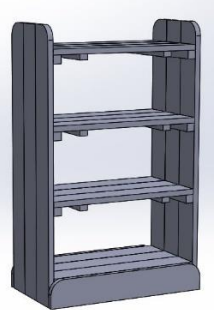


50188 – Slim Rustic Shelves

Assembly Instructions

Components:												
Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	Part	Name	Qty	
A.	Side Panel	2	B.	Shelf	4	C.	Base Plank	2	D.	40mm Screws	32	

							
1. Check you have all the components.		2. Position part A & 1x part B as shown. Fix in place using 3x40mm screws.		3. Position remaining parts B as shown. Fix in place using 9x40mm screws.		4. Position remaining part A as shown. Repeat steps2-4.	
							
5. Position 1x part C as shown. Fix in place using 4x40mm screws.		6. Position remaining part C as shown. Fix in place using 4x40mm screws.		7. Done.		8. Display items not included.	

Email us your  Bright Ideas
ideas@cosydirect.com

We would love to hear your feedback on our products & assembly instructions. Also if you have any problems assembling our products then don't hesitate to ask Al:

alastair@cosydirect.com