
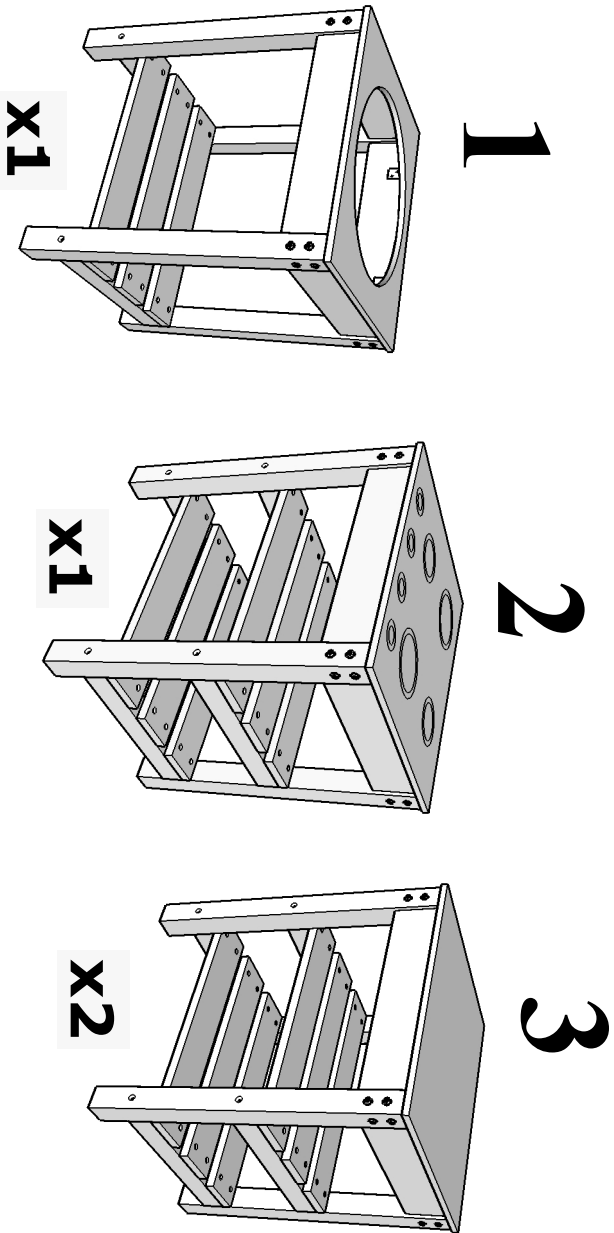
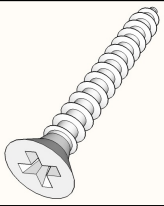



51011 - Bargain Basement Kitchen Set (4pk)


ASSEMBLY
INSTRUCTION




3,5x12	x32
3,5x25	x32
4,0x40	x84
5,0x100	x28
	
Wood screw	

x16	x64	x1
		
Bracket	6,0x90 screw	Screwdriver bit T30


*spare pieces possible

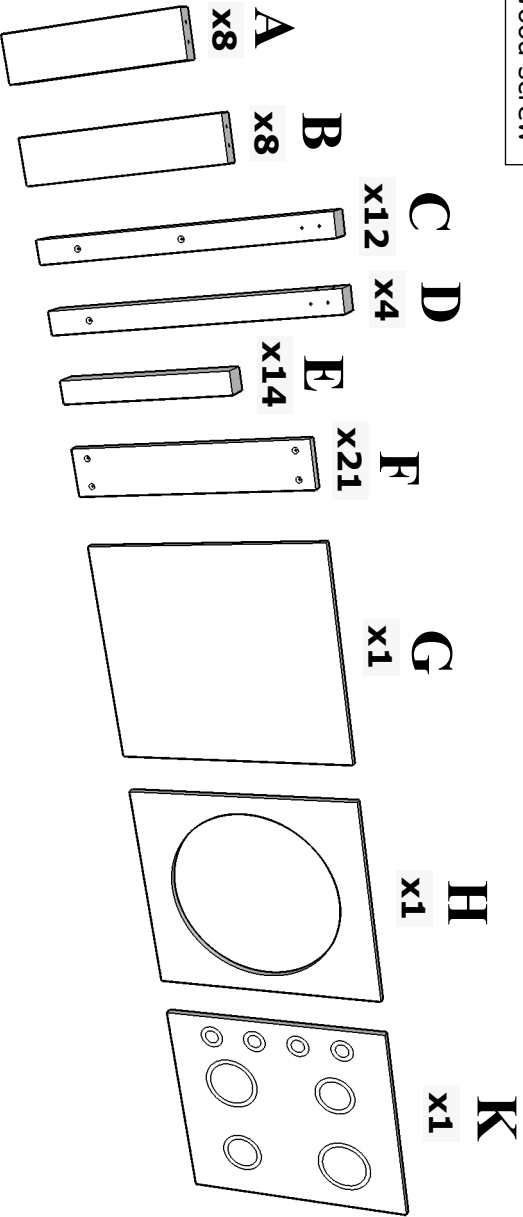


4. Use 3,5x12 screws to mount brackets to worktop

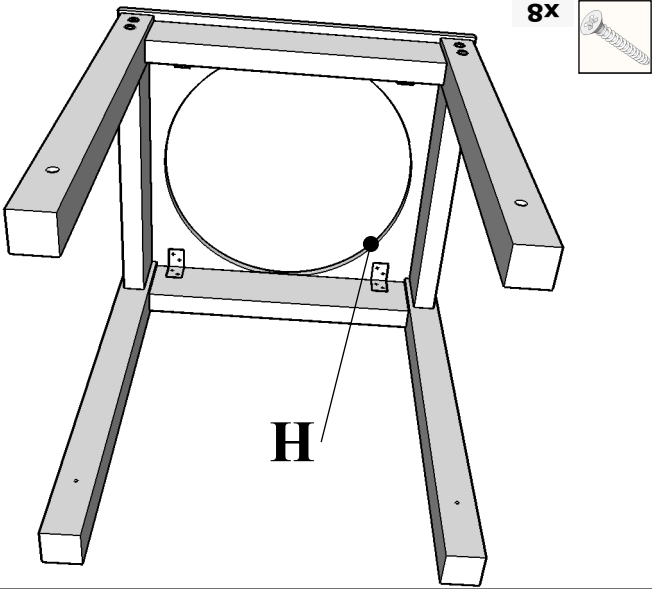


1. Use 6,0x90 screws

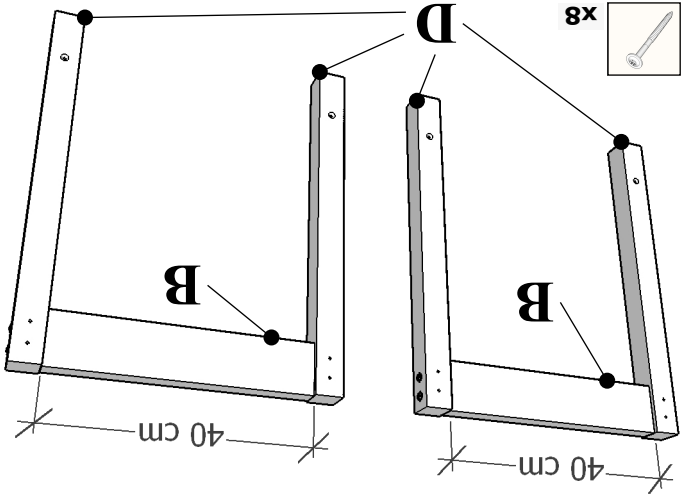


5. Use 4,0x40 screws

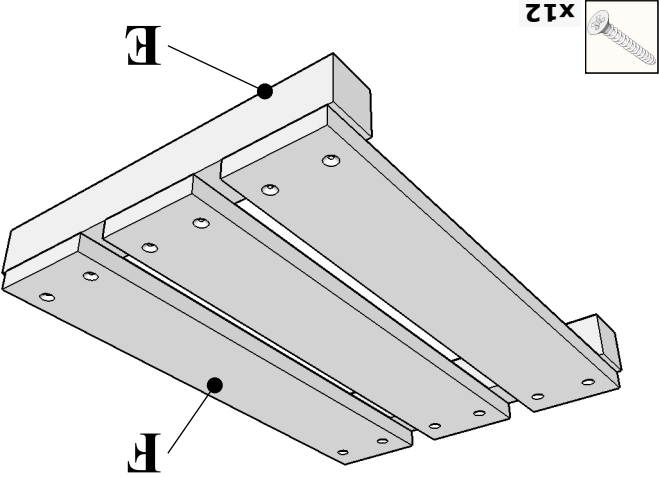


2. Use 6,0x90 screws

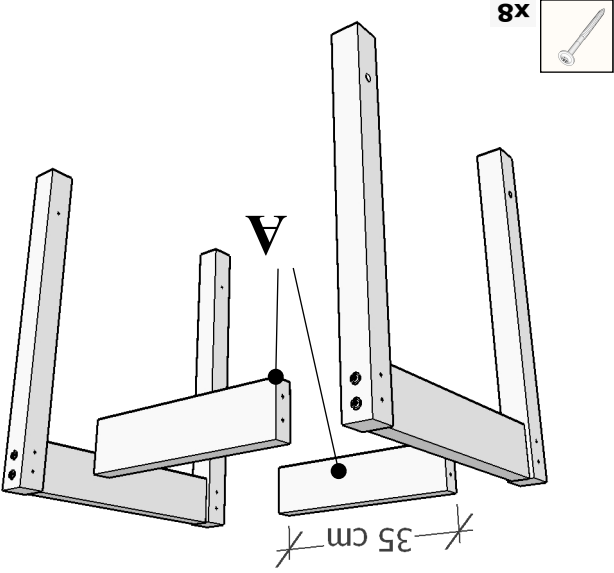


6. Use 5,0x100 screws

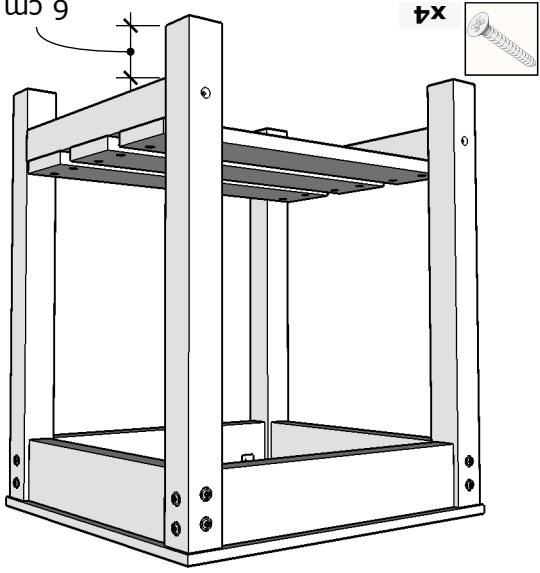


3. Use 3,5x25 screws to mount brackets to frame

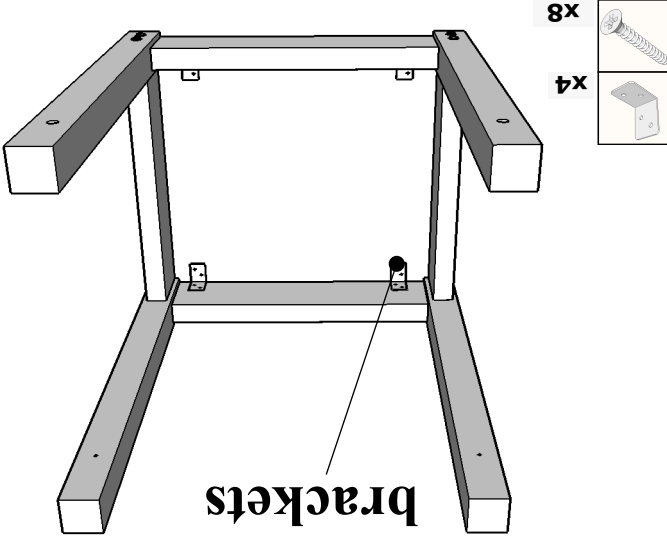


2

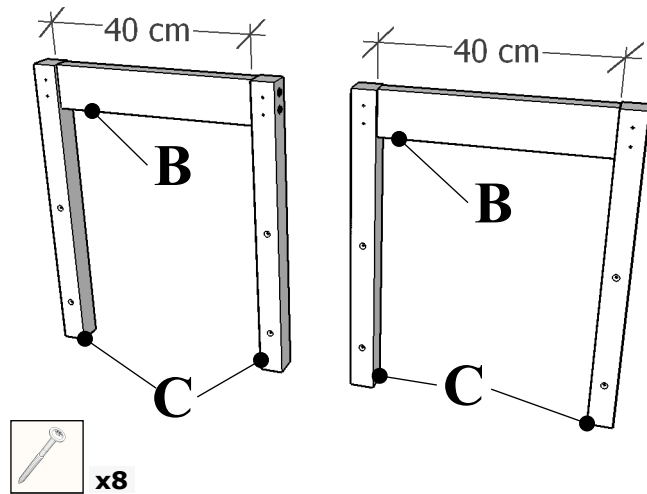


1. Use 6,0x90 screws

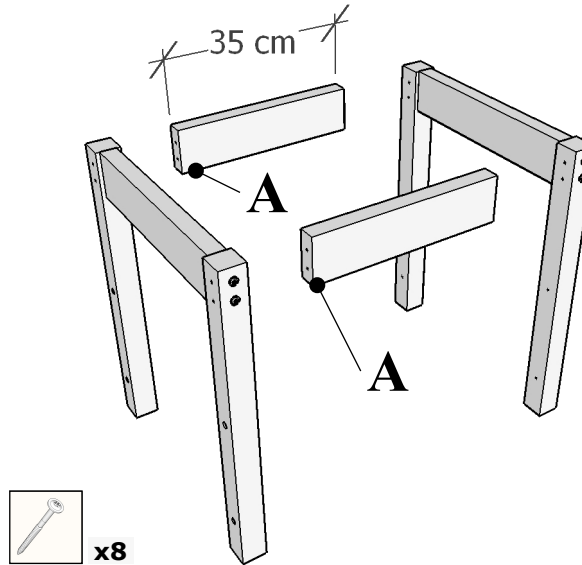


2. Use 6,0x90 screws

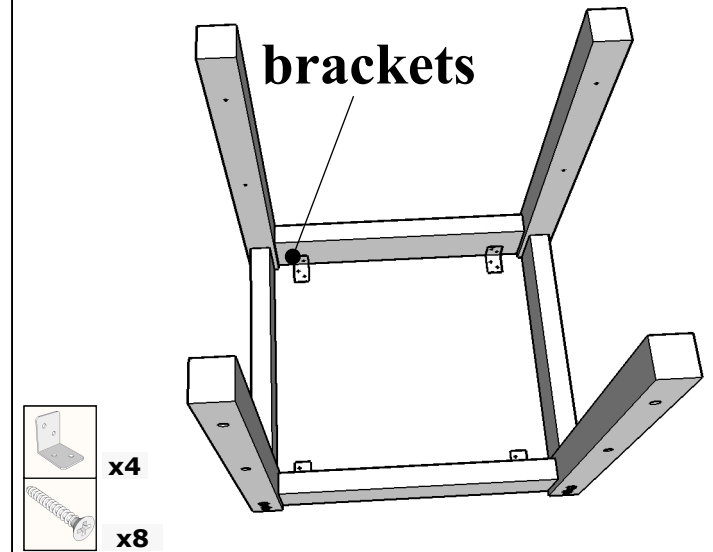


3. Use 3,5x25 screws to mount brackets to frame

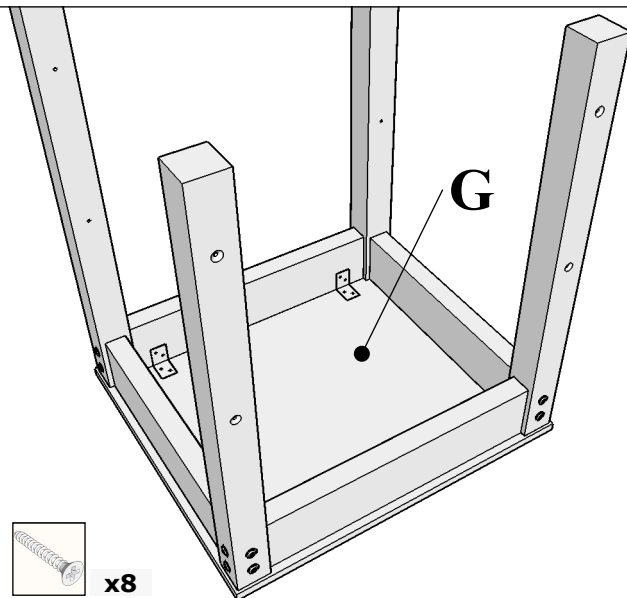



4. Use 3,5x12 screws to mount brackets to worktop

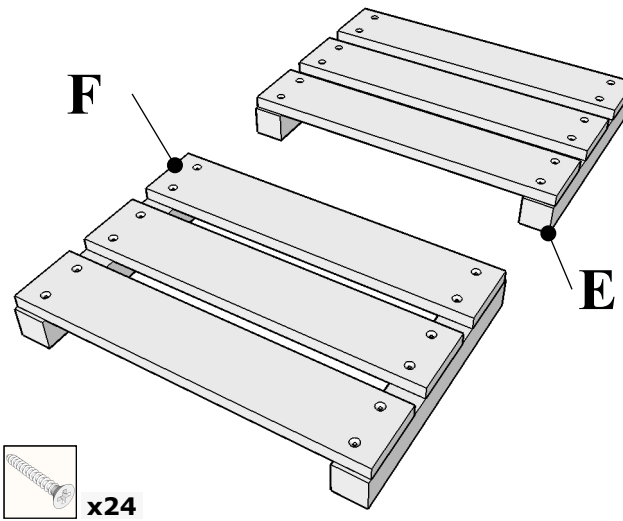

5. Use 4,0x40 screws

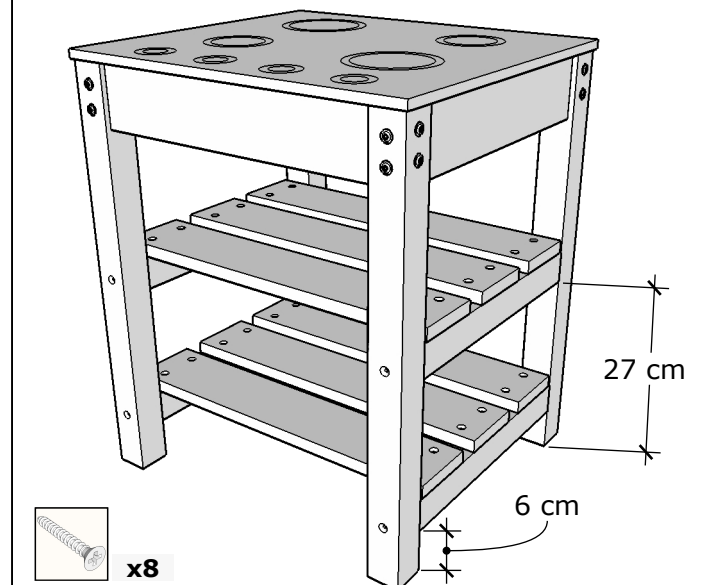


6. Use 5,0x100 screws

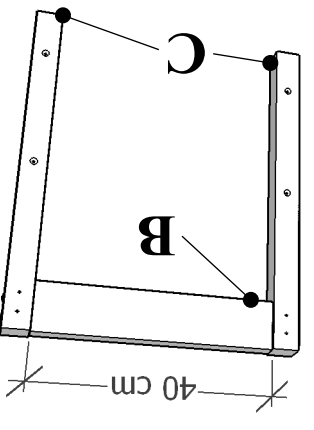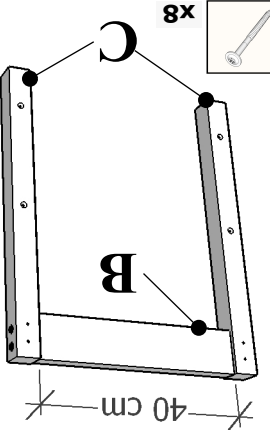


1. Use 6,0x90 screws

x8

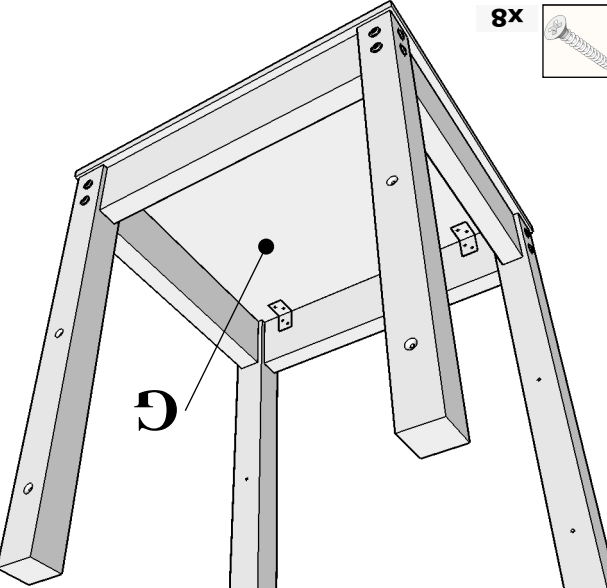


4. Use 3,5x12 screws to mount brackets to worktop

x8

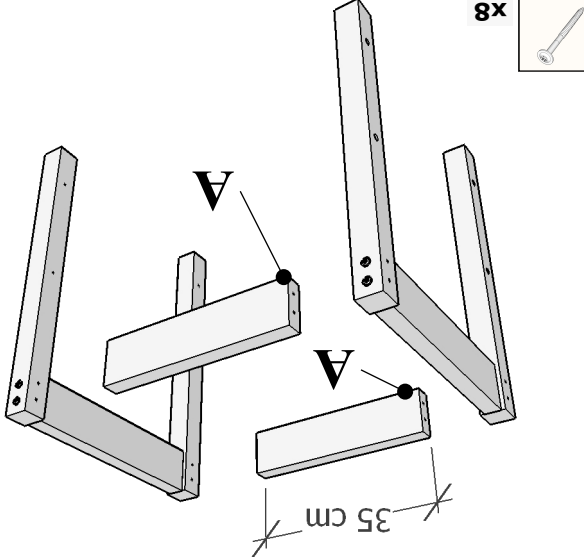


2. Use 6,0x90 screws

x8

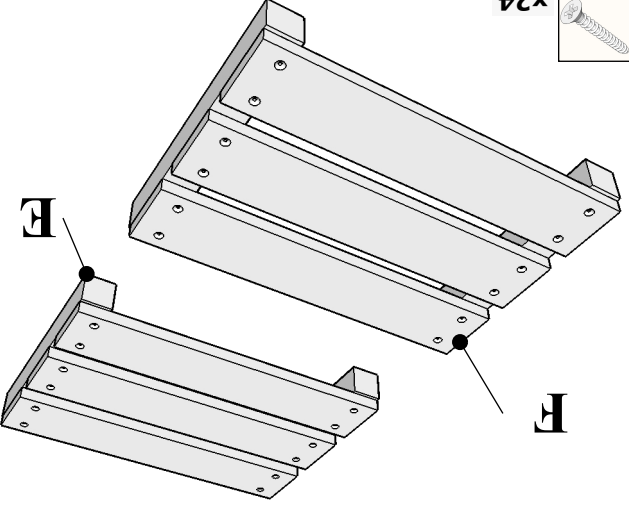

5. Use 4,0x40 screws

x24

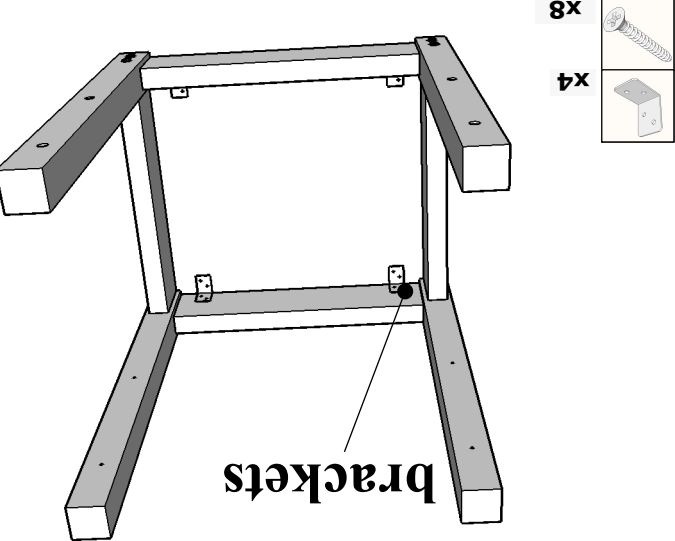


3. Use 3,5x25 screws to mount brackets to frame

x8

x4

brackets

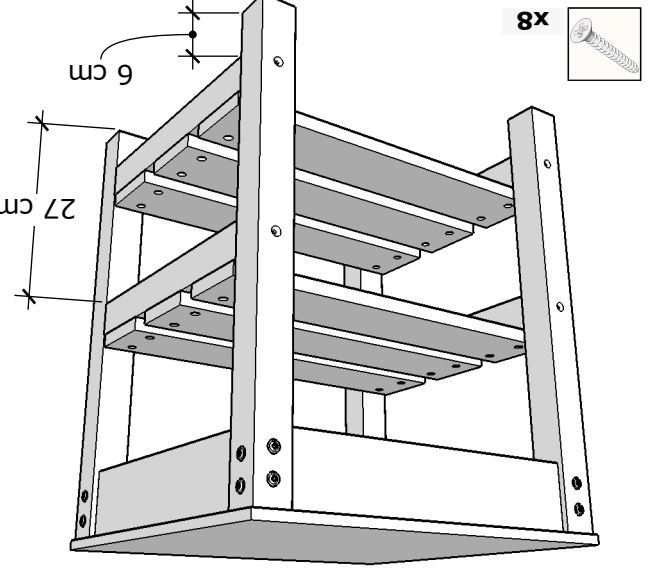

6. Use 5,0x100 screws. Repeat 1-6 steps

x8

27 cm

6 cm