




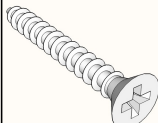
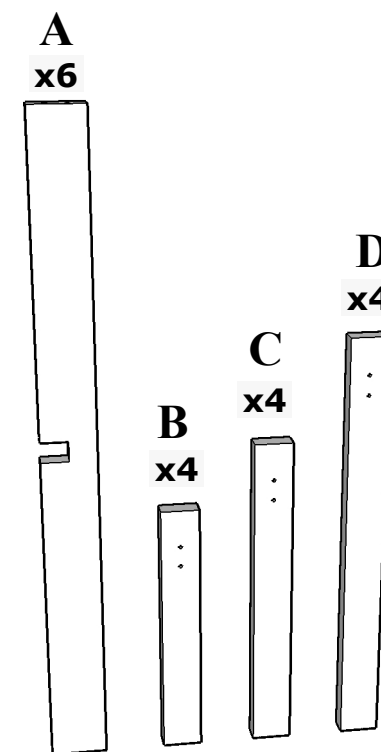
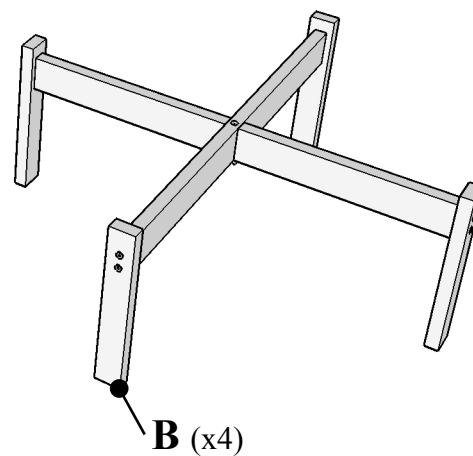


PARTS AND FITTINGS LIST


x3	x3	x3	x1	x1	x24	x12	x24
							
Washer M6	Bolt M6x100	Wing nut M6	Screwdriver bit HEX 4mm	Allen key 4mm	Wood screw 6,5x70	Plastic glide	Wood screw 3,5x20

*spare pieces possible

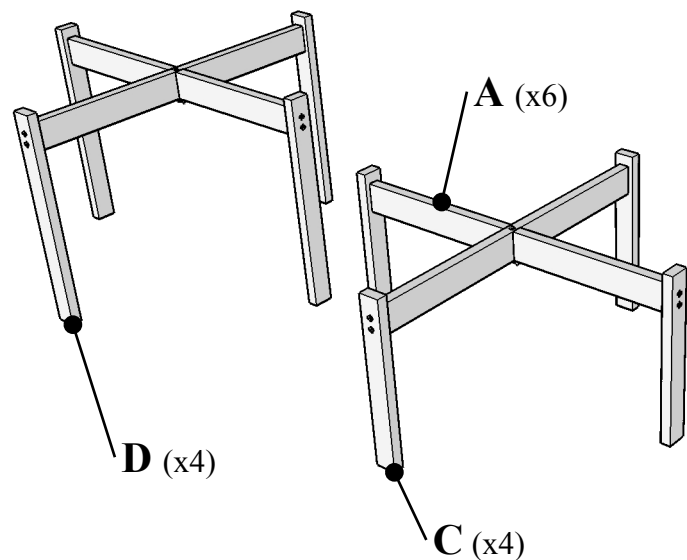


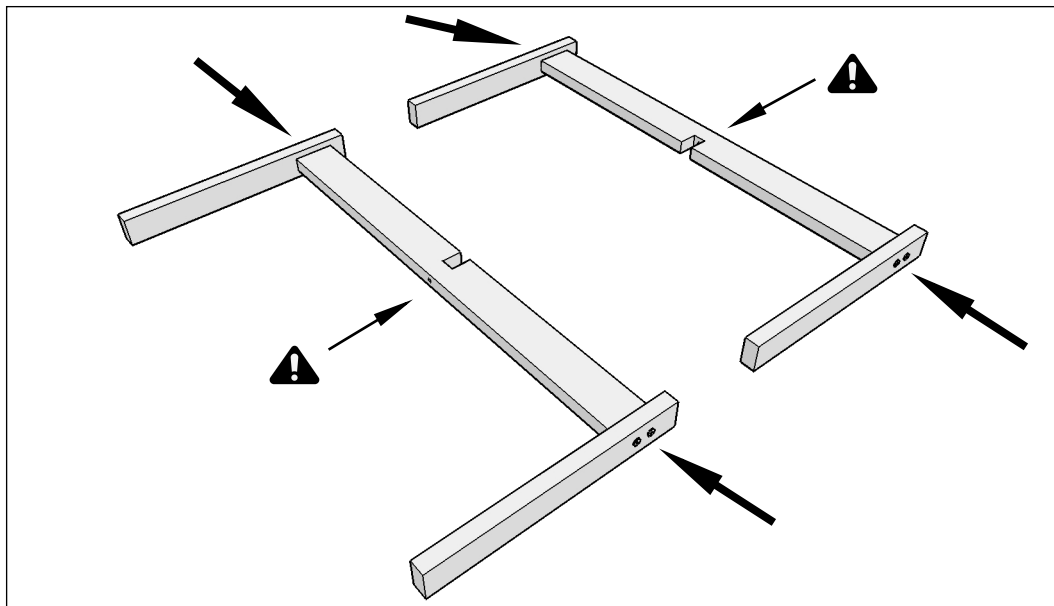


1. Use 6,5x70 wood screws (8 pcs)

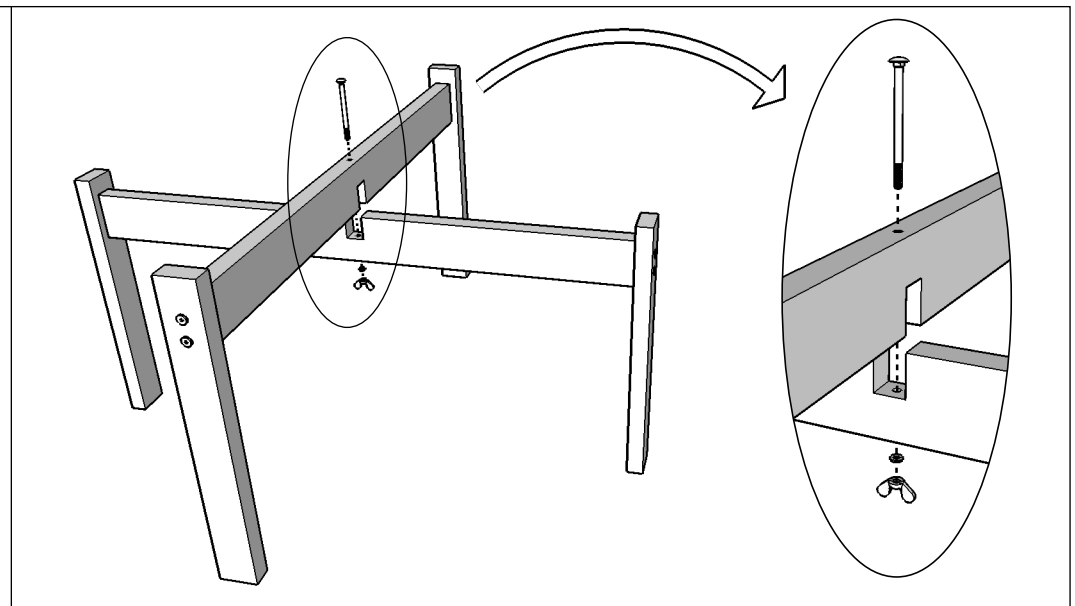

2. Use bolt, washer and wing nut

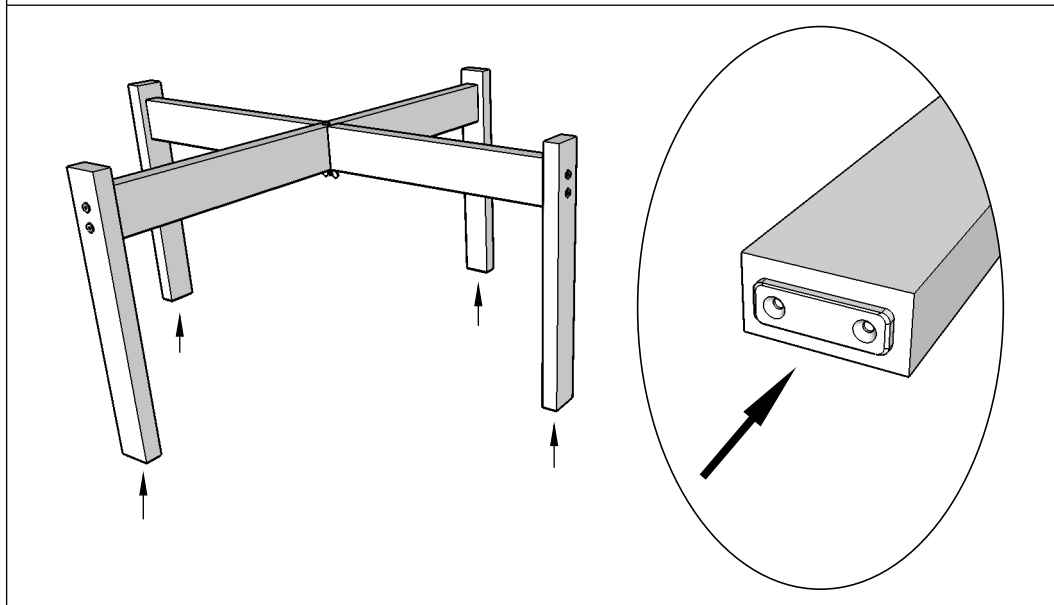

3. Use 3,5x20 screws to fix plastic glides

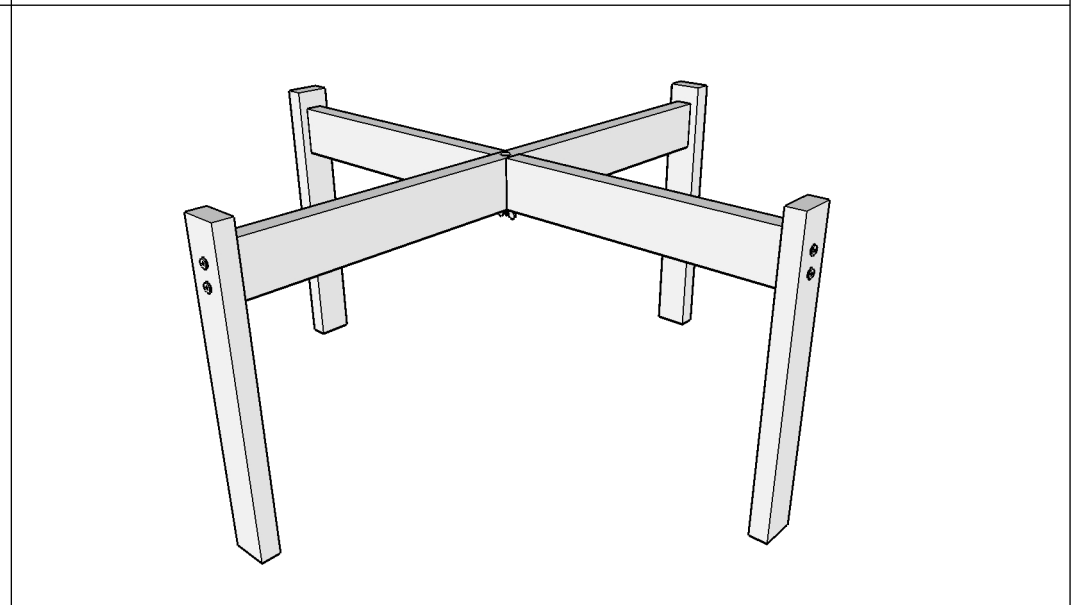

4. Done