




## **CURRICULUM CUBBY**

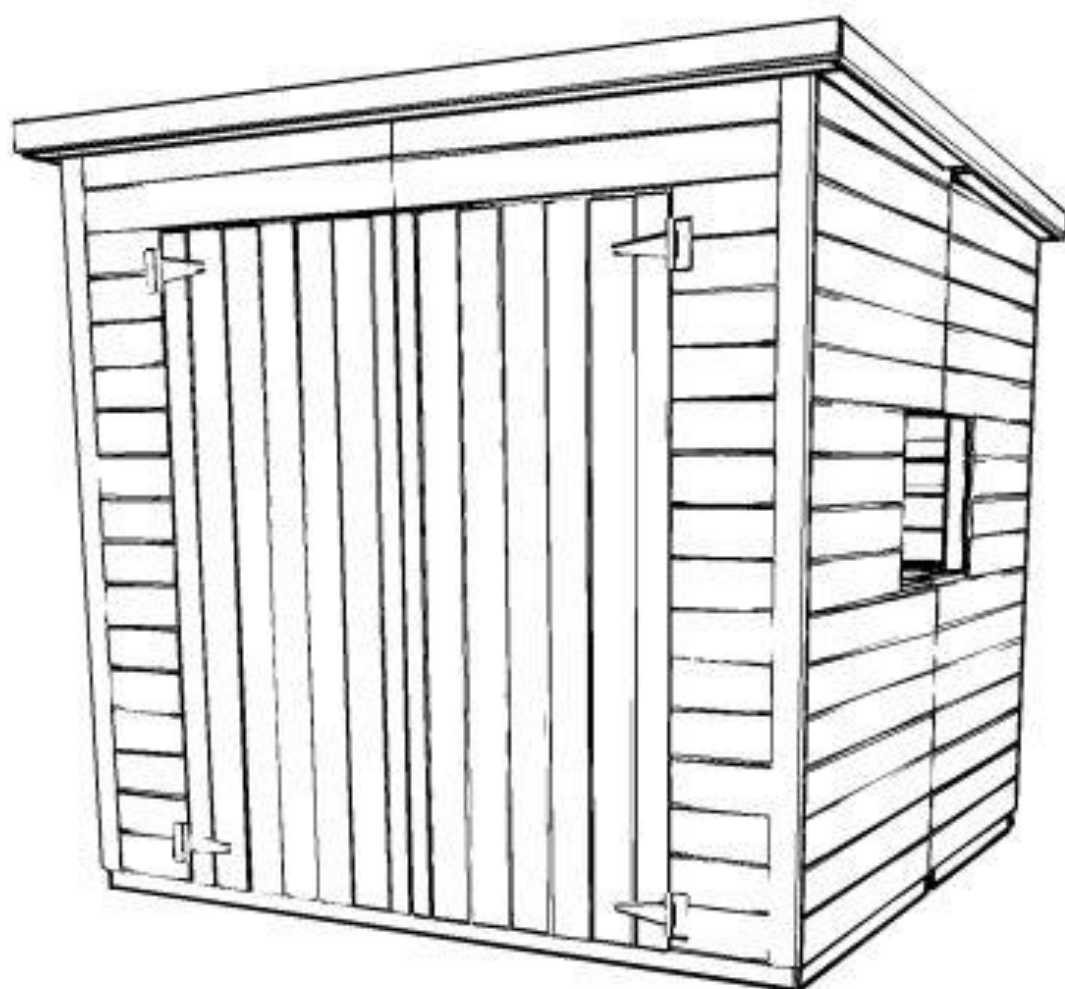

# Thank you for your purchase



| TOOLS REQUIRED                                                                    |                                                                                   |                                                                                    |                                                                                     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Electric screwdriver                                                              | Tape measure                                                                      | TX15 TX25<br>PH2                                                                   | Drill bit 3mm                                                                       |
|  |  |  |  |

| PACK 1                                                                                                                                                                                                                                                                     |                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Roof panel A<br>Roof panel B<br>Base panel A<br>Base panel B<br>Left front panel and doors<br>Right front panel and doors                                                                                                                                                  |   |
| PACK 2                                                                                                                                                                                                                                                                     |                                                                                      |
| 4 x wall trim<br>4 x roof trim<br>10 x back wall shelving<br>2 x workstation planks<br>2 x parts for workstation<br>3 x brackets for workstation<br>Roof felt<br>Door dowels x4<br>2 x left side wall<br>2 x right side wall<br>2 x back wall<br>Bag of screws and fixings |  |

# Assembly Instructions



## IMPORTANT

Please remove any unpainted strips.



## BASE

Join both base panels.



*\*Product displayed in this picture may differ from the actual product.*


*\*Use 40mm screws for this application.*

## BACK WALL

1. Add parts needed for the workstation using 60mm



*\*Use 50mm screws for this application.*

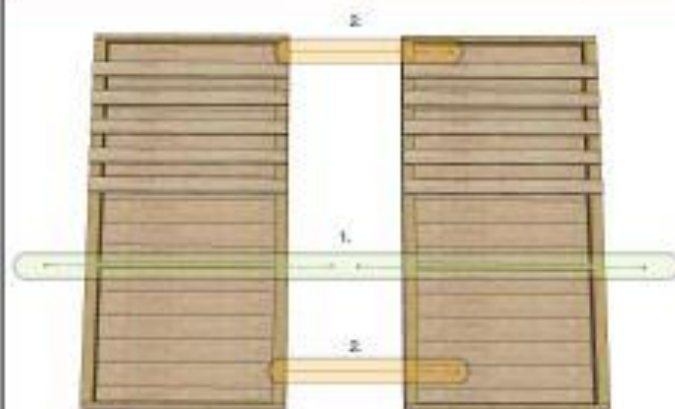

2. Use 80mm screws to join both panels together.

## SIDE WALLS



*\*Use 50mm screws for trim and 80mm screws for joining both panels.*



*\*Repeat the same for the other side.*



## ADD BACK AND SIDE WALLS TO THE BASE




*\*Use 60mm screws to secure wall panels to the base. Do the same for the other side wall.*




*\*Use 80mm screws to join side walls to the back wall.*

## WORKSTATION

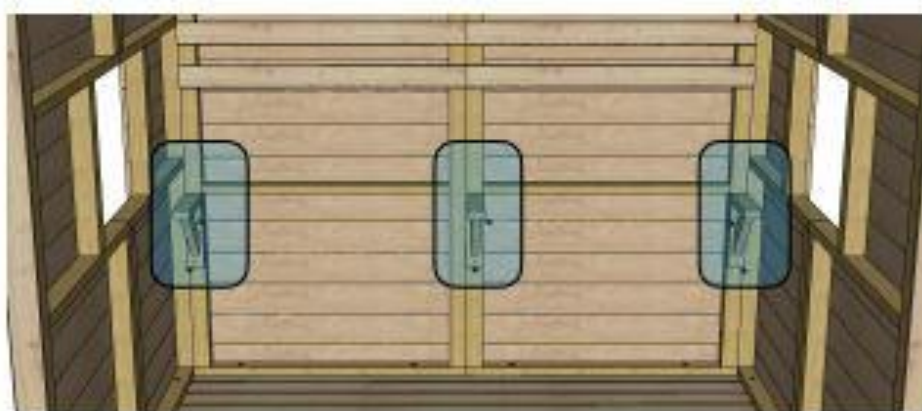

*\*Use two 50mm screws for each bracket.*

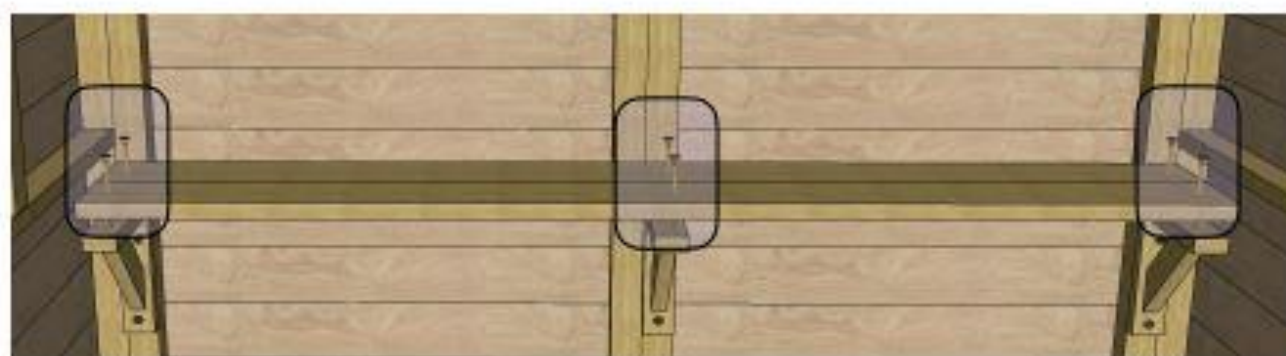

*\*Use 40mm screws for this application.*

## FRONT PANELS




*\*Use 60mm screws to secure front panels to the base.*

*\*Use 80mm screws to join both front panels together and attach them to side panels*

## DOORS

*\*Make sure to leave 20mm gap between the top of the door frame and aisle, and 5mm gap between doors and front panels.*

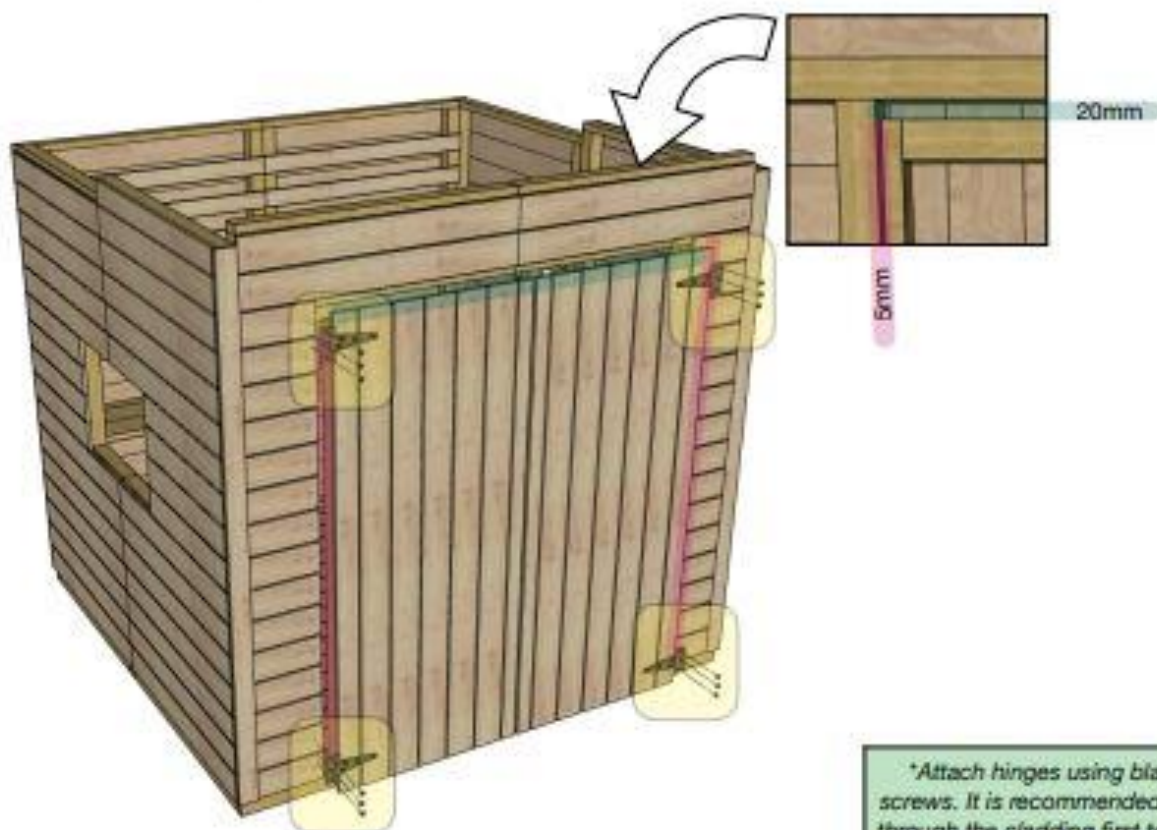

*\*Attach hinges using black drywall screws. It is recommended to drill holes through the cladding first to avoid wood splitting.*

## ROOF



*\*Join roof panels using tongue & groove and 40mm screws.*



*\*Use 50mm screws for this application*



*Add trim using 50 mm screws.*



**EN** Adult assembly required!

**DE** Montage durch Erwachsene erforderlich!

**FR** Assemblage par un adulte requis !

**IT** È richiesto il montaggio da parte di un adulto!

**ES** ¡Se requiere montaje por parte de un adulto!

**NL** Montage voor volwassenen vereist!

**SE** Vuxenmontering krävs!

**PL** Wymagany montaż dla osoby dorosłej!

**EL** Απαιτείται συναρμολόγηση ενηλίκων!

**CS** Je vyžadována montáž dospělých!

**PT** Montagem de adulto necessária!

**DA** Voksen montering påkrævet!

**FI** Aikuisten kokoonpano vaaditaan!

**NO** Montering av voksne kreves!

**HR** Potrebna montaža za odrasle!

**TR** Yetişkin montajı gereklî!

**EE** Vajalik on täiskasvanute kokkupanek!

**HU** Felnőtt összeszerelés szükséges!

**LV** Nepieciešama pieaugušo montāža!

**LT** Reikalingas suaugusiųjų susirinkimas!

**SK** Vyžaduje sa montáž pre dospelých!

**SL** Potrebna je montaža za odrasle!



**Care instructions**