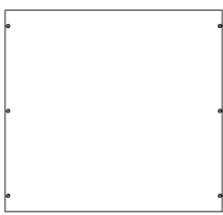
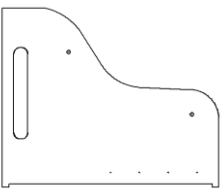




INSTRUCTIONS

Product Name: **Sensory Integration Therapy Body Roller Standard**
Size: **75 x 75 x 75cm (Approximate)**

Product Code: **SI211**

Contents:

1 X Base Board 	2 X Side Boards 	1 X Back Arch 
2 X Roller Frame 	1 x Large Roller 	1 x Small Roller 
Spare parts (screws, washers and nuts)		

Tools required:

Power Drill
Adjustable Spanner (or various size spanner)

WARNING!

This item is to be installed by a competent, experienced installer only.

Children **MUST ALWAYS** be supervised when using this product.

Safety Warnings:

- Before setting up, ensure the product is not damaged. If any part of the product is damaged, do not attempt to assemble and use.
- To prevent serious injuries, do not allow children to play on the system until it is completely setup and assembled.
- Adult supervision of children is always required when on or around this system. Never leave children unattended.
- The intended recommended age for use of this system is 3 years plus, under adult supervision.
- Be sure to observe your children and ensure that they have the strength and skills to enjoy all the features safely, before use on their own.
- Warn children not to use the equipment in any manner other than intended.
- Regular checks should be carried out to ensure no loose connection, correctly setup and the system is not damaged.
- Check all nuts and bolts regularly for tightness and tighten as required.


5-6 Agecroft Trading Estate, Langley Road, Salford Manchester M6 6JD

Tel: +44 161 737 5099 Website: www.play-learn.co.uk

Help & Support: CustomerService@play-learn.co.uk


Instructions

1. Put a washer on either side of the large roller. Then insert in the pre-drill hole into the side boards. From the outside insert one washer and secure the roller with a nut on either side of the board.

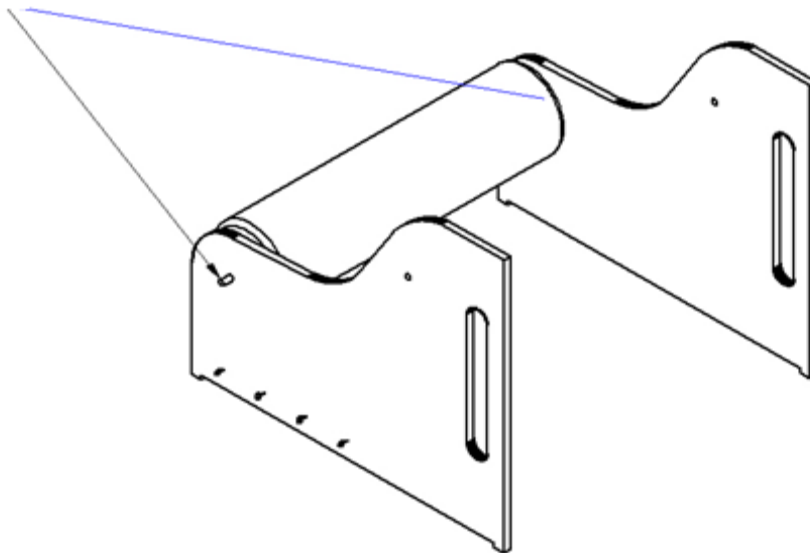


all the necessary elements for torsion are on the roll


2. Correctly align the base board and secure with screws.

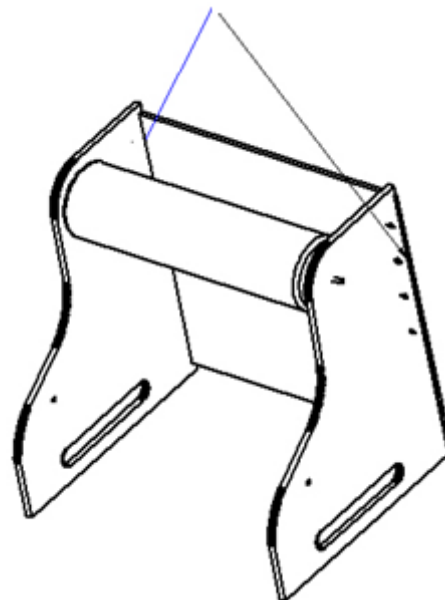


3. Align the back arch to the pre-drilled holes and insert screws on either side to secure it.

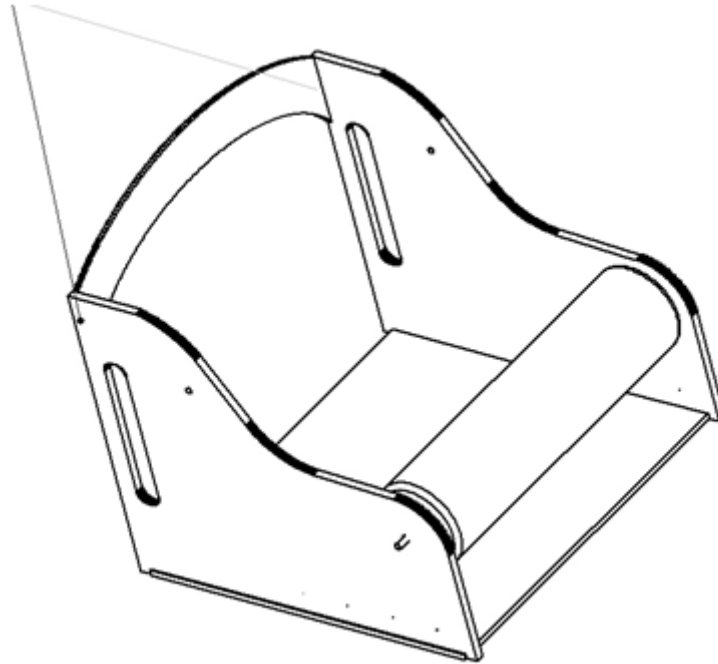


4. Using bolts, washers and nuts secure the 2 roller frame on either side of the side boards. The holes will be pre-drilled to make it easy to align.

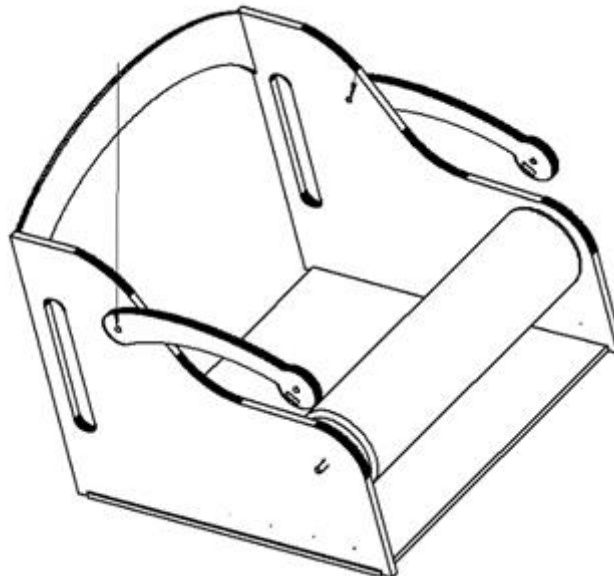

5. Insert the smaller roller to the roller frame. Use washers and nuts to secure.

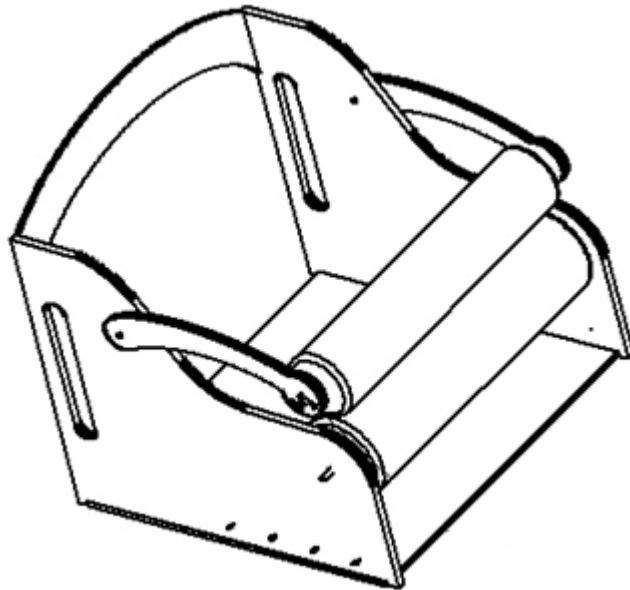

- 6.

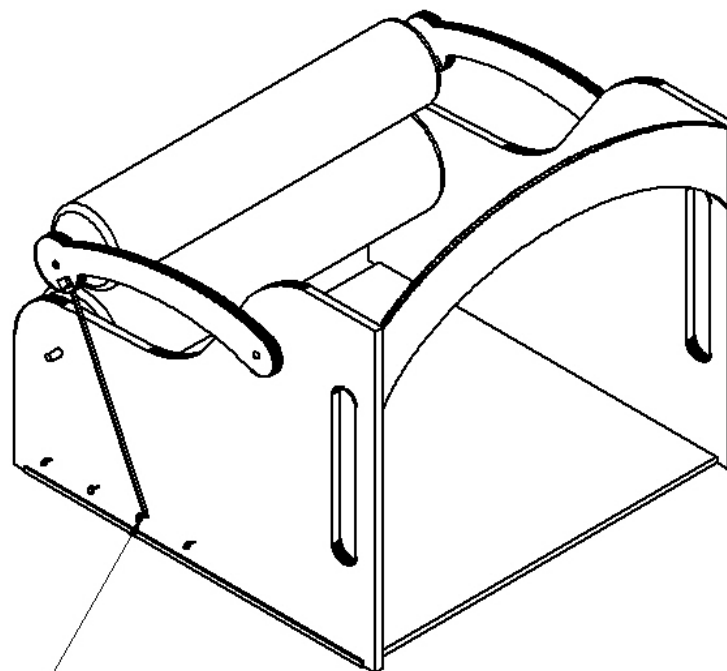

adjust the tension of the roller by hooking the rubber on the appropriate eyelet

Before allowing any person to use the system, please carry out thorough assessment and ensure all parts are correctly connected, no loose or unsteady parts are found.

Please retain this information for future reference
Made in Poland

5-6 Agecroft Trading Estate, Langley Road, Salford Manchester M6 6JD

Tel: +44 161 737 5099 Website: www.play-learn.co.uk

Help & Support: CustomerService@play-learn.co.uk